PARTS LIST

Index No.	Part Number	Description
1	DV1022	SHROUD TOP
2	DV1010	SHROUD SIDE RIGHT
3	R2521	AIR FILTER
4	DV1027	FILTER RETAINER
5	DV1047	WALL MOUNTING BRACKET
6	DV1048	WALL BRACKET - 2 REQUIRED
7	R2586	CONTROL DOOR PIN - 2 REQUIRED
8	DV1025	CONTROL DOOR
9	DV1028	CASING TOP
10	DV1046	BLOWER HOUSING - 2 REQUIRED
11	R2584	BLOWER WHEEL -2 REQUIRED
12	R2573	BLOWER MOTOR
13	R2598	MOTOR BASE WASHER - 4 REQUIRED
14	R1279	LIMIT SWITCH
15	DV1023	INNER TOP
16	R2546	CONTROL KNOB
17	R2522	ON/OFF SWITCH
18	DV1029	JUNCTION BOX
19	DV1030	JUNCTION BOX COVER
20	R1995	TRANSFORMER
21	R6989	PRESSURE SWITCH
22	R2576	CONTROL BOARD
23	R2577A	TEMPERATURE CONTROL BOARD
24	DV1031	CASING WELDED ASSEMBLY
25	R1468	STRAIN RELIEF BUSHING
26	R2099	CORD SET
27	DV1099	INNER END
28	DV1098	CASING SIDE - 2 REQUIRED
29	DV1161	COLLECTOR BOX(DV20E-1 ONLY)
29	DV1162	COLLECTOR BOX (DV40E-1 ONLY)
30	R2519	INDUCER WHEEL
31	DV1169	INDUCER BLOWER HOUSING
32	R2523	INDUCER MOTOR
33	DV1035	EXCHANGER ASSEMBLY (DV20E-1 ONLY)
33	DV1036	EXCHANGER ASSEMBLY (DV40E-1 ONLY)

PARTS LIST

Index No.	Part Number	Description
34	DV1037	IGNITOR BRACKET
35	R2548	IGNITOR GROMMET
36	R2542	IGNITOR
37	R2543	FLAME SENSOR
38	R2541	BURNER 1 REQUIRED ON DV20E-1
38	R2541	BURNER 2 REQUIRED ON DV40E-1
39	R2575	FLAME ROLLOUT SWITCH
40	DV1038	BURNER COMPARTMENT ACCESS PANEL
41	DV1039	BURNER COMPARTMENT
42	R3237	GAS VALVE (NAT)
42	R3238	GAS VALVE (LP)
43	DV1160	VALVE BRACKET ASSEMBLY
44	DV1016	MANIFOLD ASSEMBLY (DV20E-1 ONLY)
44	DV1013	MANIFOLD ASSEMBLY (DV40E-1 ONLY)
45	P8844	ORIFICE (NAT GAS) - 1 REQUIRED ON DV20E-1
45	P8855	ORIFICE (LPG GAS) - 1 REQUIRED ON DV20E-1
45	P8844	ORIFICE (NAT GAS) - 2 REQUIRED ON DV40E-1
45	P8855	ORIFICE (LPG GAS) - 2 REQUIRED ON DV40E-1
46	M148	MANIFOLD GASKET
47	DV781	OBSERVATION HOLE COVER ASSEMBLY
48	M155	OBSERVATION HOLE COVER GASKET
49	DV1040	FRONT SHIELDASSEMBLY
50	DV1024	BOTTOM SHIELD
51	DV1009	FRONT GRILL ASSEMBLY
52	DV1043	CASING FRONT ASSEMBLY
53	R2539	HOSE CLAMP - 2 REQUIRED
54	R2536	INLET HOSE
55	R2790	OUTLET CONNECTOR PIPE
56	DV1044	VENT ASSEMBLY
57	R2587	WALL PLATE GASKET
58	DV1045	WALL PLATE
59	R2529	OUTLET TAIL PIPE
60	DV1011	SHROUD SIDE LEFT
NS	DV1108	CONDENSATE
NS	DV1132	ELBOW KIT

DV-20E-1
DV-40E-1

Click Part # To View
Price & Availability

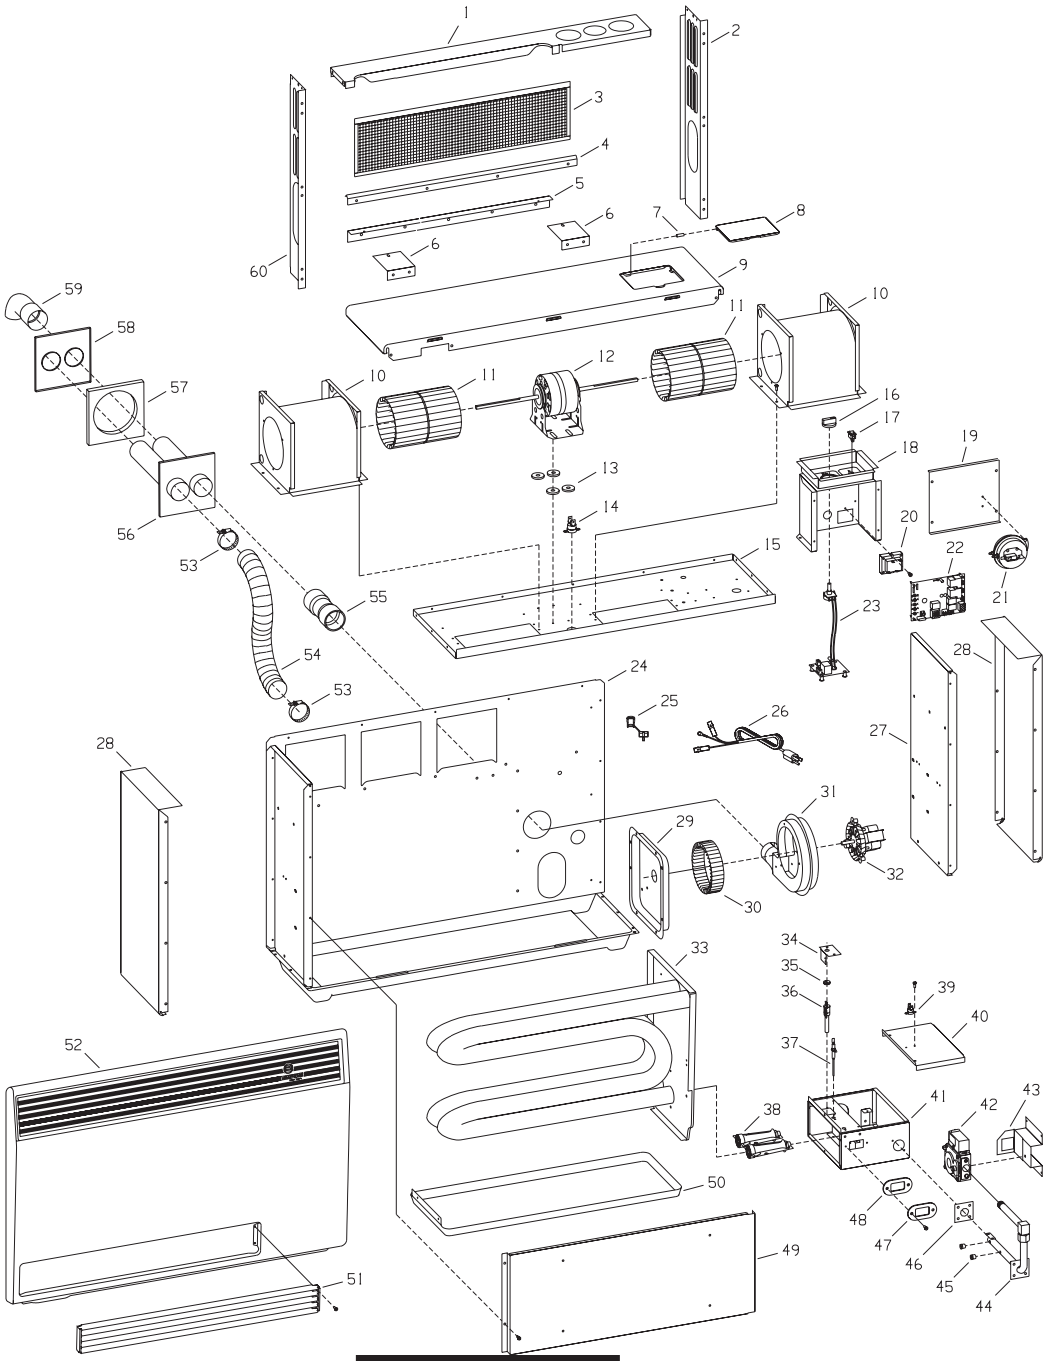

DV-20E-1
DV-40E-1

PARTS LIST

Index No.	Part Number	Description
1	DV1022	SHROUD TOP
2	DV1010	SHROUD SIDE RIGHT
3	R2521	AIR FILTER
4	DV1027	FILTER RETAINER
5	DV1047	WALL MOUNTING BRACKET
6	DV1048	WALL BRACKET - 2 REQUIRED
7	R2586	CONTROL DOOR PIN - 2 REQUIRED
8	DV1025	CONTROL DOOR
9	DV1028	CASING TOP
10	DV1046	BLOWER HOUSING - 2 REQUIRED
11	R2584	BLOWER WHEEL - 2 REQUIRED
12	R2573	BLOWER MOTOR
13	R2598	MOTOR BASE WASHER - 4 REQUIRED
14	R1279	LIMIT SWITCH
15	DV1023	INNER TOP
16	R2546	CONTROL KNOB
17	R2522	ON/OFF SWITCH
18	DV1029	JUNCTION BOX
19	DV1030	JUNCTION BOX COVER
20	R1995	TRANSFORMER
21	R6989	PRESSURE SWITCH
22	R2576	CONTROL BOARD
23	R2577A	TEMPERATURE CONTROL BOARD
24	DV1031	CASING WELDED ASSEMBLY
25	R1468	STRAIN RELIEF BUSHING
26	R2099	CORD SET
27	DV1099	INNER END
28	DV1098	CASING SIDE - 2 REQUIRED
29	DV1161	COLLECTOR BOX (DV20E-3 ONLY)
29	DV1162	COLLECTOR BOX (DV40E-3 ONLY)
30	R2519	INDUCER WHEEL
31	DV1169	INDUCER BLOWER HOUSING
32	R2523	INDUCER MOTOR
33	DV1035	EXCHANGER ASSEMBLY (DV20E-3 ONLY)
33	DV1036	EXCHANGER ASSEMBLY (DV40E-3 ONLY)
34	DV1037	IGNITOR BRACKET

PARTS LIST

Index No.	Part Number	Description
35	R2548	IGNITOR GROMMET
36	R2542	IGNITOR
37	R2543	FLAME SENSOR
38	R2541	BURNER (2 REQUIRED ON DV40E-3)
39	R2575	FLAME ROLLOUT SWITCH
40	DV1038	BURNER COMPARTMENT ACCESS PANEL
41	DV1039	BURNER COMPARTMENT
42	R3237	GAS VALVE (NAT GAS)
42	R3238	GAS VALVE (LPG GAS)
43	DV1160	VALVE BRACKET ASSEMBLY
44	DV1016	MANIFOLD ASSEMBLY (DV20E-3 ONLY)
44	DV1013	MANIFOLD ASSEMBLY (DV40E-3 ONLY)
45	P8844	ORIFICE (NAT GAS) - 1 REQUIRED ON DV20E-3
45	P8855	ORIFICE (LPG GAS) - 1 REQUIRED ON DV20E-3
45	P8844	ORIFICE (NAT GAS) - 2 REQUIRED ON DV40E-3
45	P8855	ORIFICE (LPG GAS) - 2 REQUIRED ON DV40E-3
46	M148	MANIFOLD GASKET
47	DV781	OBSERVATION HOLE COVER ASSEMBLY
48	M155	OBSERVATION HOLE COVER GASKET
49	DV1040	FRONT SHIELD ASSEMBLY
50	DV1024	BOTTOM SHIELD
51	DV1009	FRONT GRILL ASSEMBLY
52	DV1043	CASING FRONT ASSEMBLY
53	R2539	HOSE CLAMP - 4 REQUIRED
54	R3113	INLET HOSE
55	R3111	OUTLET ELBOW
56	DV1192	VENT PAN ASSEMBLY
57	R3114	INLET CAP
58	R3115	WALL PLATE GASKET - INSIDE
59	R2587	WALL PLATE GASKET - OUTSIDE
60	DV1195	WALL PLATE - OUTSIDE
61	DV1193	TUBE SPACER
62	DV1194	END CAP ASSEMBLY
63	DV1011	SHROUD SIDE LEFT
NS	DV1108	CONDENSATE KIT
NS	DV1132	ELBOW KIT

DV-20E-3
DV-40E-3

Click Part # To View
Price & Availability

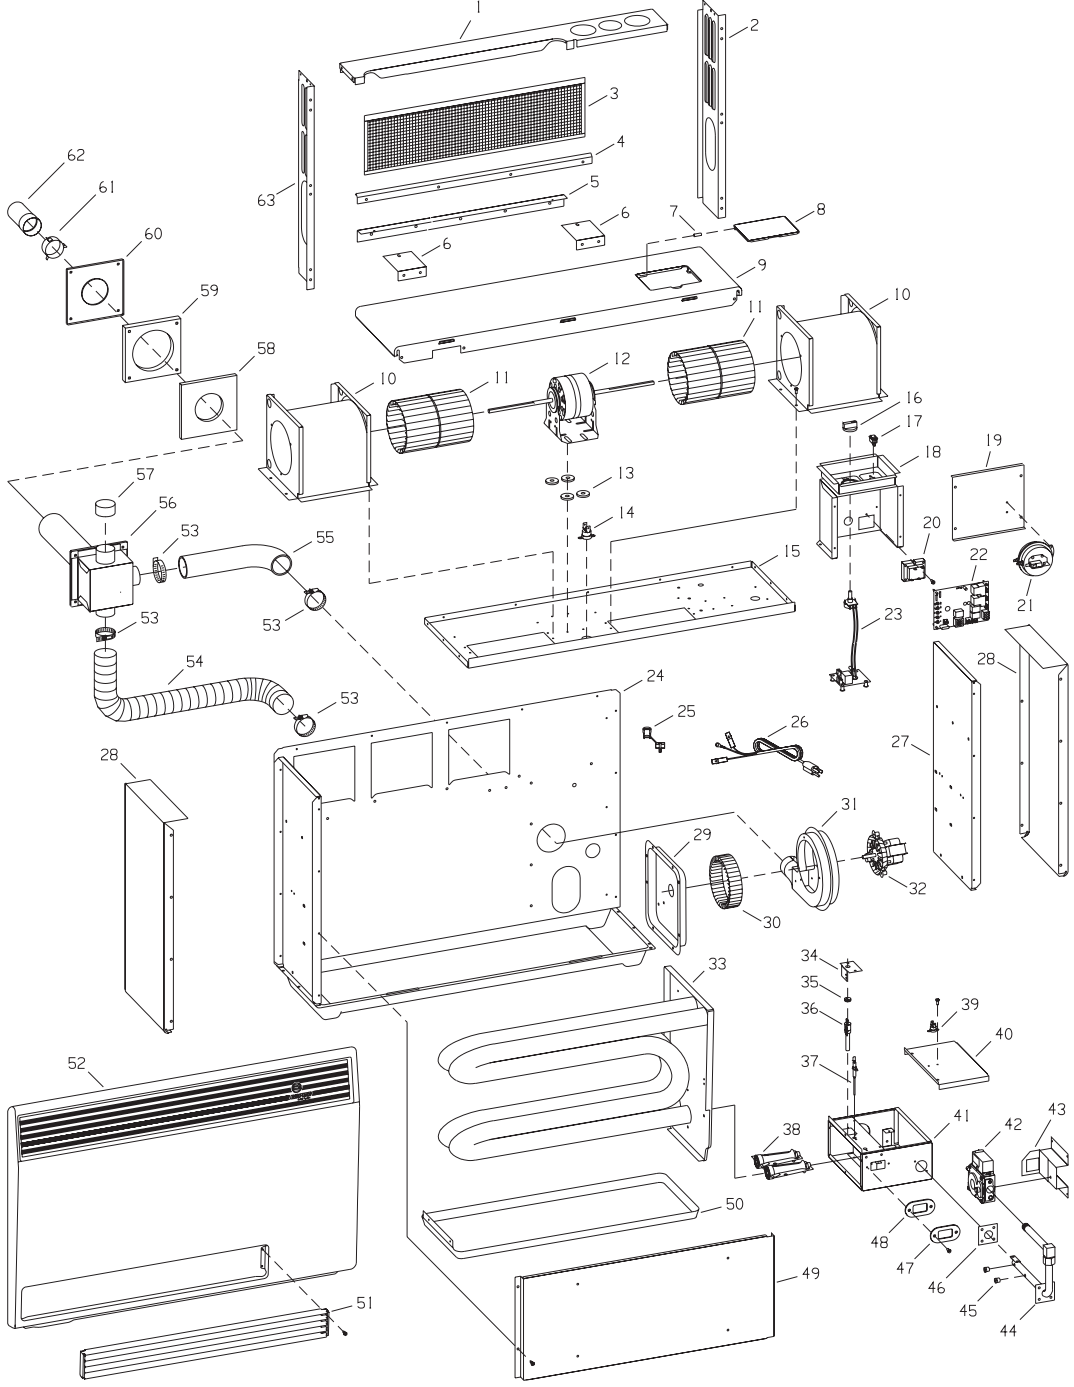

DV-20E-3
DV-40E-3

PARTS LIST

Index No.	Part Number	Description
1	DV1378	SHROUD TOP
2	DV1376	SHROUD SIDE RIGHT
3	R2521	AIR FILTER
4	DV1375	FILTER RETAINER
5	DV1379	WALL MOUNTING BRACKET
6	DV1048	WALL BRACKET - 2 REQUIRED
7	R2586	CONTROL DOOR PIN - 2 REQUIRED
8	DV1381	CONTROL DOOR ASSEMBLY
9	DV1373	CASING TOP
10	DV1368	BLOWER HOUSING - 2 REQUIRED
11	R2584	BLOWER WHEEL - 2 REQUIRED
12	R2573	BLOWER MOTOR
13	R2598	MOTOR BASE WASHER - 4 REQUIRED
14	R1279	LIMIT SWITCH
15	DV1367	INNER TOP
16	R2546	CONTROL KNOB
17	R2522	ON/OFF SWITCH
18	DV1029	JUNCTION BOX
19	DV1370	JUNCTION BOX COVER
20	R1995	TRANSFORMER
21	R6989	PRESSURE SWITCH
22	R2576	CONTROL BOARD
23	R2577A	TEMPERATURE CONTROL BOARD
24	DV1365	CASING WELDED ASSEMBLY
25	R1468	STRAIN RELIEF BUSHING
26	R2099	CORD SET
27	DV1371	INNER END
28	DV1372	CASING SIDE - 2 REQUIRED
29	15790	COLLECTOR BOX (DV20E-4 ONLY)
29	15791	COLLECTOR BOX (DV40E-4 ONLY)
30	R2519	INDUCER WHEEL
31	DV1169	INDUCER BLOWER HOUSING
32	R2523	INDUCER MOTOR
33	15783	EXCHANGER ASSEMBLY (DV20E-4 ONLY)
33	15784	EXCHANGER ASSEMBLY (DV40E-4 ONLY)
34	DV1037	IGNITOR BRACKET
35	R2548	IGNITOR GROMMET

PARTS LIST

Index No.	Part Number	Description
36	R2542	IGNITOR
37	R2543	FLAME SENSOR
38	R2541	BURNER (2 REQUIRED ON DV40E-4)
39	R2575	FLAME ROLLOUT SWITCH
40	DV1038	BURNER COMPARTMENT ACCESS PANEL
41	DV1039	BURNER COMPARTMENT
42	R3237	GAS VALVE (NAT GAS)
42	R3238	GAS VALVE (LP GAS)
43	DV1366	VALVE BRACKET ASSEMBLY
44	DV1016	MANIFOLD ASSEMBLY (DV20E-4 ONLY)
44	DV1013	MANIFOLD ASSEMBLY (DV40E-4 ONLY)
45	P8844	ORIFICE (NAT GAS) - 1 REQUIRED ON DV20E-4
45	P8855	ORIFICE (LPG GAS) - 1 REQUIRED ON DV20E-4
45	P8844	ORIFICE (NAT GAS) - 2 REQUIRED ON DV40E-4
45	P8855	ORIFICE (LPG GAS) - 2 REQUIRED ON DV40E-4
46	M148	MANIFOLD GASKET
47	DV781	OBSERVATION HOLE COVER ASSEMBLY
48	M155	OBSERVATION HOLE COVER GASKET
49	DV1040	FRONT SHIELD ASSEMBLY
50	DV1024	BOTTOM SHIELD
51	DV1363	FRONT GRILL ASSEMBLY
52	DV1380	CASING FRONT ASSEMBLY
53	R2539	HOSE CLAMP - 4 REQUIRED
54	R3113	INLET HOSE
55	R3111	OUTLET ELBOW
56	DV1192	VENT PAN ASSEMBLY
57	R3114	INLET CAP
58	R3115	WALL PLATE GASKET - INSIDE
59	R2587	WALL PLATE GASKET - OUTSIDE
60	DV1195	WALL PLATE - OUTSIDE
61	DV1193	TUBE SPACER
62	DV1194	END CAP ASSEMBLY
63	DV1377	SHROUD SIDE LEFT
NS	DV1361	BAFFLE - 1 REQUIRED ON DV20E-4
NS	DV1108	Condensate Kit
NS	DV1132	Elbow Kit

DV-20E-4
DV-40E-4

Click Part # To View Price & Availability

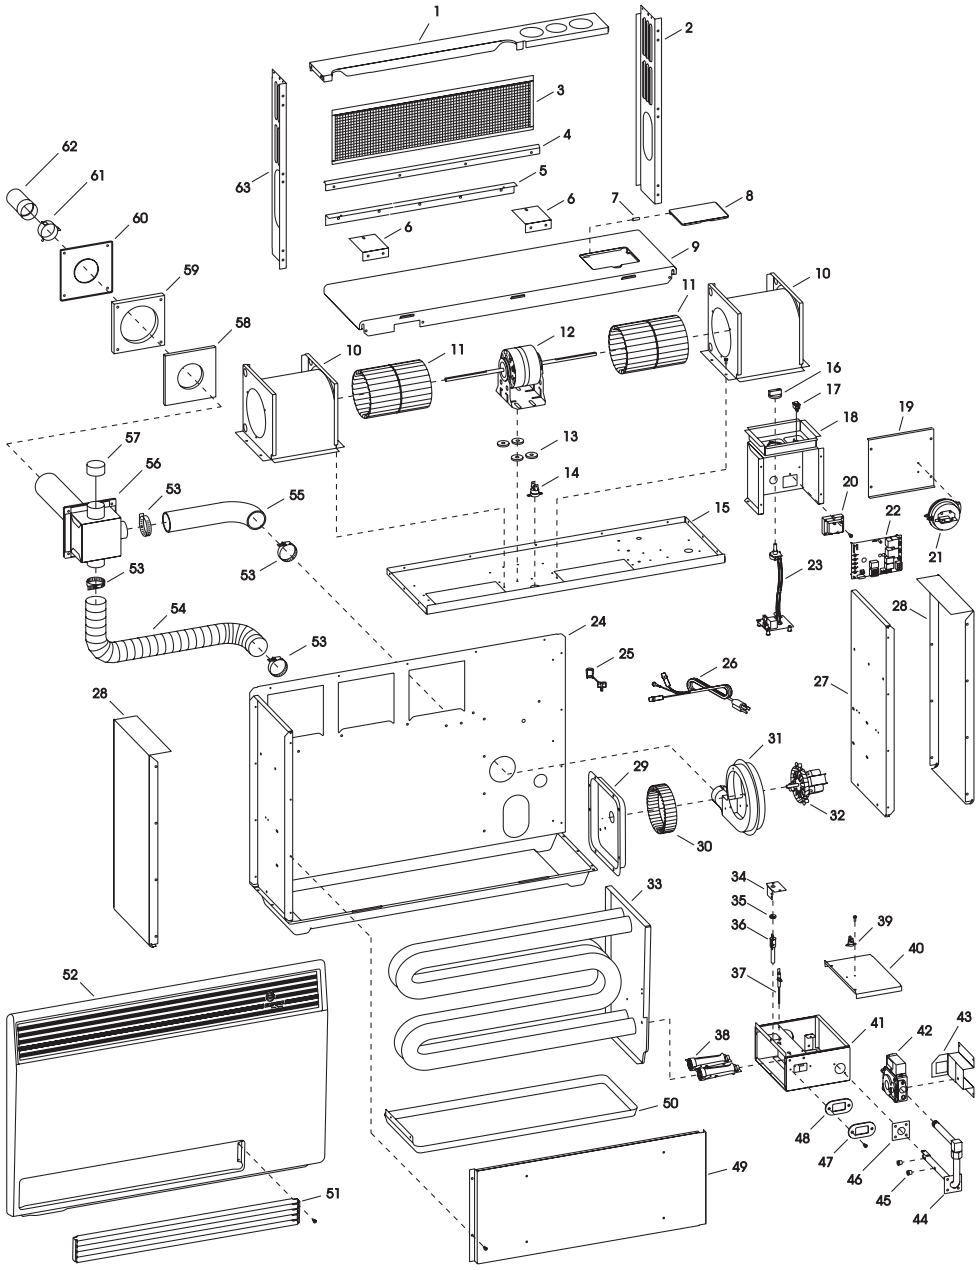

DV-20E-4
DV-40E-4

PARTS LIST

Index No.	Part Number	Description
1	DV1022	SHROUD TOP
2	DV1010	SHROUD SIDE RIGHT
3	R2521	AIR FILTER
4	DV1027	FILTER RETAINER
5	DV1047	WALL MOUNTING BRACKET
6	DV1048	WALL BRACKET - 2 REQUIRED
7	R2586	CONTROL DOOR PIN - 2 REQUIRED
8	DV1025	CONTROL DOOR
9	DV1028	CASING TOP
10	R2661	BLOWER HOUSING - 2 REQUIRED
11	R2663	BLOWER WHEEL - 2 REQUIRED
12	R2662	BLOWER MOTOR
13	R2598	MOTOR BASE WASHER - 4 REQUIRED
14	R1279	LIMIT SWITCH
15	DV1023	INNER TOP
16	R2546	CONTROL KNOB
17	R2522	ON/OFF SWITCH
18	DV1029	JUNCTION BOX
19	DV1030	JUNCTION BOX COVER
20	R1995	TRANSFORMER
21	R6988	PRESSURE SWITCH
22	R2576	CONTROL BOARD
23	R2577A	TEMPERATURE CONTROL BOARD
24	DV1031	CASING WELDED ASSEMBLY
25	R1468	STRAIN RELIEF BUSHING
26	R2099	CORD SET
27	DV1099	INNER END
28	DV1098	CASING SIDE - 2 REQUIRED
29	DV1163	COLLECTOR BOX
30	R2519	INDUCER WHEEL
31	DV 1169	INDUCER BLOWER HOUSING

PARTS LIST

Index No.	Part Number	Description
32	R2523	INDUCER MOTOR
33	DV1139	EXCHANGER ASSEMBLY
34	DV1037	IGNITOR BRACKET
35	R2548	IGNITOR GROMMET
36	R2542	IGNITOR
37	R2543	FLAME SENSOR
38	R2541	BURNER - 3 REQUIRED
39	R2575	FLAME ROLLOUT SWITCH
40	DV1038	BURNER COMPARTMENT ACCESS PANEL
41	DV1143	BURNER COMPARTMENT
42	R3237	GAS VALVE (NAT)
42	R3238	GAS VALVE (LP)
43	DV1160	VALVE BRACKET
44	DV1147	MANIFOLD ASSEMBLY
45	P88120	ORIFICE (LPG GAS) - 3 REQUIRED
45	P8847	ORIFICE (NAT GAS) - 3 REQUIRED
46	M148	MANIFOLD GASKET
47	DV781	OBSERVATION HOLE COVER ASSEMBLY
48	M155	OBSERVATION HOLE COVER GASKET
49	DV1150	FRONT SHIELD ASSEMBLY
50	DV1024	BOTTOM SHIELD ASSEMBLY
51	DV1135	FRONT GRILL ASSEMBLY
52	DV1043	CASING FRONT ASSEMBLY
53	R2539	HOSE CLAMP - 2 REQUIRED
54	R2536	INLET HOSE
55	R2790	OUTLET CONNECTOR PIPE
56	DV1044	VENT ASSEMBLY
57	R2587	WALL PLATE GASKET
58	DV1045	WALL PLATE
59	R2529	OUTLET TAIL PIPE
60	DV1011	SHROUD SIDE LEFT

DV-55E-1

Click Part # To View Price & Availability

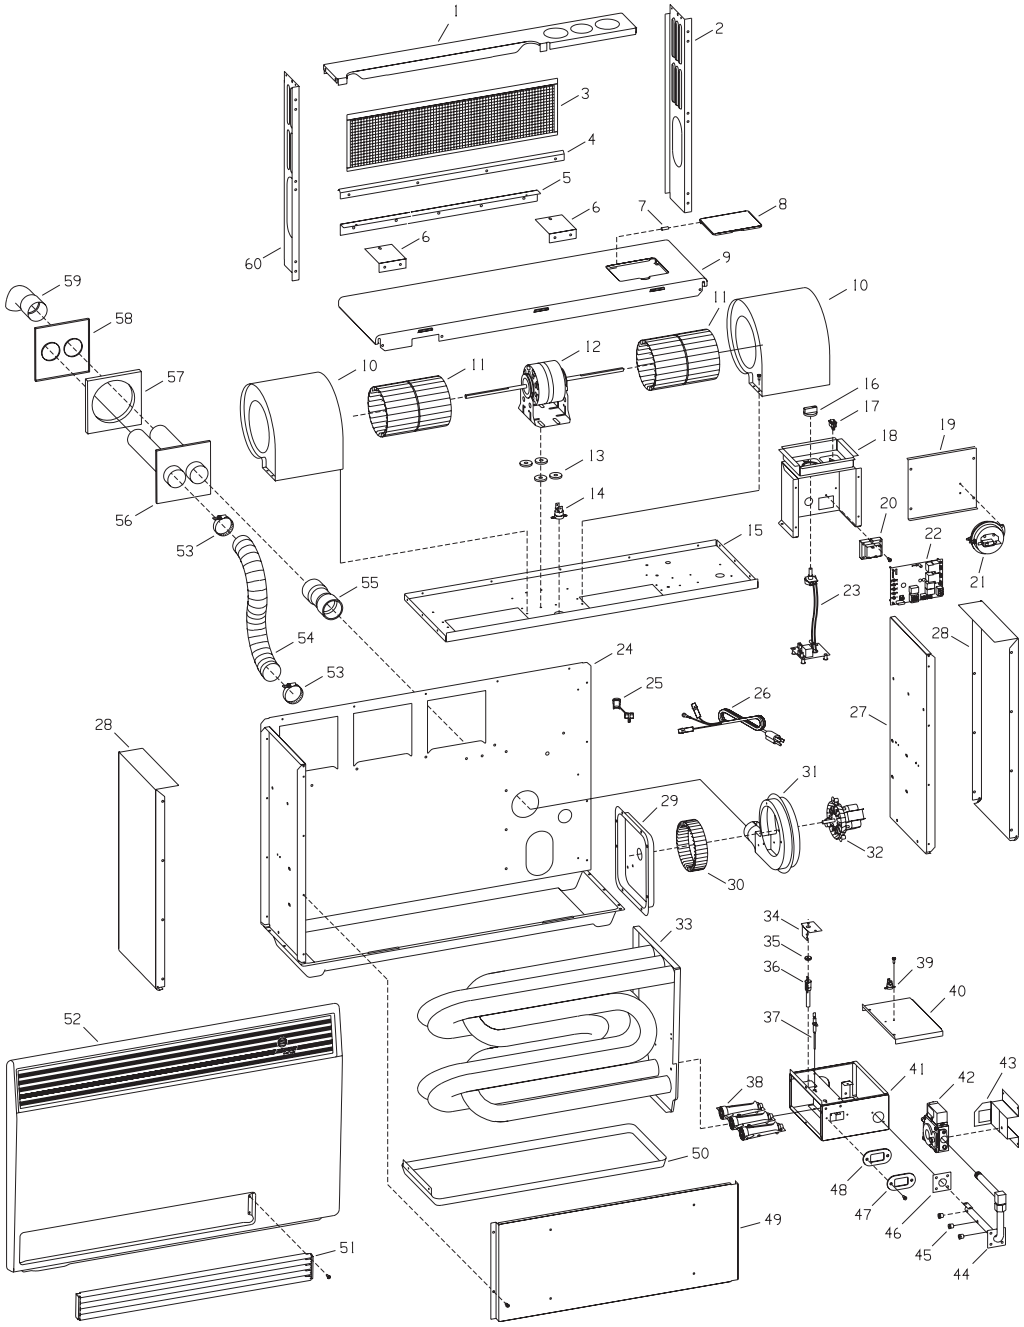
1
2
3
4
5
6
6
7
8
9
10
11
12
10
11
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
53
54
55
56
57
58
59
60

DV-55E-1

PARTS LIST

Index No.	Part Number	Description
1	DV1022	SHROUD TOP
2	DV1010	SHROUD SIDE RIGHT
3	R2521	AIR FILTER
4	DV1027	FILTER RETAINER
5	DV1047	WALL MOUNTING BRACKET
6	DV1048	WALL BRACKET - 2 REQUIRED
7	R2586	CONTROL DOOR PIN - 2 REQUIRED
8	DV1025	CONTROL DOOR
9	DV1028	CASING TOP
10	R2661	BLOWER HOUSING - 2 REQUIRED
11	R2663	BLOWER WHEEL - 2 REQUIRED
12	R2662	BLOWER MOTOR
13	R2598	MOTOR BASE WASHER - 4 REQUIRED
14	R1279	LIMIT SWITCH
15	DV1023	INNER TOP
16	R2546	CONTROL KNOB
17	R2522	ON/OFF SWITCH
18	DV1029	JUNCTION BOX
19	DV1030	JUNCTION BOX COVER
20	R1995	TRANSFORMER
21	R6988	PRESSURE SWITCH
22	R2576	CONTROL BOARD
23	R2577A	TEMPERATURE CONTROL BOARD
24	DV1031	CASING WELDED ASSEMBLY
25	R1468	STRAIN RELIEF BUSHING
26	R2099	CORD SET
27	DV1099	INNER END
28	DV1098	CASING SIDE - 2 REQUIRED
29	DV1163	COLLECTOR BOX
30	R2519	INDUCER WHEEL
31	DV1169	INDUCER BLOWER HOUSING ASSEMBLY
32	R2523	INDUCER MOTOR
33	DV1139	EXCHANGER ASSEMBLY

PARTS LIST

Index No.	Part Number	Description
34	DV1037	IGNITOR BRACKET
35	R2548	IGNITOR GROMMET
36	R2542	IGNITOR
37	R2543	FLAME SENSOR
38	R2541	BURNER - 3 REQUIRED
39	R2575	FLAME ROLLOUT SWITCH
40	DV1038	BURNER COMPARTMENT ACCESS PANEL
41	DV1143	BURNER COMPARTMENT
42	R3237	GAS VALVE (NAT GAS)
42	R3238	GAS VALVE (LPG GAS)
43	DV1160	VALVE BRACKET
44	DV1147	MANIFOLD ASSEMBLY
45	P88120	ORIFICE (LPG GAS) - 3 REQUIRED
45	P8847	ORIFICE (NAT GAS) - 3 REQUIRED
46	M148	MANIFOLD GASKET
47	DV781	OBSERVATION HOLE COVER ASSEMBLY
48	M155	OBSERVATION HOLE COVER GASKET
49	DV1150	FRONT SHIELD ASSEMBLY
50	DV1024	BOTTOM SHIELD
51	DV1135	FRONT GRILL ASSEMBLY
52	DV1043	CASING FRONT ASSEMBLY
53	R2539	HOSE CLAMP - 4 REQUIRED
54	R3113	iNLET HOSE
55	R3111	OUTLET ELBOW
56	DV1192	VENT PAN ASSEMBLY
57	R3114	INLET CAP
58	R3115	WALL PLATE GASKET - INSIDE
59	R2587	WALL PLATE GASKET - OUTSIDE
60	DV1195	WALL PLATE - OUTSIDE
61	DV1193	TUBE SPACER
62	DV1194	END CAP ASSEMBLY
63	DV1011	SHROUD SIDE LEFT

Click Part # To View
Price & Availability

Color change from
light gray to beige
3/31/00

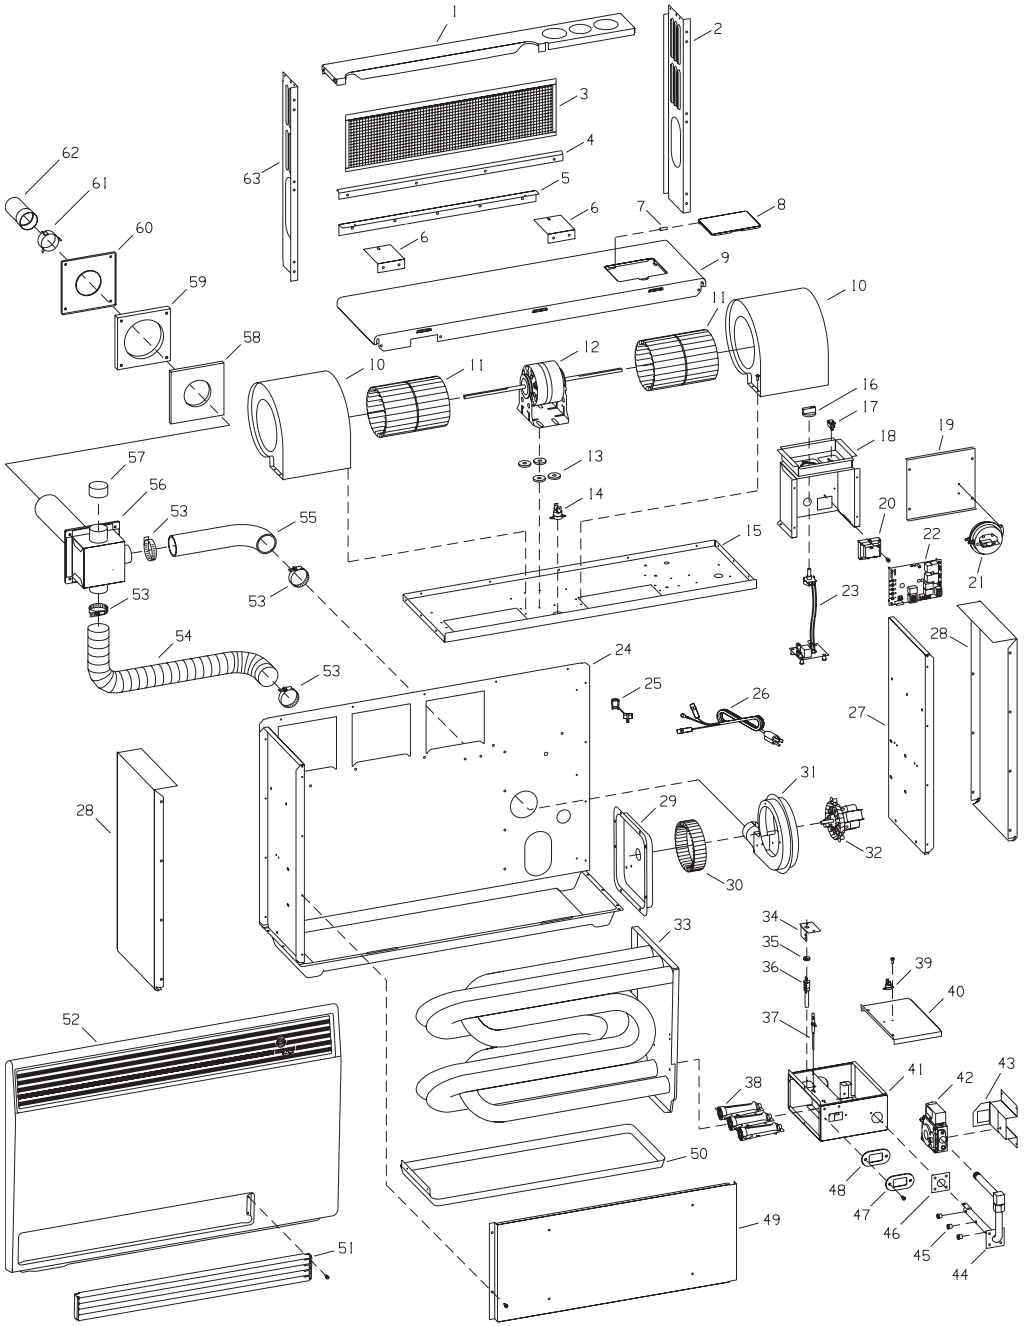

DV-55E-3

PARTS LIST

Index No.	Part Number	Description
1	DV1378	SHROUD TOP
2	DV1376	SHROUD SIDE RIGHT
3	R2521	AIR FILTER
4	DV1375	FILTER RETAINER
5	DV1379	WALL MOUNTING BRACKET
6	DV1048	WALL BRACKET - 2 REQUIRED
7	R2586	CONTROL DOOR PIN - 2 REQUIRED
8	DV1381	CONTROL DOOR ASSEMBLY
9	DV1373	CASING TOP
10	R2661	BLOWER HOUSING - 2 REQUIRED
11	R2663	BLOWER WHEEL - 2 REQUIRED
12	R2662	BLOWER MOTOR
13	R2598	MOTOR BASE WASHER - 4 REQUIRED
14	R1279	LIMIT SWITCH
15	DV1367	INNER TOP
16	R2546	CONTROL KNOB
17	R2522	ON/OFF SWITCH
18	DV1029	JUNCTION BOX
19	DV1370	JUNCTION BOX COVER
20	R1995	TRANSFORMER
21	R6988	PRESSURE SWITCH
22	R2576	CONTROL BOARD
23	R2577A	TEMPERATURE CONTROL BOARD
24	DV1365	CASING WELDED ASSEMBLY
25	R1468	STRAIN RELIEF BUSHING
26	R2099	CORD SET
27	DV1371	INNER END
28	DV1372	CASING SIDE - 2 REQUIRED
29	DV1163	COLLECTOR BOX
30	R2519	INDUCER WHEEL
31	DV1169	INDUCER BLOWER HOUSING ASSEMBLY
32	R2523	INDUCER MOTOR
33	15785	EXCHANGER ASSEMBLY
34	DV1037	IGNITOR BRACKET
35	R2548	IGNITOR GROMMET

PARTS LIST

Index No.	Part Number	Description
36	R2542	IGNITOR
37	R2543	FLAME SENSOR
38	R2541	BURNER - 3 REQUIRED
39	R2575	FLAME ROLLOUT SWITCH
40	DV1038	BURNER COMPARTMENT ACCESS PANEL
41	DV1143	BURNER COMPARTMENT
42	R3237	GAS VALVE NAT
42	R3238	GAS VALVE LP
43	DV1366	VALVE BRACKET
44	DV1147	MANIFOLD ASSEMBLY
45	P88120	ORIFICE (LPG GAS) - 3 REQUIRED
45	P8847	ORIFICE (NAT GAS) - 3 REQUIRED
46	M148	MANIFOLD GASKET
47	DV781	OBSERVATION HOLE COVER ASSEMBLY
48	M155	OBSERVATION HOLE COVER GASKET
49	15792	FRONT SHIELD ASSEMBLY
50	DV1024	BOTTOM SHIELD
51	DV1364	FRONT GRILL ASSEMBLY
52	DV1380	CASING FRONT ASSEMBLY
53	R2539	HOSE CLAMP - 4 REQUIRED
54	R3113	INLET HOSE
55	R3111	OUTLET ELBOW
56	DV1192	VENT PAN ASSEMBLY
57	R3114	INLET CAP
58	R3115	WALL PLATE GASKET - INSIDE
59	R2587	WALL PLATE GASKET - OUTSIDE
60	DV1195	WALL PLATE - OUTSIDE
61	DV1193	TUBE SPACER
62	DV1194	END CAP ASSEMBLY
63	DV1377	SHROUD SIDE LEFT

DV-55E-4

Click Part # To View Price & Availability

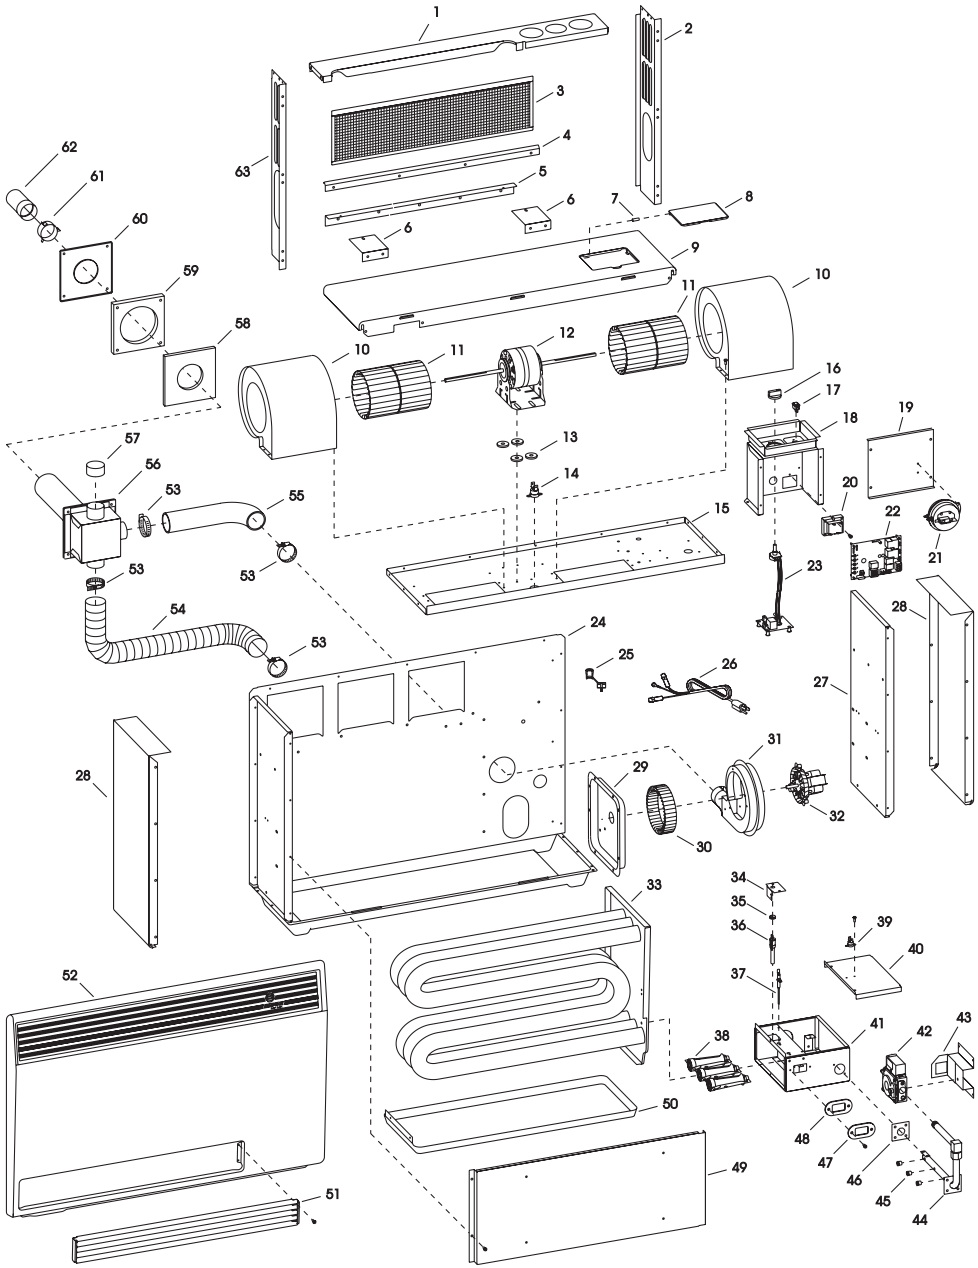
1
2
3
4
5
6
6
7
8
9
10
11
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
53
53
53
54
55
56
57
58
59
60
61
62
63

DV-55E-4