BAY WINDOW MANTIS PARTS LIST

⚠ WARNING

Use only manufacturer's replacement parts. Use of any other parts could cause injury or death.

INDEX NO.	PART NO.	DESCRIPTION
1	27072	REAR PANEL ASSEMBLY
2	21654	BRACKET, PIPE ASSEMBLY
3	24831	REAR HEAT SHIELD ASSEMBLY
4A	21664	TOP COVER ASSEMBLY (INCLUDES #5)
4B	22933	SLIM TOP ASSEMBLY
4C	22934	SHORT TOP ASSEMBLY
5	R8854	BALL STUD
6	22693	TOP HEAT SHIELD ASSEMBLY
7	26089	HEAT EXCHANGER TUBE ASSEMBLY (REQUIRES 2 #8)
8	R10337	GASKET, END PLATE (2 REQUIRED)
9	R9987	FLEX LINE - 24"
10	26087	SUMP ASSEMBLY (INCLUDES #14 & 10)
11	R10299	SWITCH, BIMETALIC
12	R8795	GASKET, SUMP
13	29721	HEAT EXCHANGER ASSEMBLY (INCLUDES #7, 8, & 12)
14	R10966	TUBING (SUMP TO PUMP)
15	21627	SHIELD, REAR INNER
16	25227	ELECTRIC PARTS PLATE
17	21667	LEFT SIDE DOOR ASSEMBLY
18	21605	COVER, INLET AIR DUCT
19	22780	INLET AIR DUCT ASSEMBLY
20	R10491	GASKET, INLET AIR DUCT
21	21641	BRACKET ASSEMBLY THERMISTER (SPRING CLIP INCLUDED)
22	R4053	CLAMP, DOOR (4 USED ON UNIT)
23	22773	THERMISTER ASSEMBLY
24	R10488	3/8 ELBOW, 90 (2 REQUIRED)
25	21640	BRACKET ASSEMBLY (SPRING CLIP INCLUDED)
26	21665	RIGHT SIDE DOOR ASSEMBLY
27	21651	TUBING (FIREBOX TO PRESSURE SWITCH)
28	R8835	FITTING, BARBED HOSE
29	22865	IGNITOR, HOT SURFACE ASSEMBLY
30	21611	BRACKET, IGNITOR
31	R8807	FLAME SENSOR
32	30626	LOG PLATE ASSEMBLY
33	22753	SMALL BURNER ASSEMBLY NAT (INCLUDES #35 AND 37)
33	26787	SMALL BURNER ASSEMBLY LP (INCLUDES #35 AND 37)
34	22658	LARGE BURNER ASSEMBLY - NAT (INCLUDES #36 AND 37)
34	26801	LARGE BURNER ASSEMBLY - LP (INCLUDES #36 AND 37)
35	R9831	BUSHING, AIR SHUTTER - FRONT NAT
35	R10675	BUSHING, AIR SHUTTER - FRONT LPG
36	R10675	BUSHING, AIR SHUTTER - REAR NAT
36	R10676	BUSHING, AIR SHUTTER - REAR LPG
37	R8790	BUSHING, BURNER
38	P208	REAR ORIFICE, LPG
38	P288	REAR ORIFICE, NAT
39	P208	FRONT ORIFICE, NAT
39	P307	FRONT ORIFICE, LPG
40	R10796	HOLDER, ORIFICE
41	R7572	JAMB NUT
42	27071	GAS LINE - REAR

Click Part # To View
Price & Availability

BAY WINDOW MANTIS PARTS LIST

⚠ WARNING

Use only manufacturer's replacement parts. Use of any other parts could cause injury or death.

INDEX NO.	PART NO.	DESCRIPTION
43	26128	GAS LINE - FRONT
44	M174	GASKET
45	11269	GAS LINE BRACKET
46	R8886	COMPRESSION FITTING
47	R8812	VALVE, NAT
47	R8869	VALVE, LPG
48	R8898	PIPE NIPPLE
49	R8825	SOLENOID
50	R3312	CONNECTOR, MALE 3/8 X 3/8
51	R10072	SHUT-OFF VALVE
52	R10775	CONTROL BOX ASSEMBLY (INCLUDES #61 & 63)
53	R10043	TRANSFORMER 12-24V
54	R8804	TRANSFORMER 24V
55	25325	CONDENSATE PUMP COVER
56	27004	CIRCULATING BLOWER ASSEMBLY
57	21663	DOOR ASSEMBLY, BLACK
57	22758	DOOR ASSEMBLY, CHROME
57	22759	DOOR ASSEMBLY, GOLD
58	26582	FRONT PANEL ASSEMBLY (INCLUDES #82 & 83)
59	R8840	WIRE HARNESS ASSEMBLY WITH ECONOMY SWITCH
60	R8809	SWITCH, DOUBLE ROCKER
61	R8904	CIRCUIT BOARD
62	25226	CIRCUIT BOARD PLATE
63	R10759	RIBBON CABLE
64	R11043	CIRCUIT BOARD WIRE HARNESS
65	R10182	WIRE HARNESS, 120V
66	R10183	WIRE HARNESS 12V
67	R10190	WIRE HARNESS 12V
68	29355	PUMP ASSEMBLY (INCLUDES #14 & 55)
69	R10489	AIR PRESSURE SWITCH
70	R8881	CAPACITOR 3uF
71	R8880	CAPACITOR 4uF
72	R11450	LOG, LEFT REAR
73	R11452	LOG, TOP LEFT
74	R11453	LOG, TOP RIGHT
75	R11451	LOG, RIGHT REAR
76	R11449	LOG, CENTER
77	R11447	LOG, FRONT LEFT
78	R11448	LOG, FRONT RIGHT
79	R2522	MAIN POWER SWITCH
80	R10610	WIRE HARNESS, MAIN POWER SWITCH
81	26119	HEADER COVER - OUTLET
82	R10707	FILTER ROD, FRONT PANEL
83	R10705	FILTER, FRONT PANEL
NOT SHOWN	FRBTC	THERMOSTAT

Click Part # To View
Price & Availability

BAY WINDOW MANTIS PARTS VIEW

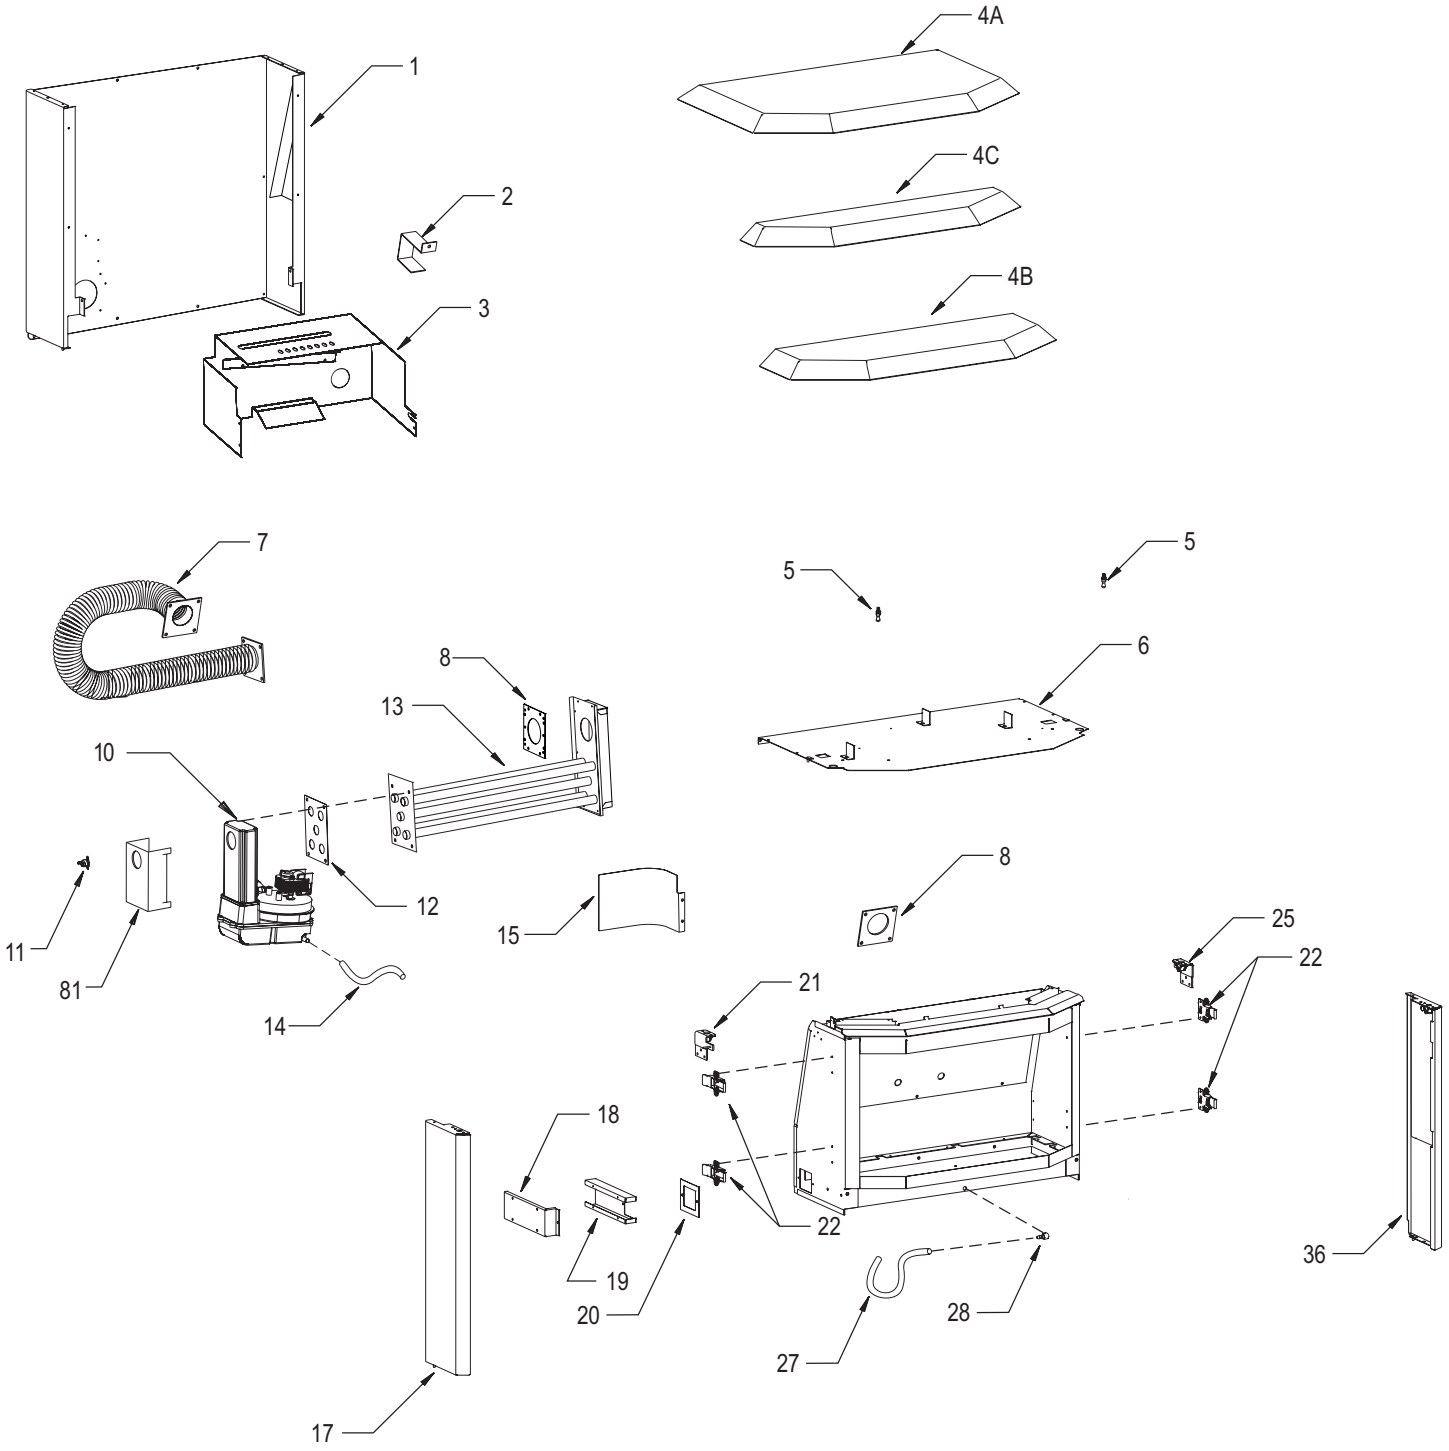

BAY WINDOW MANTIS PARTS VIEW

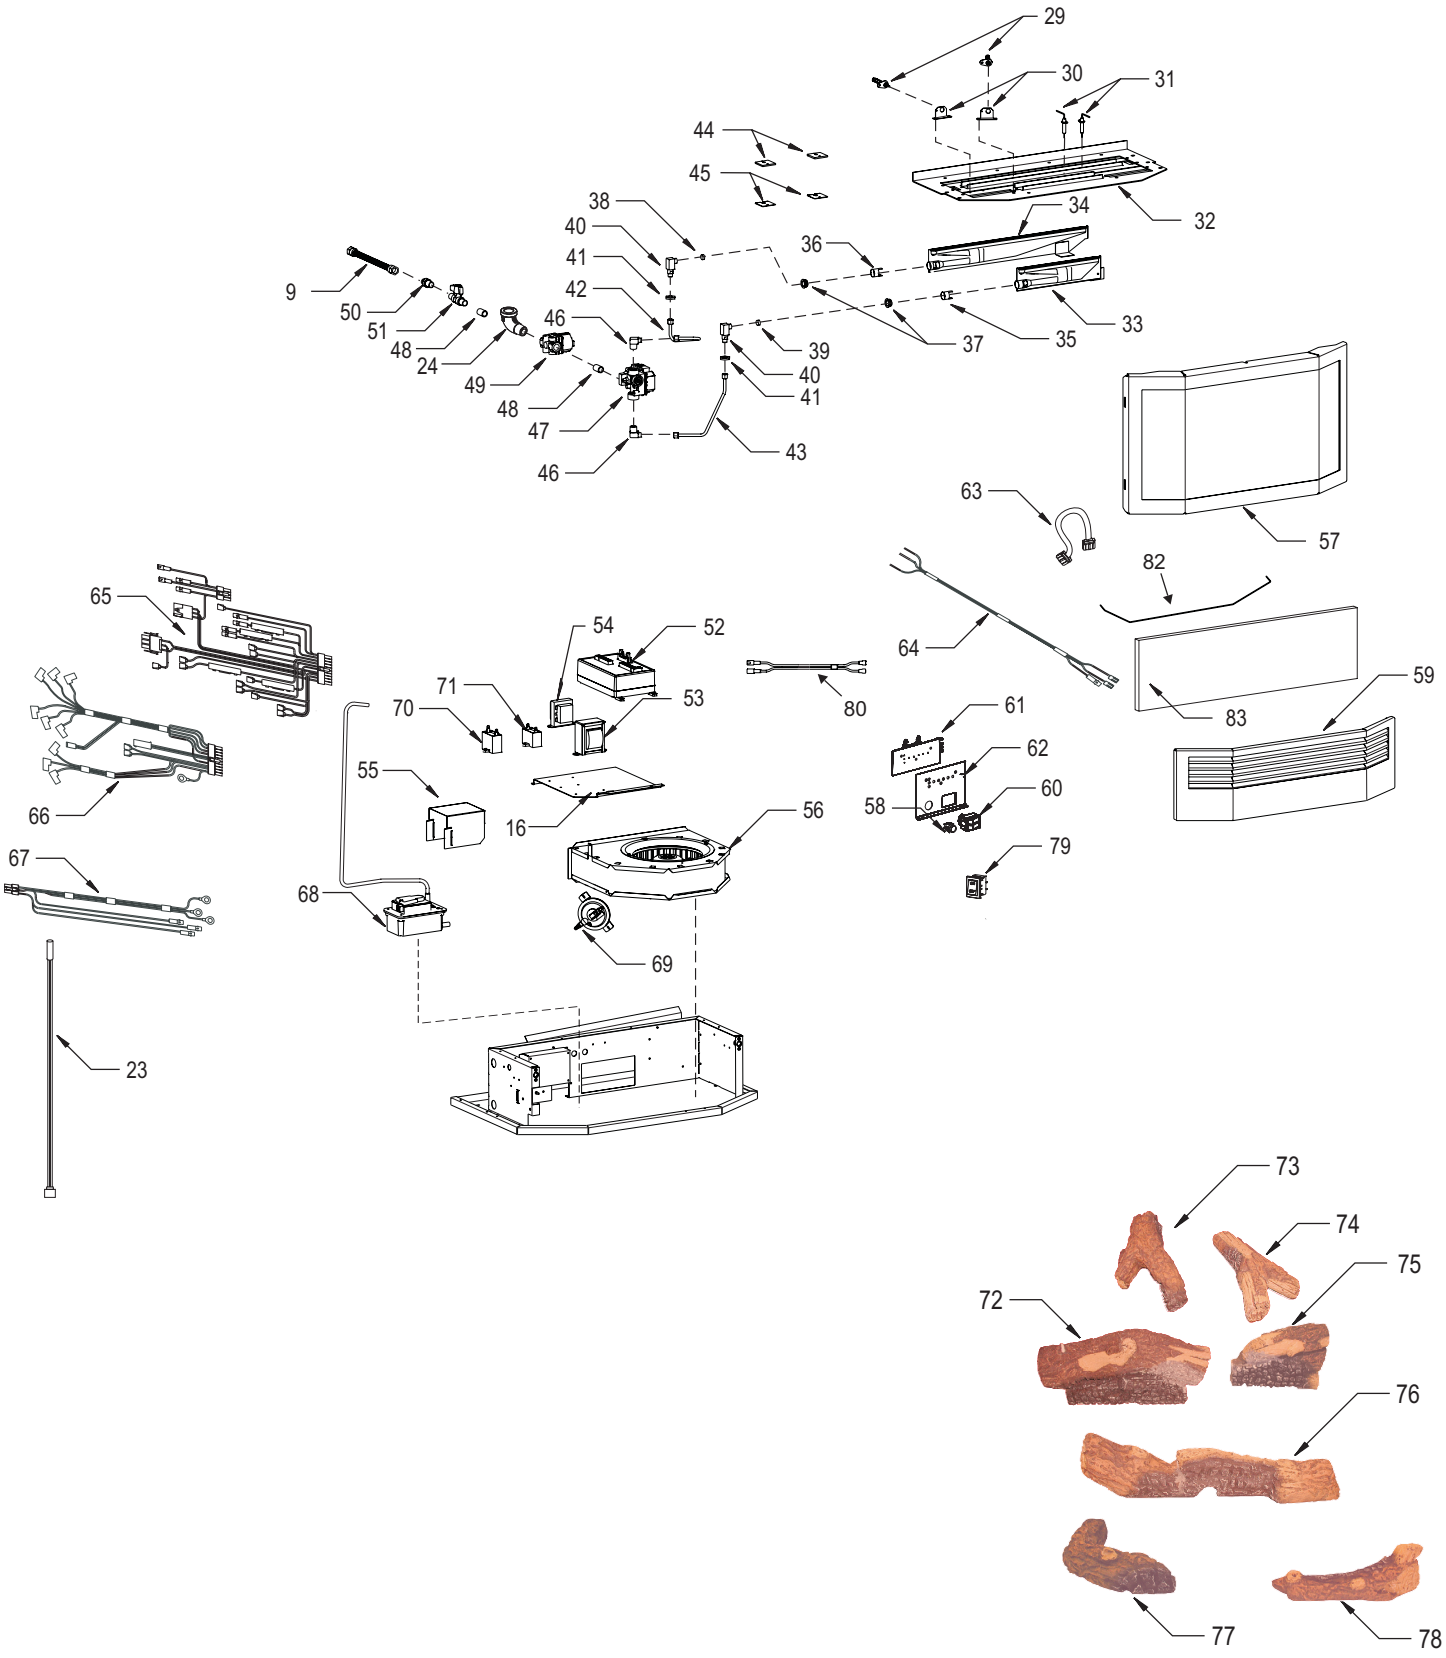

FIREPLACE MANTIS PARTS LIST

⚠ WARNING

Use only manufacturer's replacement parts. Use of any other parts could cause injury or death.

INDEX NO.	PART NO.	DESCRIPTION
1	25207	PANEL - TOP
2	21595	CONDENSATE TRAY
3	25223	LOUVER - TOP
4	25212	REAR BURNER TRAY
5	R9987	FLEX LINE
6	26081	FRONT BURNER TRAY ASSEMBLY
7	25205	PANEL - LEFT SIDE
8	21605	INLET AIR DUCT COVER
9	22780	INLET AIR DUCT ASSEMBLY
10	R10491	INLET AIR DUCT GASKET
11	R8825	SOLENOID
12	R10072	GAS SHUT OFF VALVE
13	R8812	VALVE - NAT
13	R8869	VALVE - LPG
14	26071	GLASS ASSEMBLY
15	27004	CIRCULATING BLOWER ASSEMBLY
16	R10338	PRESSURE SWITCH
17	25227	ELECTRICAL PARTS PLATE
18	R10775	CONTROL BOX (INCLUDES #27 & 48)
19	R10043	TRANSFORMER 12-24V
20	R8881	CAPACITOR 3uF
21	R8880	CAPACITOR 4uF
22	R8804	TRANSFORMER - 24V
23	26075	PUMP ASSEMBLY (INCLUDES #50 & 64)
24	25226	CIRCUIT BOARD PLATE
25	R8809	DOUBLE ROCKER SWITCH
26	R8840	WIRE HARNESS ASSEMBLY WITH ECONOMY SWITCH
27	R8904	CIRCUIT BOARD
28	26083	FRONT BURNER ASSEMBLY
29	26082	BACK BURNER ASSEMBLY
30	R11012	ORIFICE HOLDER - FRONT
31	22865	HOT SURFACE IGNITOR (2 REQUIRED)
32	R10967	FLAME SENSOR (2 REQUIRED)
33	25210	AIR DUCT CHANNEL
34	25214	PANEL - RIGHT SIDE
35	25222	DOOR BRACKET (2 REQUIRED)
36	R4053	DOOR CLAMP (2 REQUIRED)
37	25225	LATCH BRACKET (2 REQUIRED)

INDEX NO.	PART NO.	DESCRIPTION
38	26087	SUMP ASSEMBLY (INCLUDES #62 & 64)
39	26089	FLEX PIPE ASSEMBLY (REQUIRES 2 #65)
40	29721	HEAT EXCHANGER ASSEMBLY (INCLUDES #39, 62, & 65)
41	25204	PANEL - BACK
42	R10796	ORIFICE HOLDER - REAR
43	R10182	WIRE HARNESS - 120V
44	R10190	WIRE HARNESS - 12V SMALL
45	R10183	WIRE HARNESS - 12V LARGE
46	R8814	THERMISTER
47	R11043	WIRE HARNESS - CIRCUIT BOARD
48	R10759	RIBBON CABLE
49	24831	REAR HEAT SHIELD ASSEMBLY
50	25325	CONDENSATE PUMP COVER
51	R11455	REAR LOG
52	RR1456	LEFT LOG
53	R10380	RIGHT LOG
54	R11457	MIDDLE LOG
55	R10378	FRONT LEFT LOG
56	R10377	FRONT RIGHT LOG
57	R10383	LEFT TOP LOG
58	R10382	RIGHT TOP LOG
59	25216	BRACKET, STANDOFF (2 REQUIRED)
60	R2522	MAIN POWER SWITCH
61	R10610	WIRE HARNESS, MAIN POWER SWITCH
62	R8795	GASKET - SUMP
63	26119	HEADER COVER - OUTLET
64	R10966	TUBING (SUMP TO PUMP)
65	R10337	GASKET, END PLATE (2 REQUIRED)
N/S	26117	AIR DUCT CHANNEL COVER PLATE - NAT ONLY
N/S	FRBTC	THERMOSTAT
N/S	R10093	ORIFICE #47 - NAT
N/S	R10094	ORIFICE #49 - NAT
N/S	R10095	ORIFICE #1.2MM - LP
N/S	R10096	ORIFICE #55 - LP
N/S	R10299	SWITCH, BIMETALIC
N/S	R10705	FILTER, FRONT PANEL
N/S	R10706	FILTER ROD, FRONT PANEL

N/S - Not Shown

Click Part # To View Price & Availability
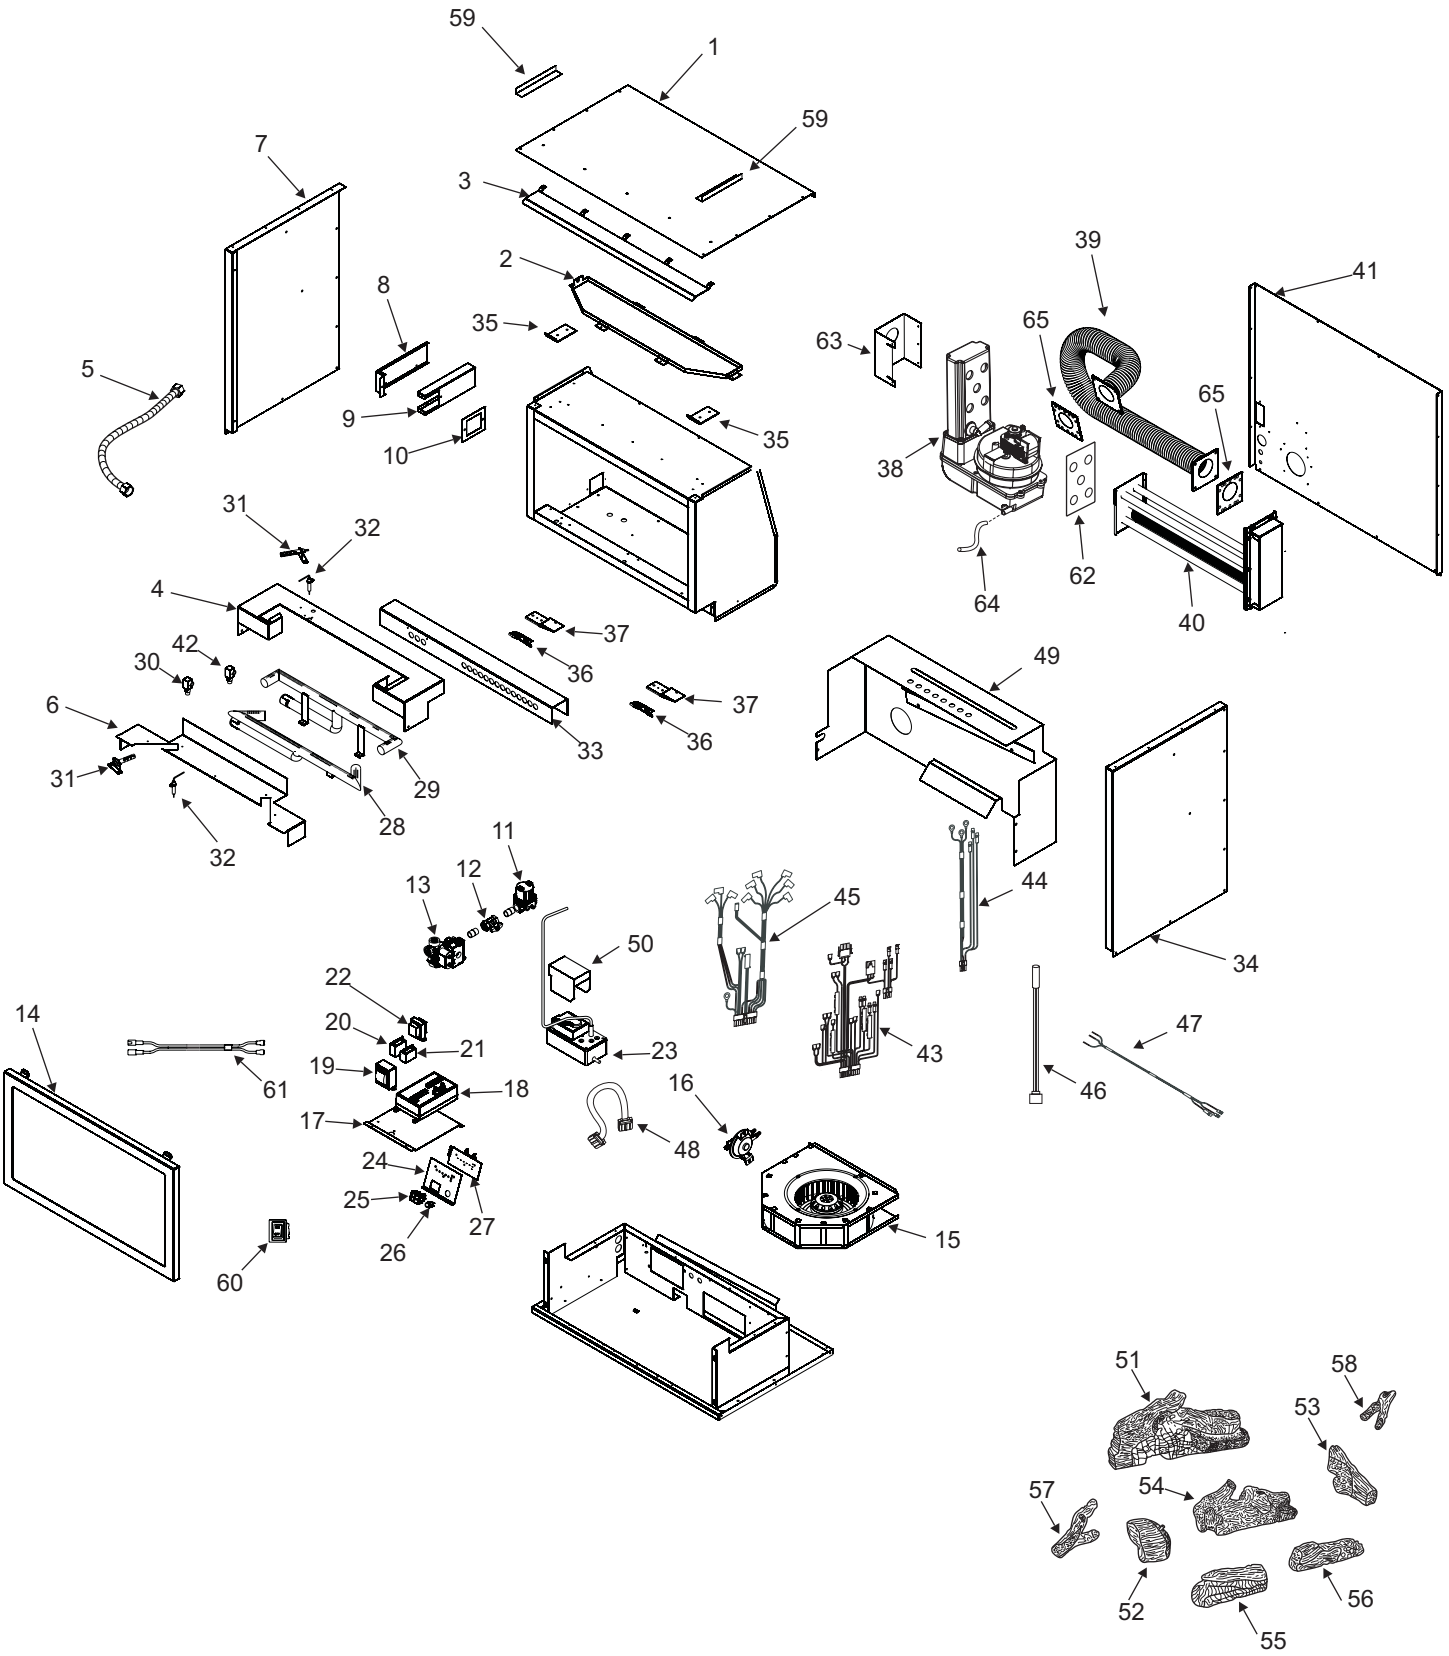
FIREPLACE MANTIS PARTS VIEW