PARTS LIST

Index No.	Part No.	Description
1	SR128	CASING SIDE ASSEMBLY - LEFT
2	R2313	PIEZO IGNITOR
3	R2328	CONTROL KNOB
4	SR036	CONTROL ROD
5	SR126	CASING BACK
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR153	ORIFICE SHIELD
8	SR032	PILOT BRACKET - NAT
8	SR250	PILOT BRACKET - LP
9	R1654	PILOT WITH ORIFICE LP
	R2360	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 10 AND 11)
9	R1655	PILOT WITH ORIFICE NAT
	R2356	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 10 AND 11)
10	R1659	ELECTRODE
11	R2373	THERMOCOUPLE
12	SR143	TUBING - GAS VALVE TO PILOT (LPG ONLY)
13	SR112	VALVE BRACKET
14	R2277	GAS VALVE - COPRECI
15	SR139	TUBING - GAS VALVE TO BURNER
16	SR221	TUBING - INLET REGULATOR TO GAS VALVE
17	R2479A	INLET REGULATOR - NAT
17	R2480	INLET REGULATOR - LPG
18	SR209	INLET REGULATOR BRACKET
19	R2314	ORIFICE HOLDER
20	R2319	MAIN BURNER ORIFICE - NAT
20	R2320	MAIN BURNER ORIFICE - LPG
21	R2332	BURNER
22	SR229	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
23	R2487	PILOT REGULATOR (NAT ONLY)
24	SR228	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
25	R2305	CHROME GRILL
26	SR134	CASING LOUVER (2 REQUIRED)
27	SR129	REFLECTOR ASSEMBLY
28	SR135	HEAT SHIELD
29	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R2390	IGNITOR WIRE
NS	R2296	INSTRUCTION MANUAL
NS	SR216	HARDWARE PACKAGE

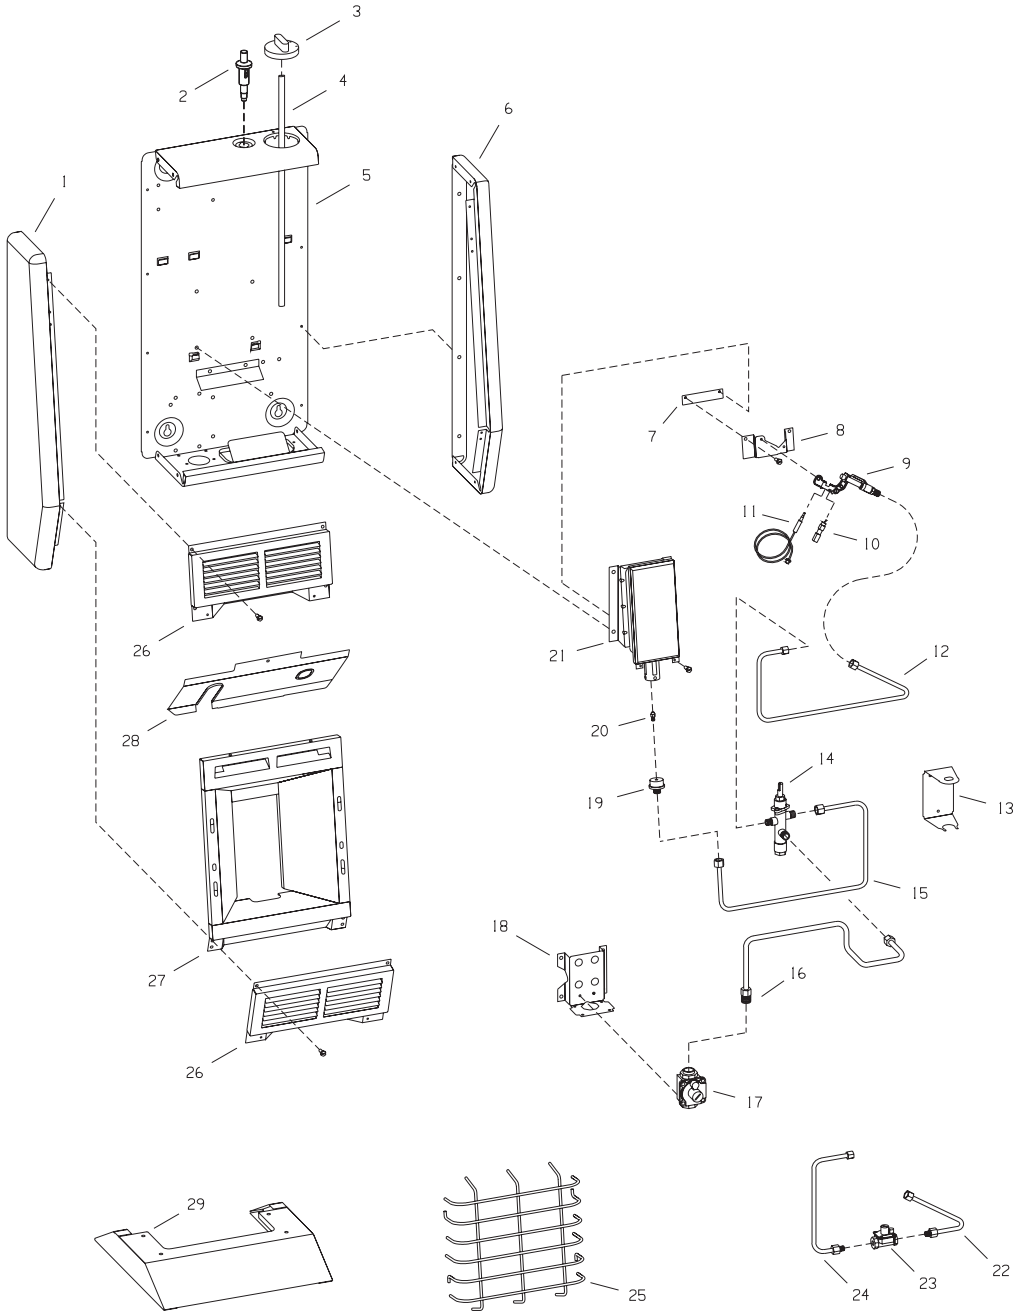

SR-6-1

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10815	CASING SIDE ASSEMBLY - LEFT
2	R2313	PIEZO IGNITOR
3	R2328	CONTROL KNOB
4	SR036	CONTROL ROD
5	SR126	CASING BACK
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR153	ORIFICE SHIELD
8	SR032	PILOT BRACKET
9	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY) (INCLUDES ITEM 10)
9	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY) (INCLUDES ITEM 10)
10	R5003	THERMOCOUPLE LEAD 29"
11	SR143	TUBING - GAS VALVE TO PILOT
12	SR112	VALVE BRACKET
13	R2277	GAS VALVE - COPRECI
14	SR139	TUBING - GAS VALVE TO BURNER
15	SR221	TUBING - INLET REGULATOR TO GAS VALVE
16	R5097	INLET REGULATOR - NAT
16	R5098	INLET REGULATOR - LPG
17	10753	INLET REGULATOR BRACKET
18	R2314	ORIFICE HOLDER
19	R2319	MAIN BURNER ORIFICE - NAT
19	R2320	MAIN BURNER ORIFICE - LPG
20	R2332	BURNER
21	R2305	CHROME GRILL
22	SR134	CASING LOUVER (2 REQUIRED)
23	SR129	REFLECTOR ASSEMBLY
24	SR135	HEAT SHIELD
25	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

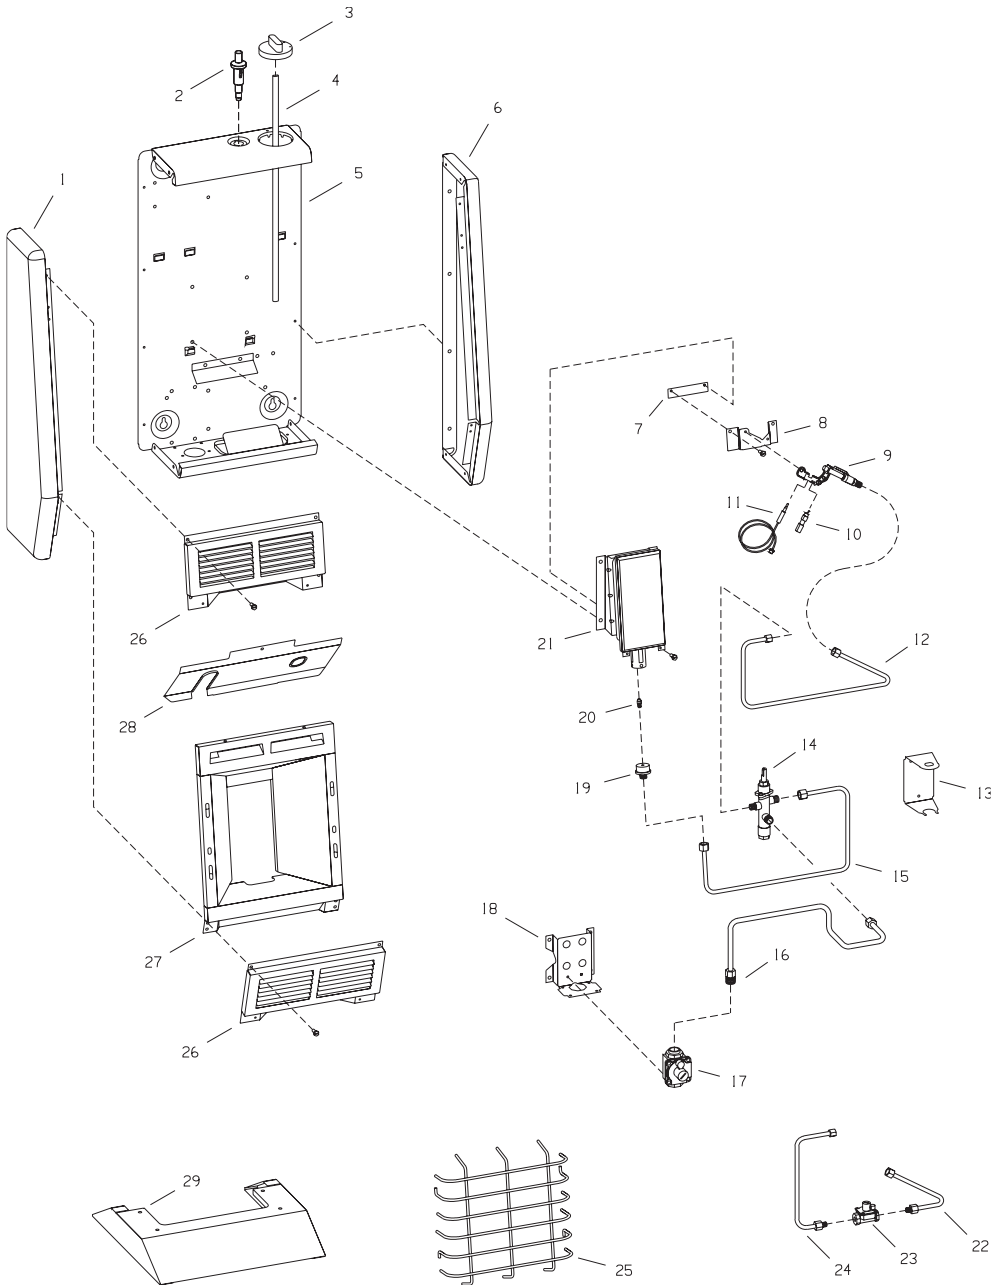

SR-6-2

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13344	CASING SIDE ASSEMBLY - LEFT
2	R2313	PIEZO IGNITOR
3	R2328	CONTROL KNOB
4	SR036	CONTROL ROD
5	SR126	CASING BACK
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR153	ORIFICE SHIELD
8	SR032	PILOT BRACKET (NAT)
8	SR250	PILOT BRACKET (LPG)
9	R6308	PILOT ASSEMBLY (LPG ONLY) (INCLUDES ITEMS 10 & 11)
9	R6307	PILOT ASSEMBLY (NAT ONLY) (INCLUDES ITEMS 10 & 11)
10	R6309	SPARK IGNITOR
11	R6310	PILOT THERMOCOUPLE
12	SR143	TUBING - GAS VALVE TO PILOT
13	SR112	VALVE BRACKET
14	R2277	GAS VALVE - COPRECI
15	SR139	TUBING - GAS VALVE TO BURNER
16	SR221	TUBING - INLET REGULATOR TO GAS VALVE
17	R5097	INLET REGULATOR - NAT
17	R5098	INLET REGULATOR - LPG
18	10753	INLET REGULATOR BRACKET
19	R2314	ORIFICE HOLDER
20	R2319	MAIN BURNER ORIFICE - NAT
20	R2320	MAIN BURNER ORIFICE - LPG
21	R2332	BURNER
22	R2305	CHROME GRILL
23	SR134	CASING LOUVER (2 REQUIRED)
24	SR129	REFLECTOR ASSEMBLY
25	SR135	HEAT SHIELD
26	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

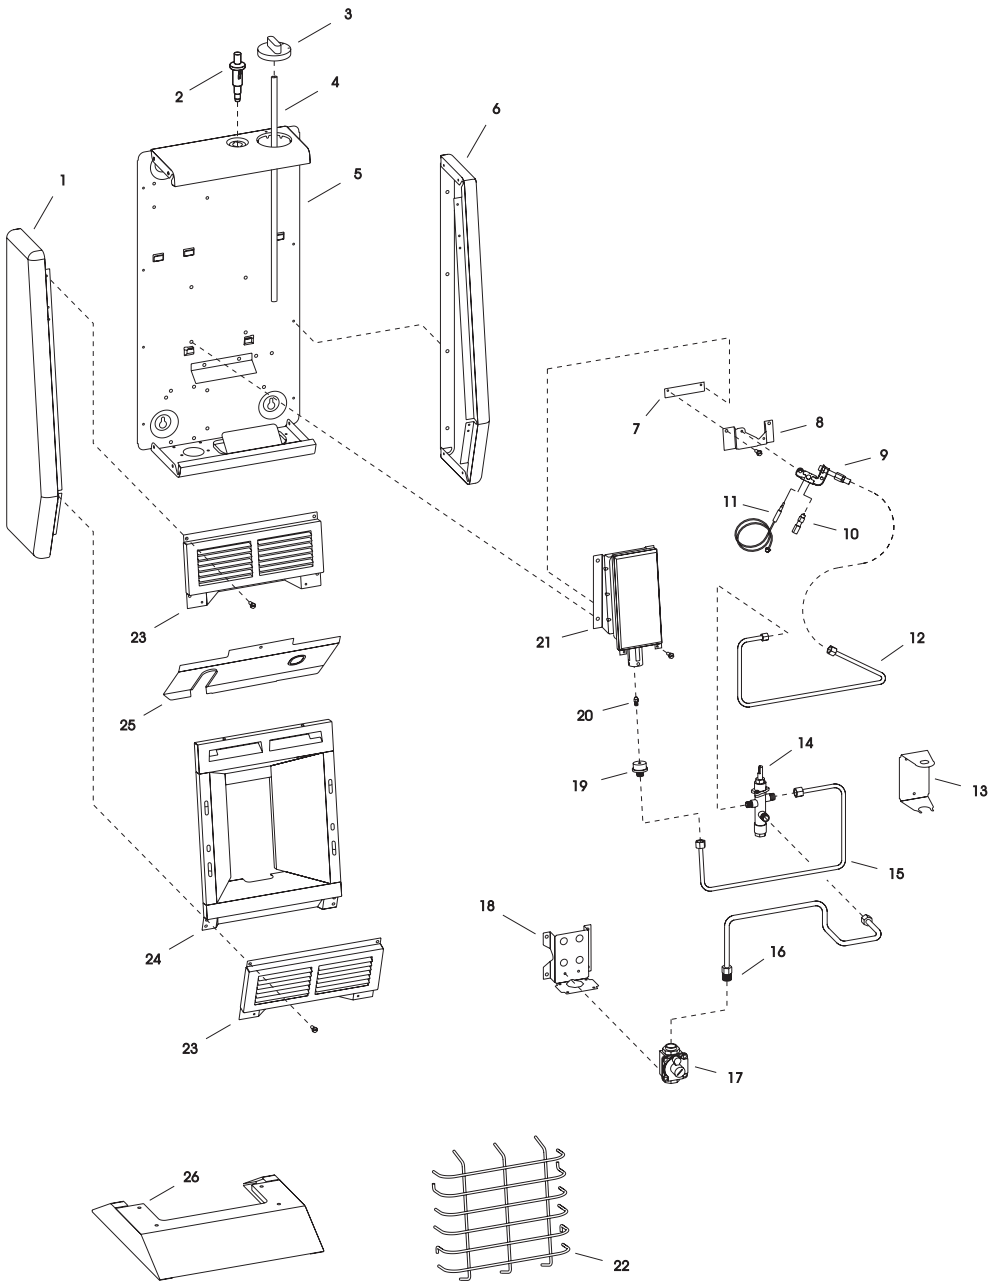

SR-6-3

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	SR169	CASING SIDE ASSEMBLY - LEFT
2	R2313	PIEZO IGNITOR
3	R2328	CONTROL KNOB
4	SR036	CONTROL ROD
5	SR177	CASING BACK
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR153	ORIFICE SHIELD
8	SR179	PILOT BRACKET
9	R1654	PILOT WITH ORIFICE LP
	R2360	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 10 AND 11)
9	R1655	PILOT WITH ORIFICE NAT
	R2356	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 10 AND 11)
10	R1659	ELECTRODE
11	R2373	THERMOCOUPLE
12	SR143	TUBING - GAS VALVE TO PILOT (LPG ONLY)
13	SR112	VALVE BRACKET
14	R2277	GAS VALVE - COPRECI
15	SR139	TUBING - GAS VALVE TO BURNER
16	SR221	TUBING - INLET REGULATOR TO GAS VALVE
17	R2479A	INLET REGULATOR - NAT
17	R2480	INLET REGULATOR - LPG
18	SR209	INLET REGULATOR BRACKET
19	R2314	ORIFICE HOLDER
20	R2317	MAIN BURNER ORIFICE - NAT
20	R2318	MAIN BURNER ORIFICE - LPG
21	R2331	BURNER
22	SR229	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
23	R2487	PILOT REGULATOR (NAT ONLY)
24	SR228	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
25	R2305	CHROME GRILL
26	SR134	CASING LOUVER (2 REQUIRED)
27	SR129	REFLECTOR ASSEMBLY
28	SR135	HEAT SHIELD
29	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R2390	IGNITOR WIRE
NS	R2300	INSTRUCTION MANUAL
NS	SR216	HARDWARE PACKAGE

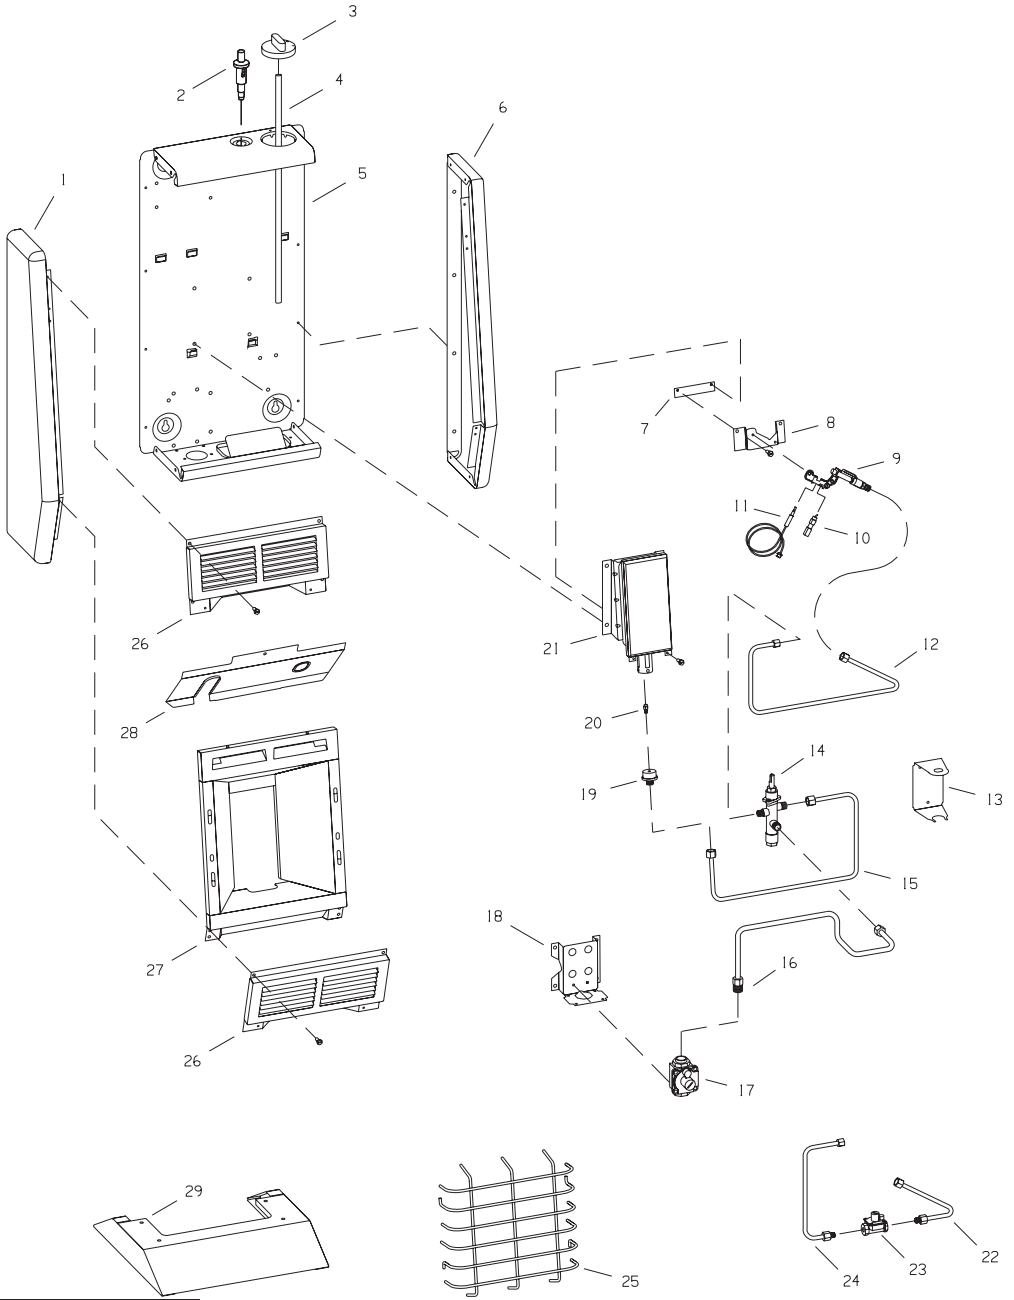

SR-10-1

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10813	CASING SIDE ASSEMBLY - LEFT
2	R2313	PIEZO IGNITOR
3	R2328	CONTROL KNOB
4	SR036	CONTROL ROD
5	SR177	CASING BACK
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR153	ORIFICE SHIELD
8	SR179	PILOT BRACKET
9	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY) (INCLUDES ITEM #10)
9	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY) (INCLUDES ITEM #10)
10	R5003	THERMOCOUPLE LEAD 29"
11	SR143	TUBING - GAS VALVE TO PILOT
12	SR112	VALVE BRACKET
13	R2277	GAS VALVE - COPRECI
14	SR139	TUBING - GAS VALVE TO BURNER
15	SR221	TUBING - INLET REGULATOR TO GAS VALVE
16	R5097	INLET REGULATOR - NAT
16	R5098	INLET REGULATOR - LPG
17	10753	INLET REGULATOR BRACKET
18	R2314	ORIFICE HOLDER
19	R2317	MAIN BURNER ORIFICE - NAT
19	R2476	MAIN BURNER ORIFICE - LPG
20	R2331	BURNER
21	R2305	CHROME GRILL
22	SR134	CASING LOUVER (2 REQUIRED)
23	SR129	REFLECTOR ASSEMBLY
24	SR135	HEAT SHIELD
25	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

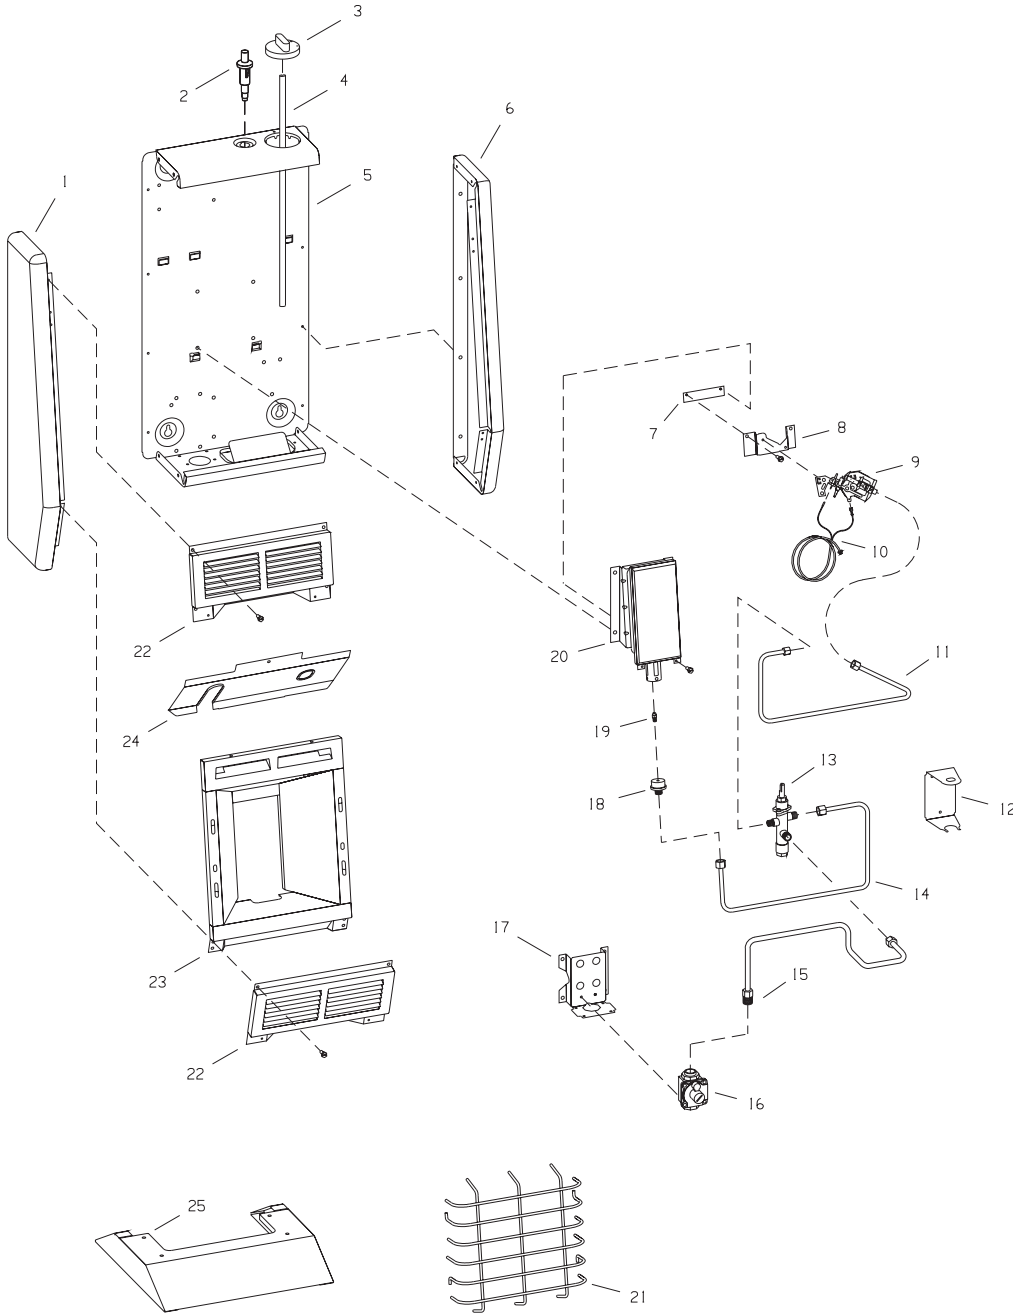

SR-10-2

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13345	CASING SIDE ASSEMBLY - LEFT
2	R2313	PIEZO IGNITOR
3	R2328	CONTROL KNOB
4	SR036	CONTROL ROD
5	SR177	CASING BACK
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR153	ORIFICE SHIELD
8	SR179	PILOT BRACKET (NAT)
8	SR032	PILOT BRACKET (LPG)
9	R6308	PILOT ASSEMBLY (LPG ONLY) (INCLUDES ITEMS 10 & 11)
9	R6307	PILOT ASSEMBLY (NAT ONLY) (INCLUDES ITEMS 10 & 11)
10	R6309	SPARK IGNITOR
11	R6310	PILOT THERMOCOUPLE
12	SR143	TUBING - GAS VALVE TO PILOT
13	SR112	VALVE BRACKET
14	R2277	GAS VALVE - COPRECI
15	SR139	TUBING - GAS VALVE TO BURNER
16	SR221	TUBING - INLET REGULATOR TO GAS VALVE
17	R5097	INLET REGULATOR - NAT
17	R5098	INLET REGULATOR - LPG
18	10753	INLET REGULATOR BRACKET
19	R2314	ORIFICE HOLDER
20	R2317	MAIN BURNER ORIFICE - NAT
20	R2476	MAIN BURNER ORIFICE - LPG
21	R2331	BURNER
22	R2305	CHROME GRILL
23	SR134	CASING LOUVER (2 REQUIRED)
24	SR129	REFLECTOR ASSEMBLY
25	SR135	HEAT SHIELD
26	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

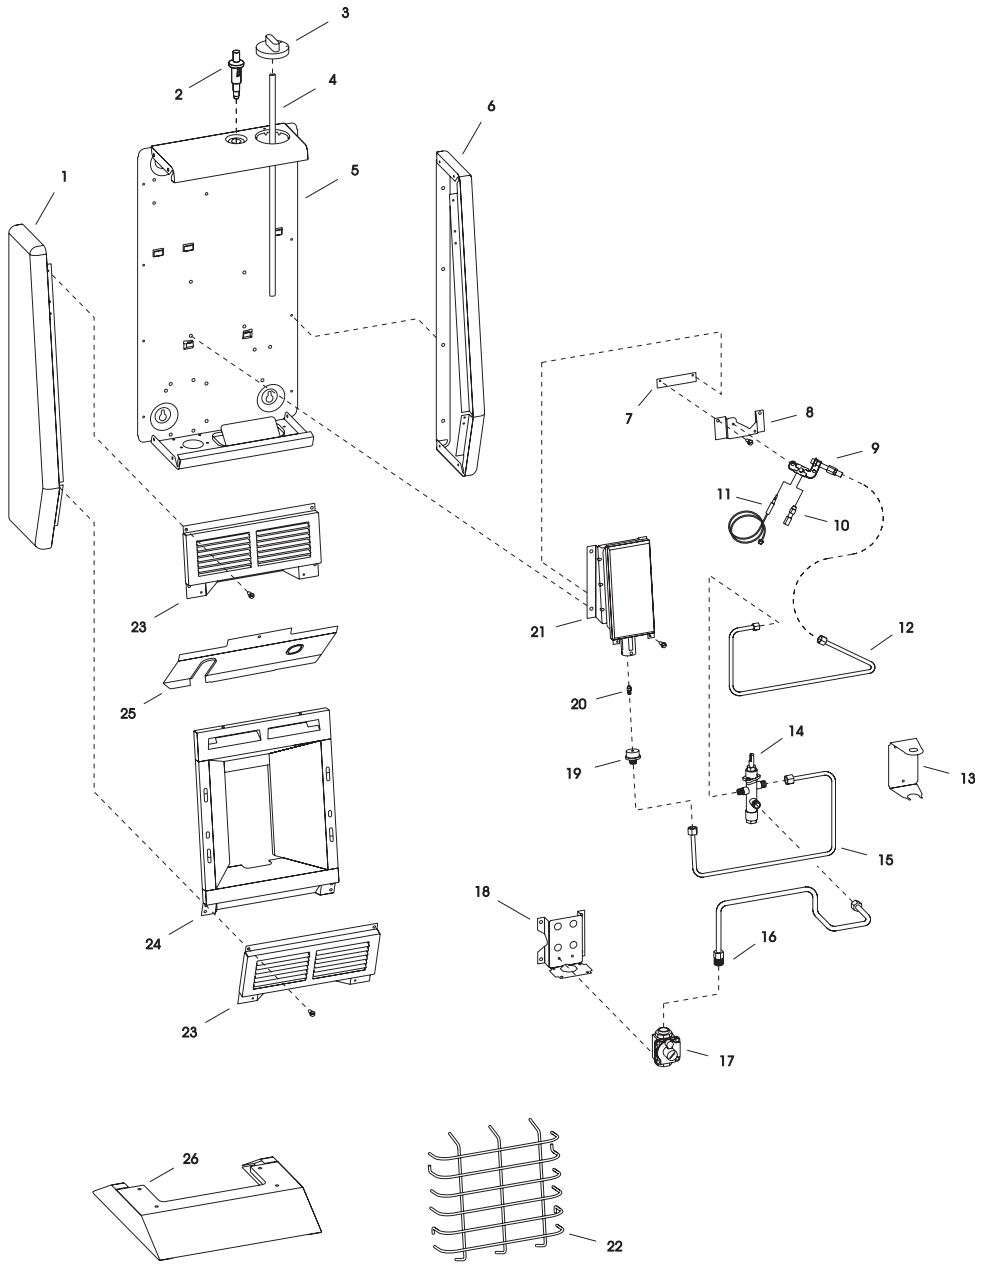

SR-10-3

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	SR174	CASING SIDE ASSEMBLY - LEFT
2	SR180	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R2351	GAS VALVE -SIT
7	R2406	MALE CONNECTOR 1/4 TUBE X 3/8 NPT
8	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
9	SR152	TUBING - GAS VALVE TO BURNER
10	SR214	TUBING - INLET REGULATOR TO GAS VALVE
11	SR209	INLET REGULATOR BRACKET
12	R2479A	INLET REGULATOR - NAT
12	R2480	INLET REGULATOR - LPG
13	SR158	TUBING - GAS VALVE TO PILOT (LPG ONLY)
14	R2314	ORIFICE HOLDER
15	R2317	MAIN BURNER ORIFICE - NAT
15	R2318	MAIN BURNER ORIFICE - LPG
16	R2331	BURNER
17	R2373	THERMOCOUPLE
18	R1659	ELECTRODE
19	R1654	PILOT WITH ORIFICE LPG
	R2360	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 17 AND 18)
19	R1655	PILOT WITH ORIFICE NAT
	R2356	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 17 AND 18)
20	SR179	PILOT BRACKET
21	SR153	ORIFICE SHIELD
22	SR226	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
23	R2487	PILOT REGULATOR (NAT ONLY)
24	SR230	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
25	R2305	CHROME GRILL
26	SR134	CASING LOUVER (2 REQUIRED)
27	SR129	REFLECTOR ASSEMBLY
28	SR135	HEAT SHIELD
29	R1992	BULB CLIP
30	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE
NS	R2299	INSTRUCTION MANUAL

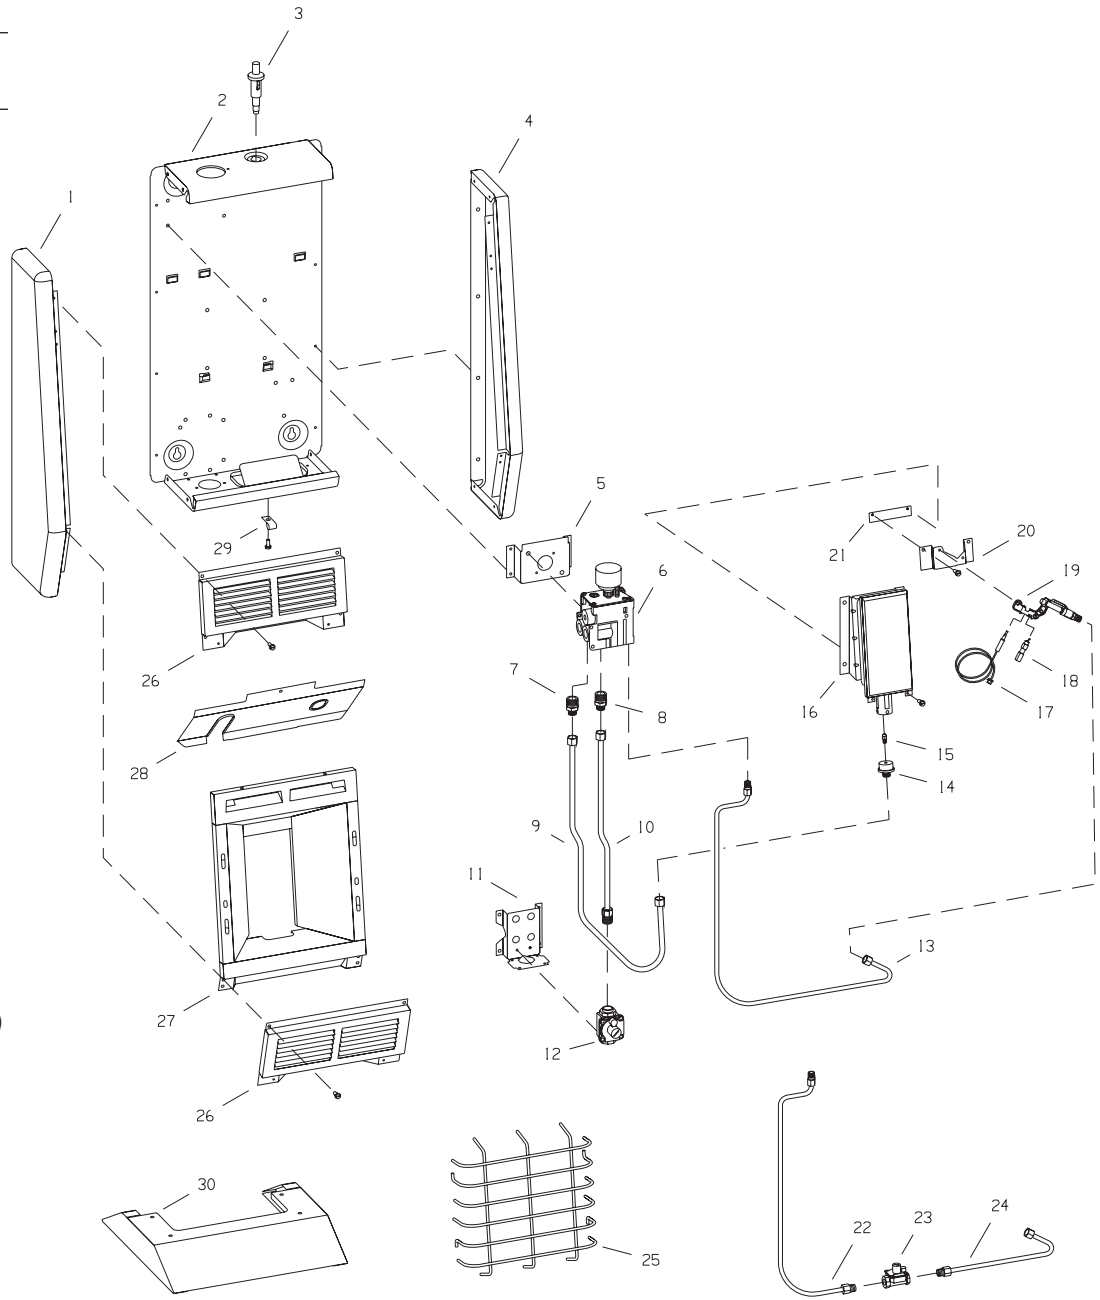

SR-10T-1

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10812	CASING SIDE ASSEMBLY - LEFT
2	SR180	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R2351	GAS VALVE -SIT
7	R2406	MALE CONNECTOR 1/4 TUBE X 3/8 NPT
8	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
9	SR152	TUBING - GAS VALVE TO BURNER
10	SR214	TUBING - INLET REGULATOR TO GAS VALVE
11	10753	INLET REGULATOR BRACKET
12	R5097	INLET REGULATOR - NAT
12	R5098	INLET REGULATOR - LPG
13	SR158	TUBING - GAS VALVE TO PILOT
14	R2314	ORIFICE HOLDER
15	R2317	MAIN BURNER ORIFICE - NAT
15	R2476	MAIN BURNER ORIFICE - LPG
16	R2331	BURNER
17	R5003	THERMOCOUPLE LEAD 29"
18	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY)) (INCLUDES ITEM #17)
18	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY)) (INCLUDES ITEM #17)
19	SR179	PILOT BRACKET
20	SR153	ORIFICE SHIELD
21	R2305	CHROME GRILL
22	SR134	CASING LOUVER (2 REQUIRED)
23	SR129	REFLECTOR ASSEMBLY
24	SR135	HEAT SHIELD
25	R1992	BULB CLIP
26	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

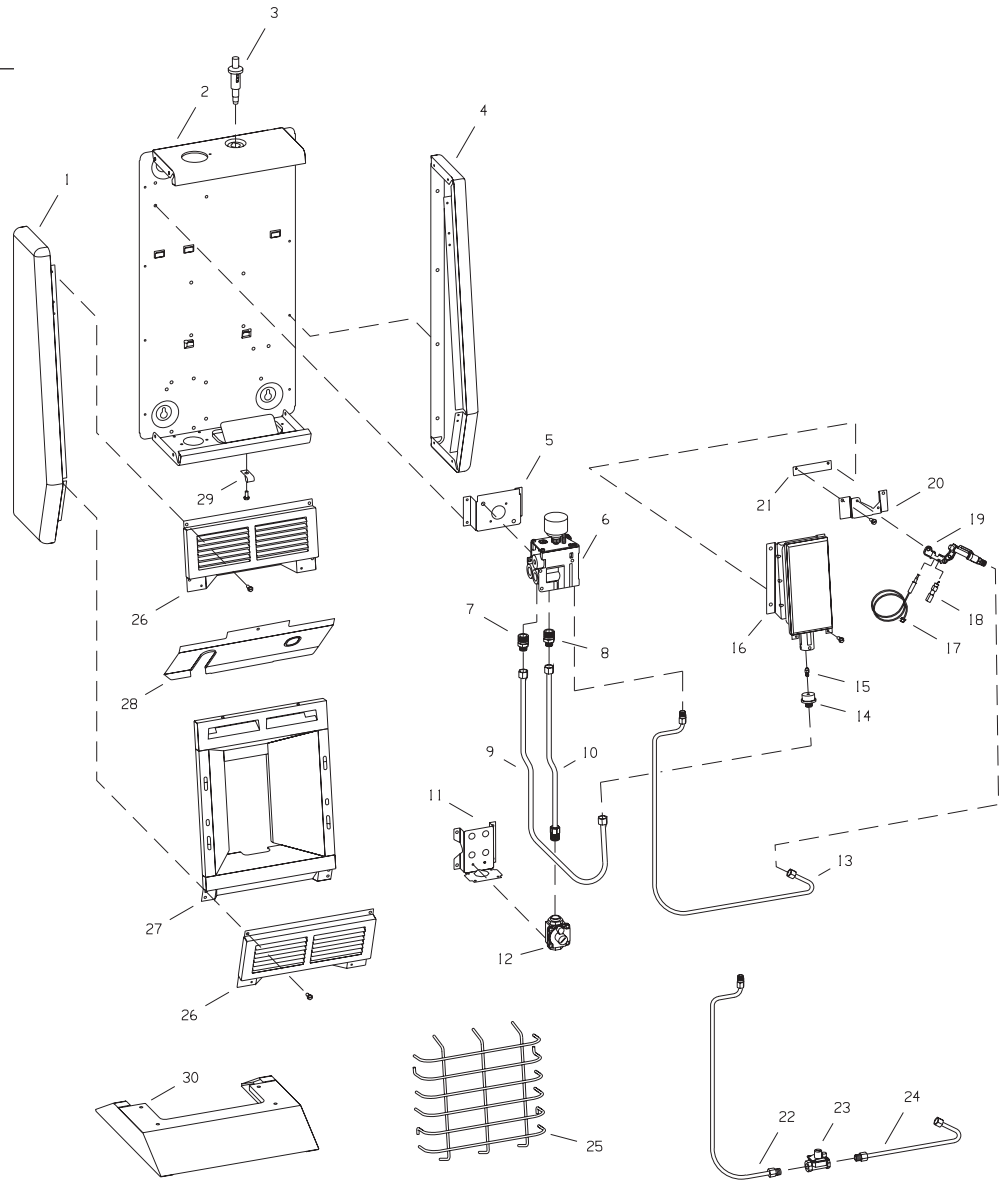

SR-10T-2

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13347	CASING SIDE ASSEMBLY - LEFT
2	SR180	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R6563	GAS VALVE -SIT
7	12438	TUBING - GAS VALVE TO BURNER
8	12437	TUBING - INLET REGULATOR TO GAS VALVE
9	10753	iNLET REGULATOR BRACKET
10	R5097	INLET REGULATOR - NAT
10	R5098	INLET REGULATOR - LPG
11	SR158	TUBING - GAS VALVE TO PILOT
12	R2314	ORIFICE HOLDER
13	R2317	MAIN BURNER ORIFICE - NAT
13	R2476	MAIN BURNER ORIFICE - LPG
14	R2331	BURNER
15	R6308	PILOT ASSEMBLY (LPG ONLY)) (INCLUDES ITEMS 16 & 17)
15	R6307	PILOT ASSEMBLY (NAT ONLY)) (INCLUDES ITEMS 16 & 17)
16	R6310	PILOT THERMOCOUPLE
17	R6309	SPARK IGNITOR
18	SR179	PILOT BRACKET (NAT)
18	SR032	PILOT BRACKET (LPG)
19	SR153	ORIFICE SHIELD
20	R2305	CHROME GRILL
21	SR134	CASING LOUVER (2 REQUIRED)
22	SR129	REFLECTOR ASSEMBLY
23	SR135	HEAT SHIELD
24	R1992	BULB CLIP
25	SR154	OPTIONAL SRS-10 FLOOR STAND KIT
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

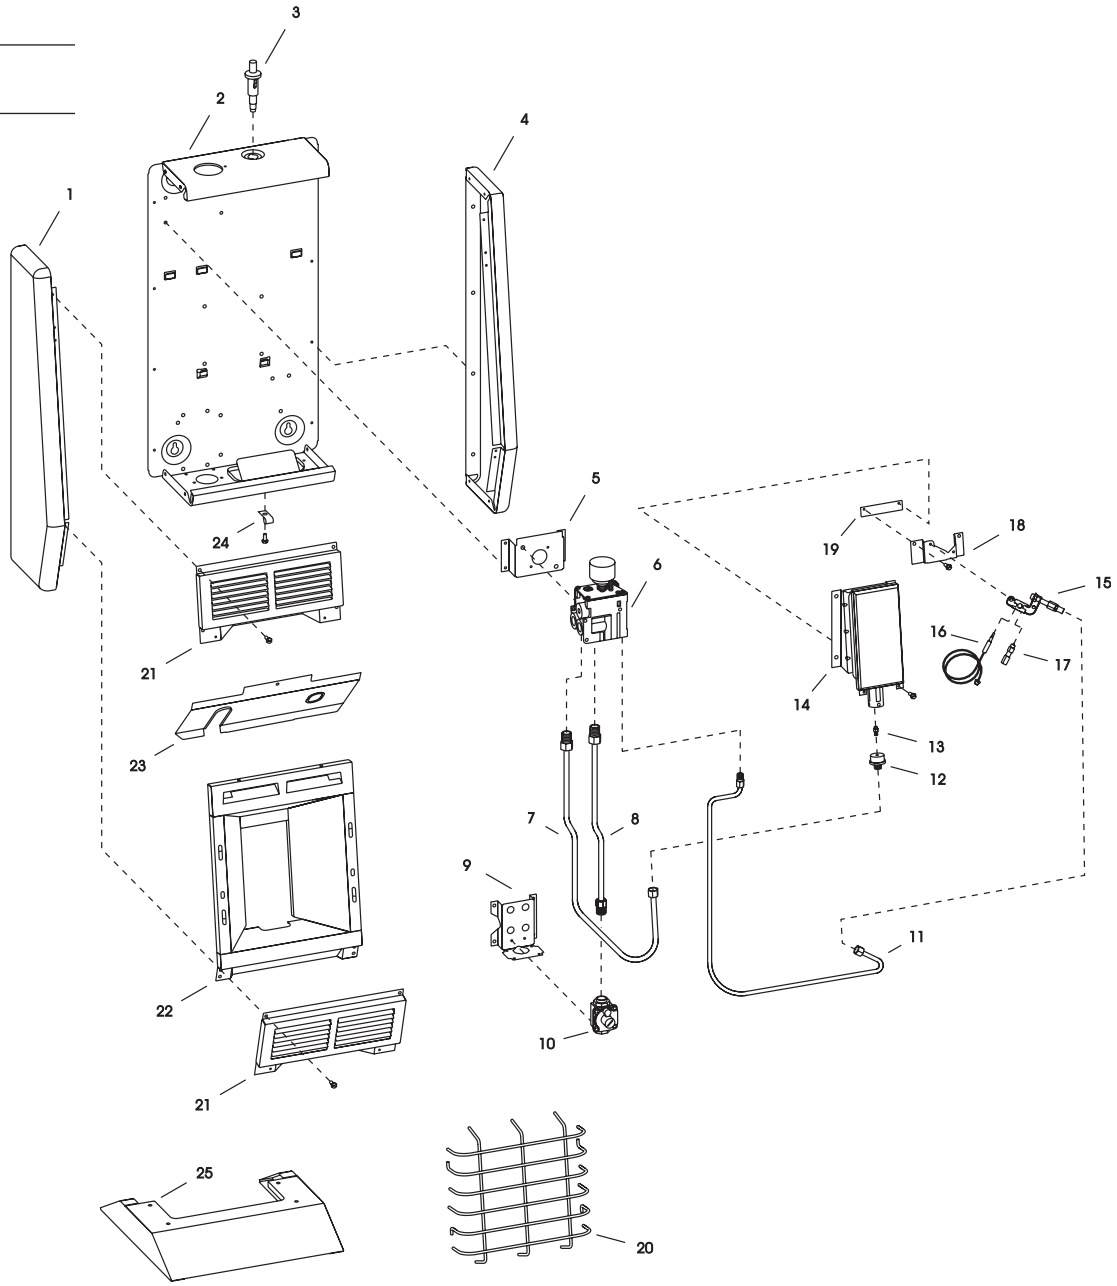

SR-10T-3

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	SR007	CASING SIDE ASSEMBLY - LEFT
2	SR068	CASING BACK
3	R2313	PIEZO IGNITOR
4	R2324	CONTROL KNOB
5	SR036	CONTROL ROD
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR119	ORIFICE SHIELD
8	SR032	PILOT BRACKET - LPG
8	SR179	PILOT BRACKET - NAT
9	R1655	PILOT WITH ORIFICE NAT
	R2356	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 10 AND 11)
9	R1654	PILOT WITH ORIFICE LPG
	R2360	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 10 AND 11)
10	R1659	ELECTRODE
11	R2373	THERMOCOUPLE
12	SR086	TUBING - GAS VALVE TO PILOT (LPG ONLY)
13	SR022	VALVE BRACKET
14	R1649	GAS VALVE - COPRECI
15	SR081	TUBING - GAS VALVE TO BURNER ONE
16	R2314	ORIFICE HOLDER (3 REQUIRED)
17	R2315	MAIN BURNER ORIFICE - NAT (3 REQUIRED)
17	R2498	MAIN BURNER ORIFICE - LPG (3 REQUIRED)
18	R2330	BURNER
19	SR083	TUBING - GAS VALVE TO BURNER THREE
20	SR082	TUBING - GAS VALVE TO BURNER TWO
21	SR217	TUBING - INLET REGULATOR TO GAS VALVE
22	SR209	INLET REGULATOR BRACKET
23	R2479A	INLET REGULATOR - NAT
23	R2480	INLET REGULATOR - LPG
24	SR225	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
25	R2487	PILOT REGULATOR (NAT ONLY)
26	SR222	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
27	R2304	CHROME GRILL
28	SR076	CASING LOUVER (2 REQUIRED)
29	SR070	REFLECTOR ASSEMBLY WITH REAR SHIELD
30	SR077	HEAT SHIELD
31	SR120	OPTIONAL SRS-18 FLOOR STAND KIT
32	SR121	OPTIONAL SRB-18 BLOWER KIT (INCLUDES 33 THROUGH 40)
33	R1454	BRASS BUSHING (4 REQUIRED)
34	R1499	RUBBER GROMMET (4 REQUIRED)
35	SR195	BLOWER PAN
36	VF068	CORD SET ASSEMBLY
37	R1468	BUSHING - HEYCO #SR5KN4
38	R2395	WIRE ASSEMBLY
39	R2522	ON/OFF SWITCH
40	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR218	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	R2291	INSTRUCTION MANUAL
NS	SR216	HARDWARE PACKAGE

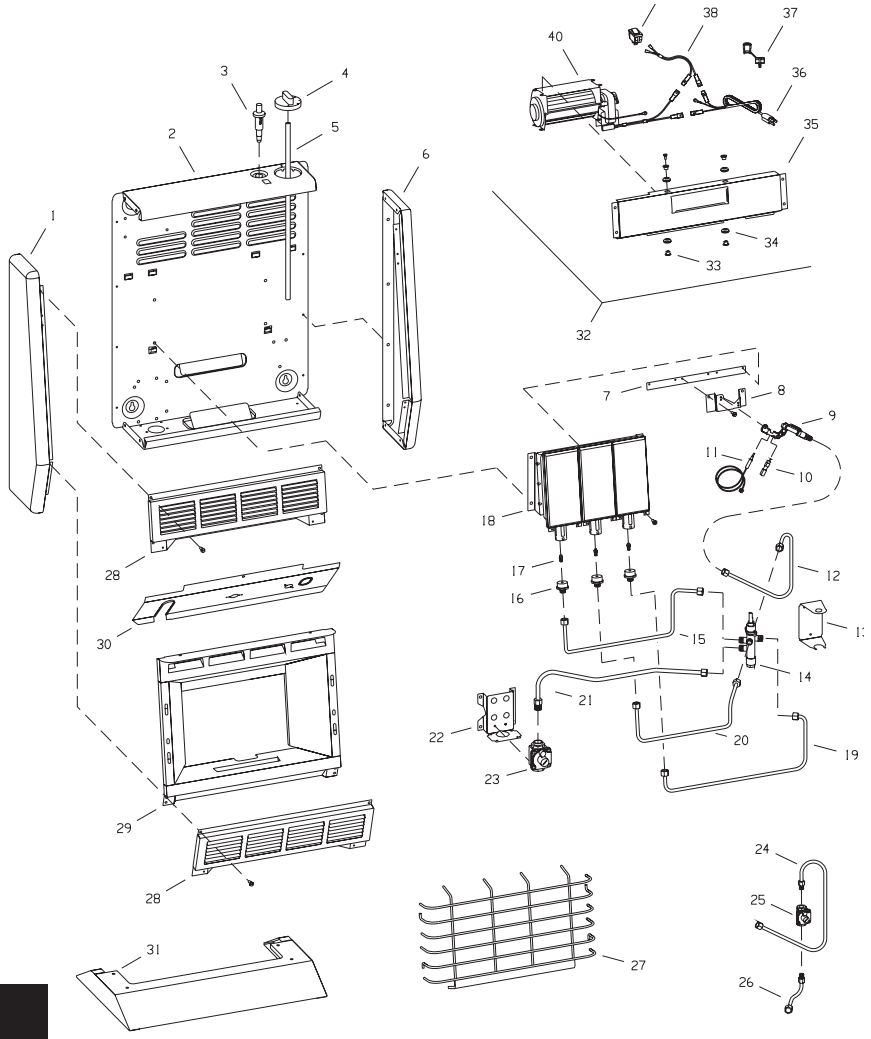

SR-18-1

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10814	CASING SIDE ASSEMBLY - LEFT
2	SR068	CASING BACK
3	R2313	PIEZO IGNITOR
4	R2324	CONTROL KNOB
5	SR036	CONTROL ROD
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR119	ORIFICE SHIELD
8	SR032	PILOT BRACKET
9	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY) (INCLUDES ITEM #10)
9	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY) (INCLUDES ITEM #10)
10	R5003	THERMOCOUPLE LEAD 29"
11	SR086	TUBING - GAS VALVE TO PILOT
12	SR022	VALVE BRACKET
13	R1649	GAS VALVE - COPRECI
14	SR081	TUBING - GAS VALVE TO BURNER ONE
15	SR083	TUBING - GAS VALVE TO BURNER THREE
16	R2314	ORIFICE HOLDER (3 REQUIRED)
17	R2315	MAIN BURNER ORIFICE - NAT (3 REQUIRED)
17	R2498	MAIN BURNER ORIFICE - LPG (3 REQUIRED)
18	R2330	BURNER
19	SR082	TUBING - GAS VALVE TO BURNER TWO
20	SR217	TUBING - INLET REGULATOR TO GAS VALVE
21	10753	INLET REGULATOR BRACKET
22	R5097	INLET REGULATOR - NAT
22	R5098	INLET REGULATOR - LPG
23	R2304	CHROME GRILL
24	SR076	CASING LOUVER (2 REQUIRED)
25	SR070	REFLECTOR ASSEMBLY WITH REAR SHIELD
26	SR077	HEAT SHIELD
27	SR120	OPTIONAL SRS-18 FLOOR STAND KIT
28	SR121	OPTIONAL SRB-18 BLOWER KIT (INCLUDES 29 THROUGH 36)
29	R1454	BRASS BUSHING (4 REQUIRED)
30	R1499	RUBBER GROMMET (4 REQUIRED)
31	SR195	BLOWER PAN
32	VF068	CORD SET ASSEMBLY
33	R1468	BUSHING - HEYCO #SR5KN4
34	R2395	WIRE ASSEMBLY
35	R2522	ON/OFF SWITCH
36	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR218	BLOWER HARDWARE PACKAGE
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

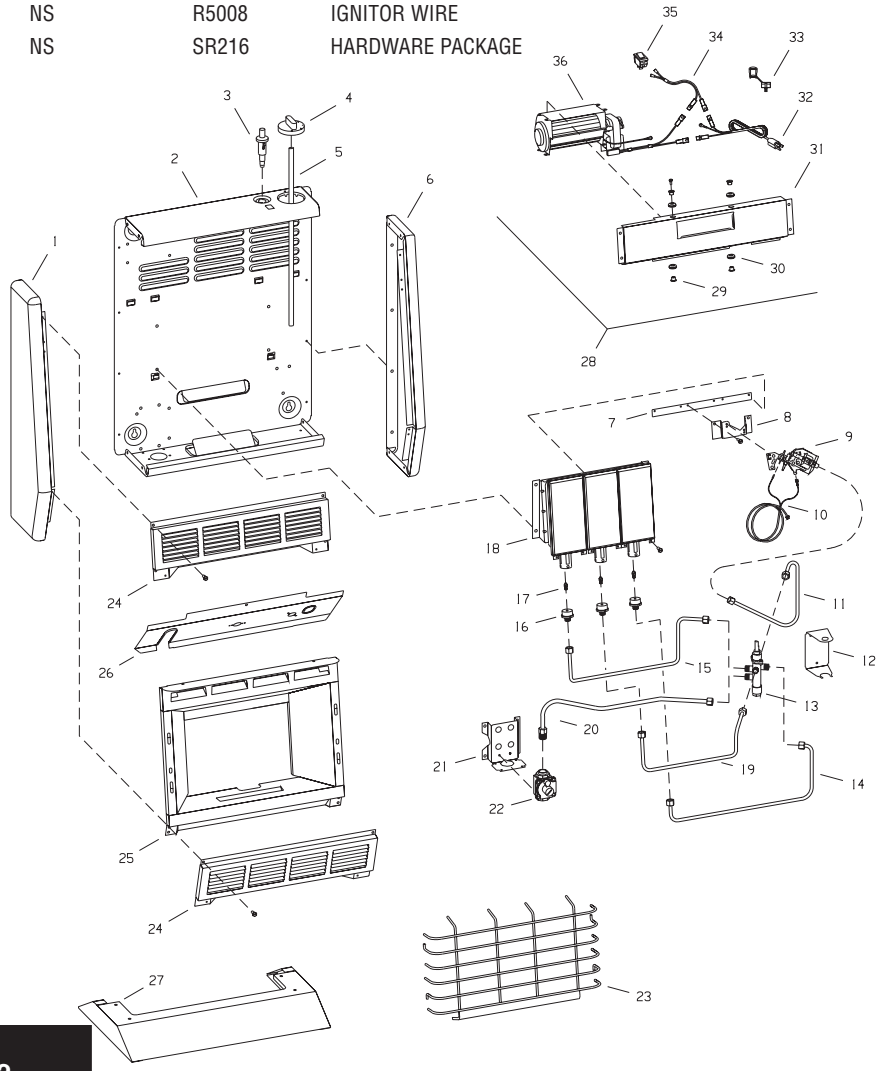

SR-18-2

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13346	CASING SIDE ASSEMBLY - LEFT
2	SR068	CASING BACK
3	R2313	PIEZO IGNITOR
4	R2324	CONTROL KNOB
5	SR036	CONTROL ROD
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR119	ORIFICE SHIELD
8	SR032	PILOT BRACKET
9	R6307	PILOT ASSEMBLY (NAT ONLY)) (INCLUDES ITEMS 10 & 11)
9	R6308	PILOT ASSEMBLY (LPG ONLY)) (INCLUDES ITEMS 10 & 11)
10	R6309	SPARK IGNITOR
11	R6310	PILOT THERMOCOUPLE
12	SR086	TUBING - GAS VALVE TO PILOT
13	SR022	VALVE BRACKET
14	R1649	GAS VALVE - COPRECI
15	SR081	TUBING - GAS VALVE TO BURNER ONE
16	SR083	TUBING - GAS VALVE TO BURNER THREE
17	R2314	ORIFICE HOLDER (3 REQUIRED)
18	R2315	MAIN BURNER ORIFICE - NAT (3 REQUIRED)
18	R2498	MAIN BURNER ORIFICE - LPG (3 REQUIRED)
19	R2330	BURNER
20	SR082	TUBING - GAS VALVE TO BURNER TWO
21	SR217	TUBING - INLET REGULATOR TO GAS VALVE
22	10753	INLET REGULATOR BRACKET
23	R5097	INLET REGULATOR - NAT
23	R5098	INLET REGULATOR - LPG
24	R2304	CHROME GRILL
25	SR076	CASING LOUVER (2 REQUIRED)
26	SR070	REFLECTOR ASSEMBLY WITH REAR SHIELD
27	SR077	HEAT SHIELD
28	SR120	OPTIONAL SRS-18 FLOOR STAND KIT
29	SR121	OPTIONAL SRB-18 BLOWER KIT (INCLUDES 29 THROUGH 36)
30	R1454	BRASS BUSHING (4 REQUIRED)
31	R1499	RUBBER GROMMET (4 REQUIRED)
32	SR195	BLOWER PAN
33	VF068	CORD SET ASSEMBLY
34	R1468	BUSHING - HEYCO #SR5KN4
35	R2395	WIRE ASSEMBLY
36	R2522	ON/OFF SWITCH
37	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR218	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

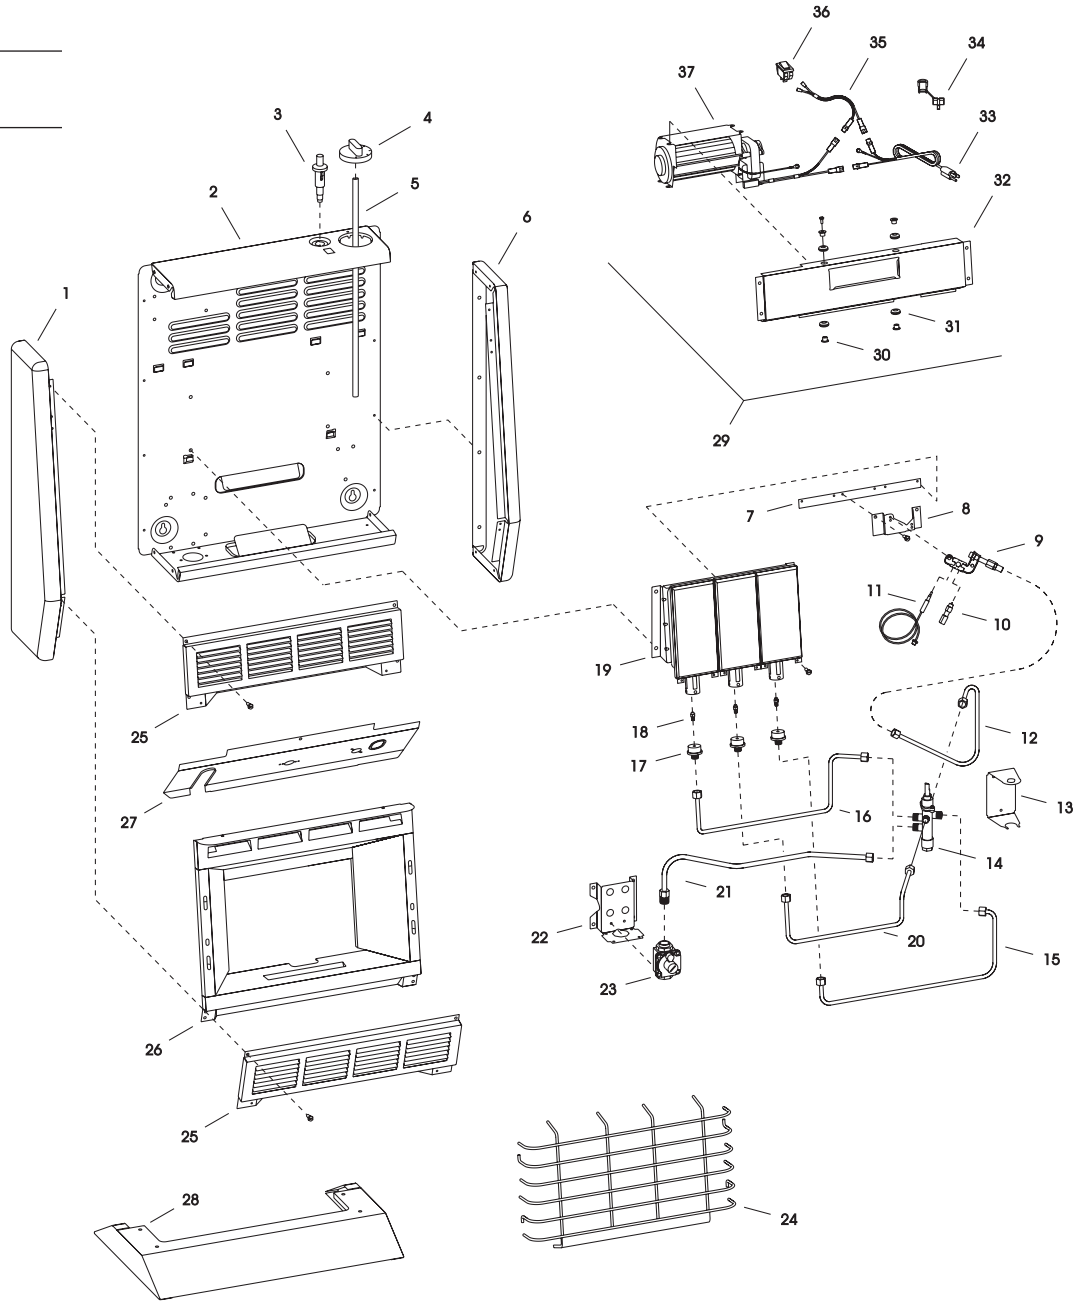

SR-18-3

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	SR058	CASING SIDE ASSEMBLY - LEFT
2	SR090	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R2351	GAS VALVE -SIT
7	R2330	BURNER
8	SR119	ORIFICE SHIELD
9	SR032	PILOT BRACKET - LPG
9	SR032	PILOT BRACKET - NAT
10	R1655	PILOT WITH ORIFICE NAT
	R2355	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 11 AND 12)
10	R1654	PILOT WITH ORIFICE LPG
	R2359	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 11 AND 12)
11	R1659	ELECTRODE
12	R2372	THERMOCOUPLE
13	R2315	MAIN BURNER ORIFICE - NAT (3 REQUIRED)
13	R2498	MAIN BURNER ORIFICE - LPG (3 REQUIRED)
14	R2314	ORIFICE HOLDER (3 REQUIRED)
15	SR204	TUBING - MANIFOLD TO BURNER TWO
16	SR201	TUBING - MANIFOLD TO BURNER ONE AND THREE (2 REQUIRED)
17	SR098	TUBING - GAS VALVE TO PILOT (LPG ONLY)
18	R2334	MANIFOLD
19	R2479A	INLET REGULATOR - NAT
19	R2480	INLET REGULATOR - LPG
20	SR209	INLET REGULATOR BRACKET
21	SR208	TUBING - GAS VALVE TO MANIFOLD
22	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
23	SR214	TUBING - INLET REGULATOR TO GAS VALVE
24	SR226	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
25	R2487	PILOT REGULATOR (NAT ONLY)
26	SR227	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
27	R2304	CHROME GRILL
28	SR076	CASING LOUVER (2 REQUIRED)
29	SR070	REFLECTOR ASSEMBLY
30	SR077	HEAT SHIELD
31	R1992	BULB CLIP
32	SR120	OPTIONAL SRS-18 FLOOR STAND KIT
33	SR122	OPTIONAL SRB-18T BLOWER KIT (INCLUDES 34 THROUGH 41)
34	R1454	BRASS BUSHING (4 REQUIRED)
35	R1499	RUBBER GROMMET (4 REQUIRED)
36	SR196	BLOWER PAN
37	VF068	CORD SET ASSEMBLY

Index No.	Part No.	Description
38	R1468	BUSHING - HEYCO #SR5KN4
39	R2395	WIRE ASSEMBLY
40	R2503	FAN CONTROL
41	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE
NS	R2290	INSTRUCTION MANUAL

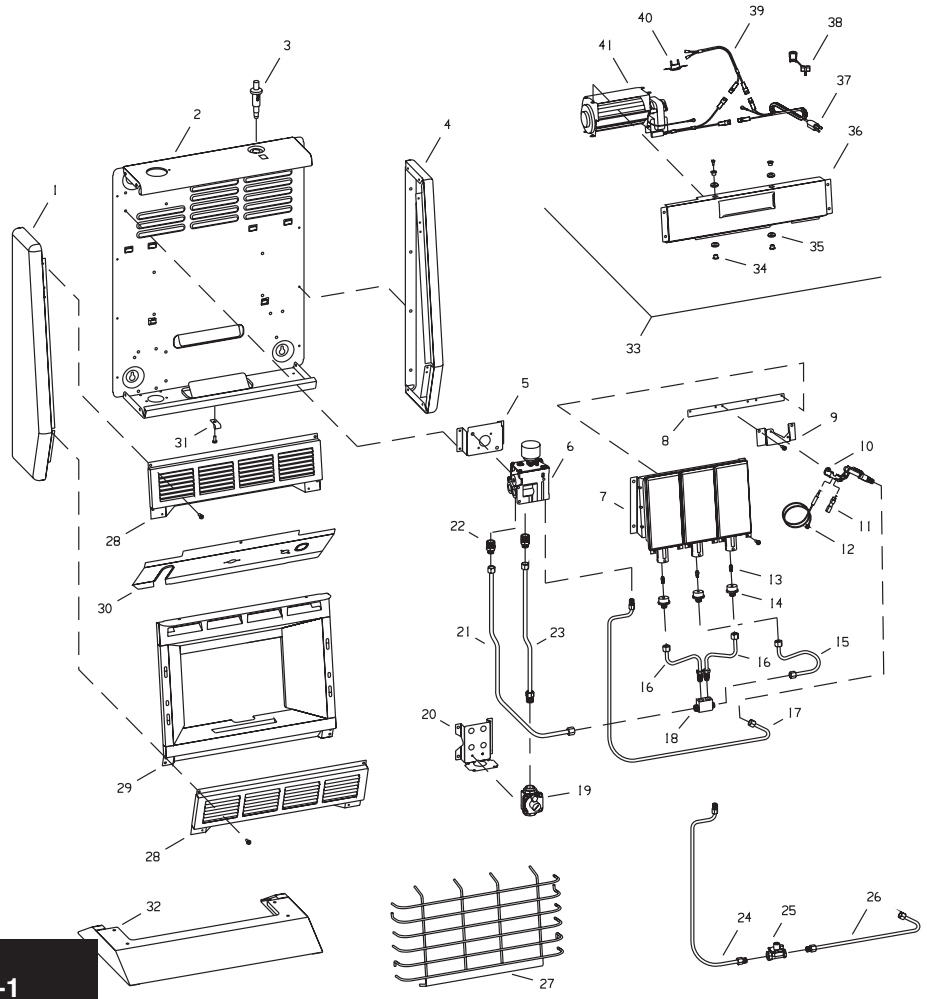

SR-18T-1

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10811	CASING SIDE ASSEMBLY - LEFT
2	SR090	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R2351	GAS VALVE -SIT
7	R2330	BURNER
8	SR119	ORIFICE SHIELD
9	SR032	PILOT BRACKET
10	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY)) (INCLUDES ITEM #11)
10	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY)) (INCLUDES ITEM #11)
11	R5003	THERMOCOUPLE LEAD 29"
12	R2315	MAIN BURNER ORIFICE - NAT (3 REQUIRED)
12	R2498	MAIN BURNER ORIFICE - LPG (3 REQUIRED)
13	R2314	ORIFICE HOLDER (3 REQUIRED)
14	SR204	TUBING - MANIFOLD TO BURNER TWO
15	SR201	TUBING - MANIFOLD TO BURNER ONE AND THREE (2 REQUIRED)
16	SR098	TUBING - GAS VALVE TO PILOT
17	R2334	MANIFOLD
18	R5097	INLET REGULATOR - NAT
18	R5098	INLET REGULATOR - LPG
19	10753	INLET REGULATOR BRACKET
20	SR208	TUBING - GAS VALVE TO MANIFOLD
21	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
22	SR214	TUBING - INLET REGULATOR TO GAS VALVE
23	R2304	CHROME GRILL
24	SR076	CASING LOUVER (2 REQUIRED)
25	SR070	REFLECTOR ASSEMBLY
26	SR077	HEAT SHIELD
27	R1992	BULB CLIP
28	SR120	OPTIONAL SRS-18 FLOOR STAND KIT
29	SR122	OPTIONAL SRB-18T BLOWER KIT (INCLUDES 30 THROUGH 37)
30	R1454	BRASS BUSHING (4 REQUIRED)
31	R1499	RUBBER GROMMET (4 REQUIRED)
32	SR196	BLOWER PAN
33	VF068	CORD SET ASSEMBLY
34	R1468	BUSHING - HEYCO #SR5KN4
35	R2395	WIRE ASSEMBLY
36	R2503	FAN CONTROL
37	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

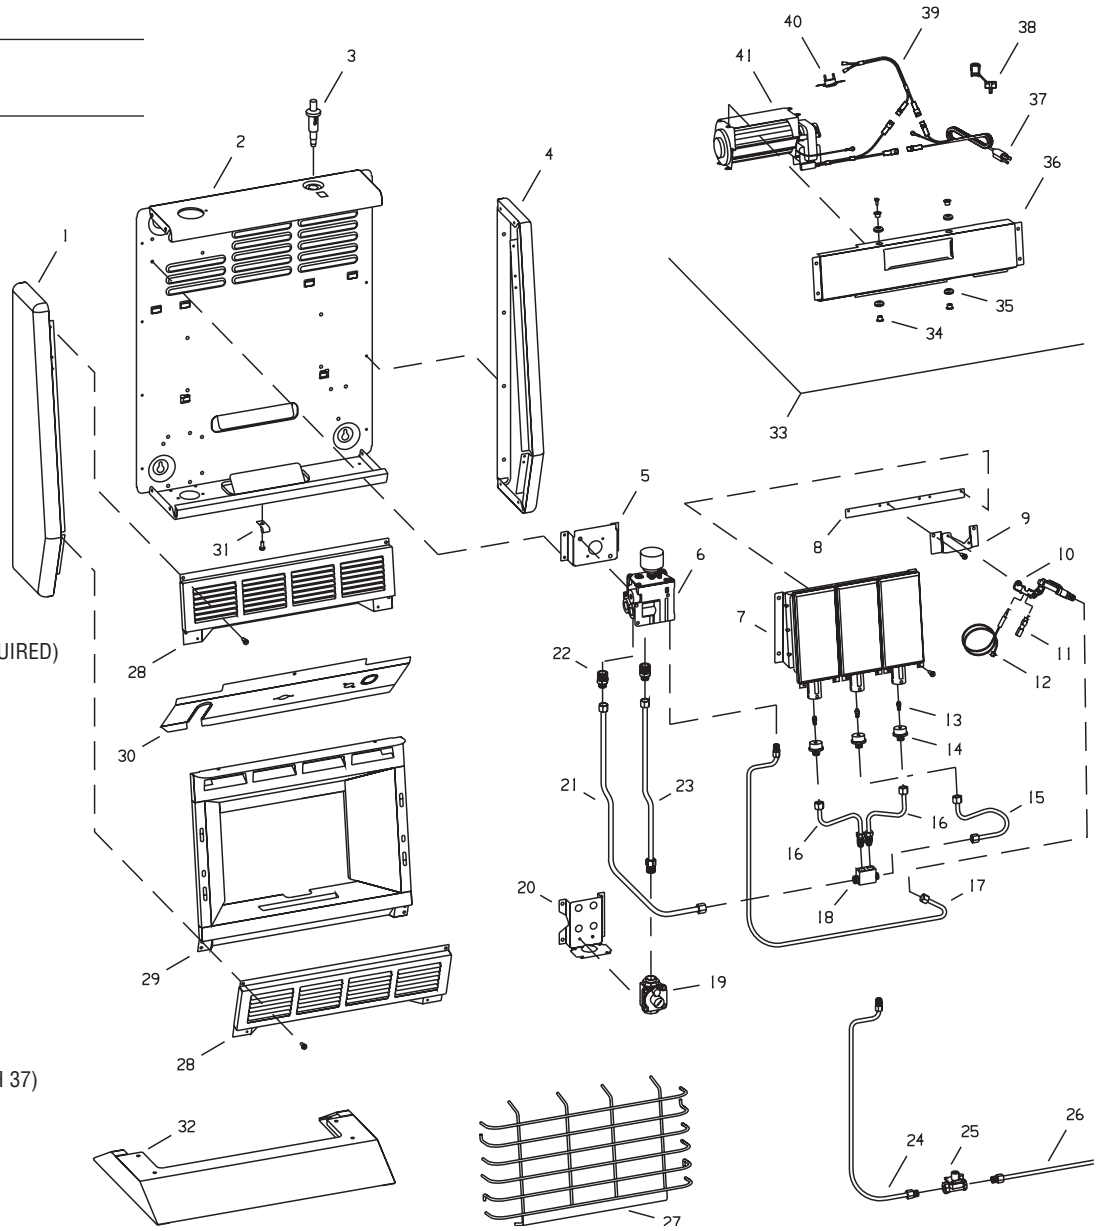

SR-18T-2

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13348	CASING SIDE ASSEMBLY - LEFT
2	SR090	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R6563	GAS VALVE -SIT
7	R2330	BURNER
8	SR119	ORIFICE SHIELD
9	SR032	PILOT BRACKET
10	R6307	PILOT ASSEMBLY (NAT ONLY)) (INCLUDES ITEMS 11 & 12)
10	R6308	PILOT ASSEMBLY (LPG ONLY)) (INCLUDES ITEMS 11 & 12)
11	R6310	PILOT THERMOCOUPLE
12	R6309	SPARK IGNITOR
13	R2315	MAIN BURNER ORIFICE - NAT (3 REQUIRED)
13	R2498	MAIN BURNER ORIFICE - LPG (3 REQUIRED)
14	R2314	ORIFICE HOLDER (3 REQUIRED)
15	SR204	TUBING - MANIFOLD TO BURNER TWO
16	SR201	TUBING - MANIFOLD TO BURNER ONE AND THREE (2 REQUIRED)
17	SR098	TUBING - GAS VALVE TO PILOT
18	R2334	MANIFOLD
19	R5097	INLET REGULATOR - NAT
19	R5098	INLET REGULATOR - LPG
20	10753	INLET REGULATOR BRACKET
21	12439	TUBING - GAS VALVE TO MANIFOLD
22	12437	TUBING - INLET REGULATOR TO GAS VALVE
23	R2304	CHROME GRILL
24	SR076	CASING LOUVER (2 REQUIRED)
25	SR070	REFLECTOR ASSEMBLY
26	SR077	HEAT SHIELD
27	R1992	BULB CLIP
28	SR120	OPTIONAL SRS-18 FLOOR STAND KIT
29	SR122	OPTIONAL SRB-18T BLOWER KIT (INCLUDES 30 THROUGH 37)
30	R1454	BRASS BUSHING (4 REQUIRED)
31	R1499	RUBBER GROMMET (4 REQUIRED)
32	SR196	BLOWER PAN
33	R2099	CORD SET ASSEMBLY
34	R1468	BUSHING - HEYCO #SR5KN4
35	R2395	WIRE ASSEMBLY
36	R2503	FAN CONTROL
37	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

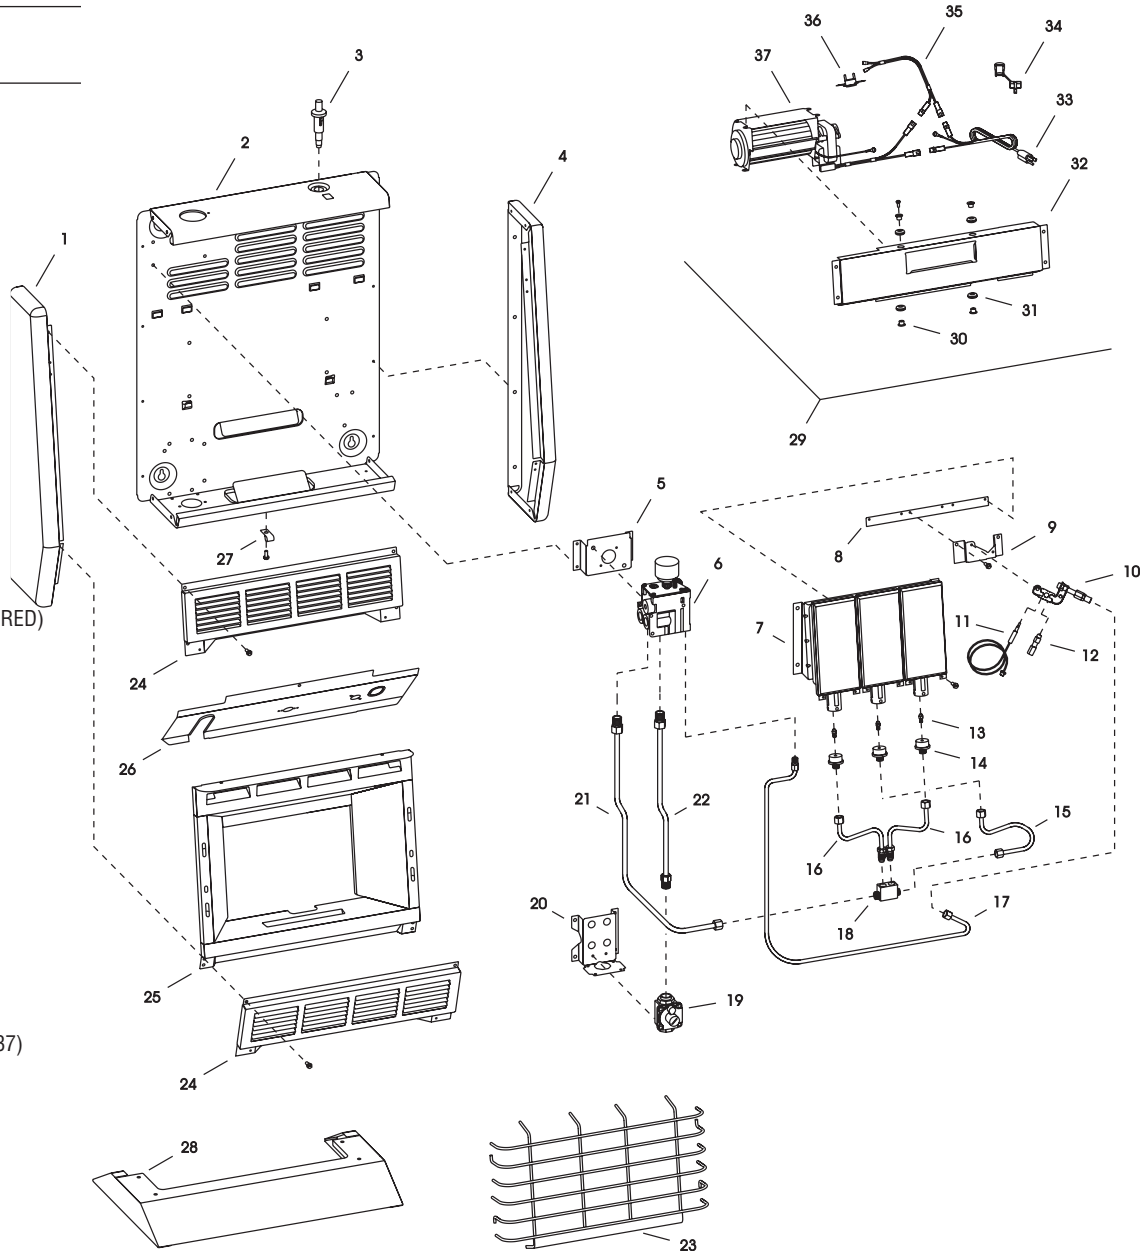

SR-18T-3

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	SR007	CASING SIDE ASSEMBLY - LEFT
2	SR004	CASING BACK
3	R2313	PIEZO IGNITOR
4	R2324	CONTROL KNOB
5	SR036	CONTROL ROD
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR114	ORIFICE SHIELD
8	SR032	PILOT BRACKET - LPG
8	SR179	PILOT BRACKET - NAT
9	R1655	PILOT WITH ORIFICE NAT
	R2356	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 10 AND 11)
9	R1654	PILOT WITH ORIFICE LPG
	R2360	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 10 AND 11)
10	R1659	ELECTRODE
11	R2373	THERMOCOUPLE
12	SR037	TUBING - GAS VALVE TO PILOT (LPG ONLY)
13	SR022	VALVE BRACKET
14	R1649	GAS VALVE - COPRECI
15	SR023	TUBING - GAS VALVE TO TEE
16	SR027	TUBING - TEE TO BURNER FOUR
17	R2310	TEE - (2 REQUIRED)
18	SR028	TUBING - TEE TO BURNER TWO
19	R2314	ORIFICE HOLDER (5 REQUIRED)
20	R2315	MAIN BURNER ORIFICE - NAT (5 REQUIRED)
20	R2498	MAIN BURNER ORIFICE - LPG (5 REQUIRED)
21	R2329	BURNER
22	SR209	INLET REGULATOR BRACKET
23	R2479A	INLET REGULATOR - NAT
23	R2480	INLET REGULATOR - LPG
24	SR215	TUBING - INLET REGULATOR TO GAS VALVE
25	SR029	TUBING - GAS VALVE TO BURNER THREE
26	SR024	TUBING - TEE TO BURNER ONE & FIVE (2 REQUIRED)
27	SR026	TUBING - GAS VALVE TO TEE
28	SR223	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
29	R2487	PILOT REGULATOR (NAT ONLY)
30	SR222	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
31	R2303	CHROME GRILL
32	SR017	CASING LOUVER (2 REQUIRED)
33	SR009	REFLECTOR ASSEMBLY
34	SR018	HEAT SHIELD
35	SR115	OPTIONAL SRS-30 FLOOR STAND KIT
36	SR118	OPTIONAL SRB-30 BLOWER KIT (INCLUDES 37 THROUGH 44)
37	R1454	BRASS BUSHING (4 REQUIRED)
38	R1499	RUBBER GROMMET (4 REQUIRED)
39	SR197	BLOWER PAN
40	VF068	CORD SET ASSEMBLY
41	R1468	BUSHING - HEYCO #SR5KN4
42	R2395	WIRE ASSEMBLY
43	R2522	ON/OFF SWITCH
44	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR218	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	R2285	INSTRUCTION MANUAL
NS	SR216	HARDWARE PACKAGE

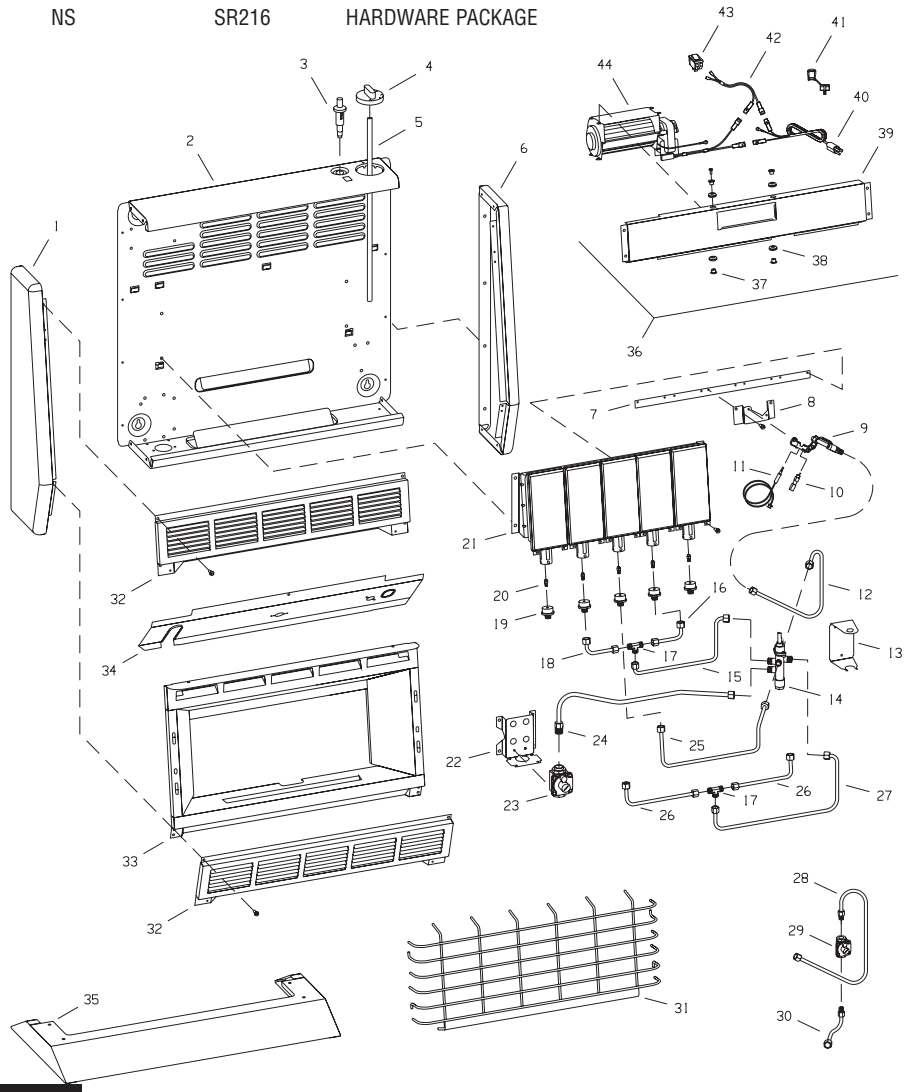

SR-30-1

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10814	CASING SIDE ASSEMBLY - LEFT
2	SR004	CASING BACK
3	R2313	PIEZO IGNITOR
4	R2324	CONTROL KNOB
5	SR036	CONTROL ROD
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR114	ORIFICE SHIELD
8	SR032	PILOT BRACKET
9	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY)) (INCLUDES ITEM #10)
9	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY)) (INCLUDES ITEM #10)
10	R5003	THERMOCOUPLE LEAD 29"
11	SR037	TUBING - GAS VALVE TO PILOT
12	SR022	VALVE BRACKET
13	R1649	GAS VALVE - COPRECI
14	SR023	TUBING - GAS VALVE TO TEE
15	SR027	TUBING - TEE TO BURNER FOUR
16	R2310	TEE - (2 REQUIRED)
17	SR028	TUBING - TEE TO BURNER TWO
18	R2314	ORIFICE HOLDER (5 REQUIRED)
19	R2315	MAIN BURNER ORIFICE - NAT (5 REQUIRED)
19	R2498	MAIN BURNER ORIFICE - LPG (5 REQUIRED)
20	R2329	BURNER
21	10753	INLET REGULATOR BRACKET
22	R5097	INLET REGULATOR - NAT
22	R5098	INLET REGULATOR - LPG
23	SR215	TUBING - INLET REGULATOR TO GAS VALVE
24	SR029	TUBING - GAS VALVE TO BURNER THREE
25	SR024	TUBING - TEE TO BURNER ONE & FIVE (2 REQUIRED)
26	SR026	TUBING - GAS VALVE TO TEE
27	R2303	CHROME GRILL
28	SR017	CASING LOUVER (2 REQUIRED)
29	SR009	REFLECTOR ASSEMBLY
30	SR018	HEAT SHIELD
31	SR115	OPTIONAL SRS-30 FLOOR STAND KIT
32	SR118	OPTIONAL SRB-30 BLOWER KIT (INCLUDES 33 THROUGH 40)
33	R1454	BRASS BUSHING (4 REQUIRED)
34	R1499	RUBBER GROMMET (4 REQUIRED)
35	SR197	BLOWER PAN
36	VF068	CORD SET ASSEMBLY
37	R1468	BUSHING - HEYCO #SR5KN4
38	R2395	WIRE ASSEMBLY
39	R2522	ON/OFF SWITCH
40	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR218	BLOWER HARDWARE PACKAGE
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

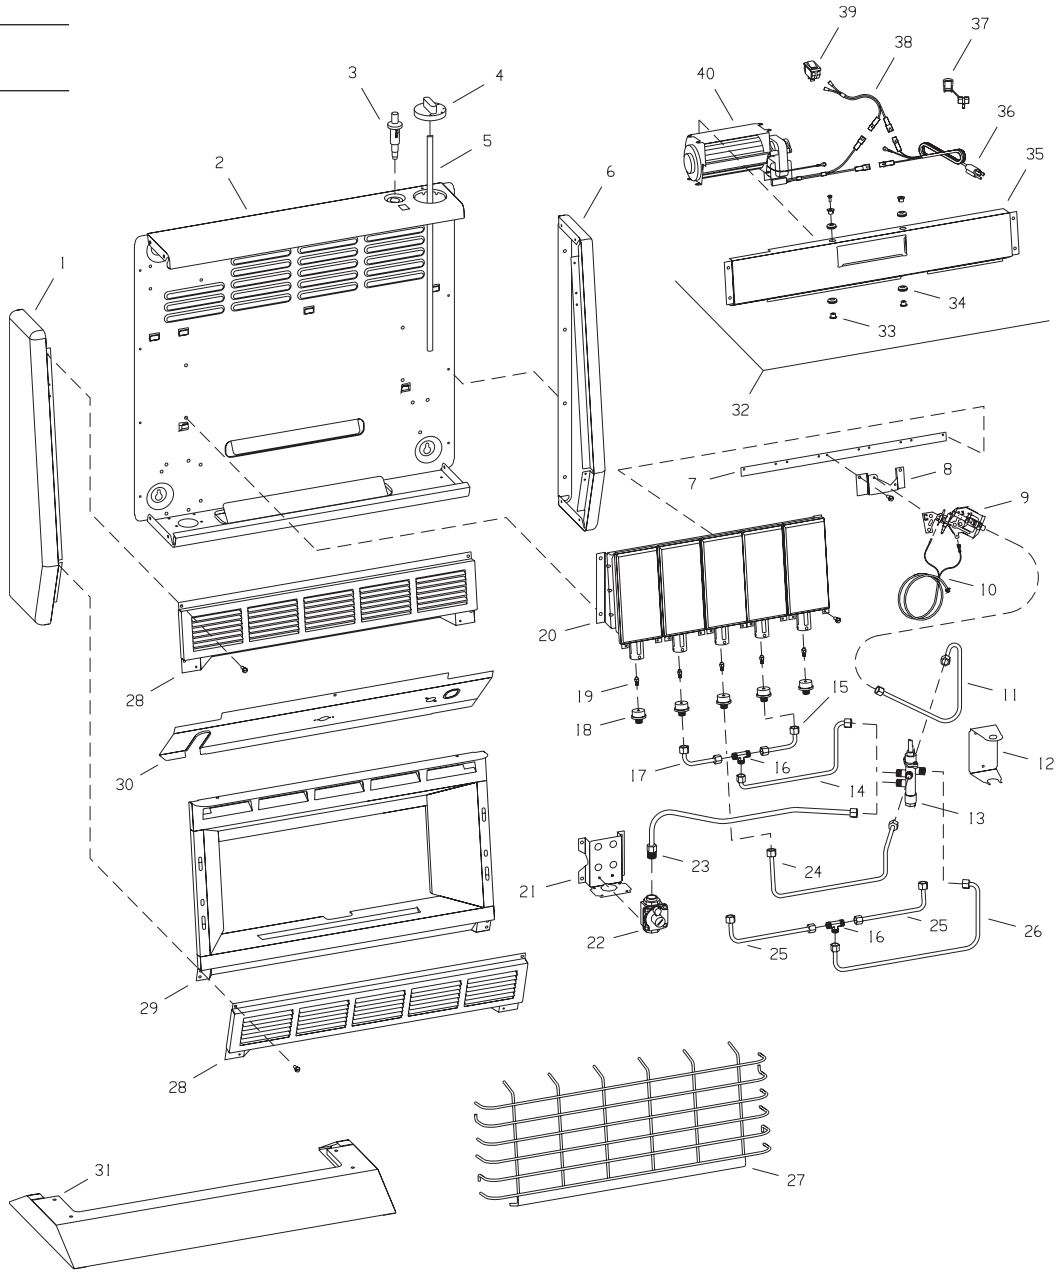

SR-30-2

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13346	CASING SIDE ASSEMBLY - LEFT
2	SR004	CASING BACK
3	R2313	PIEZO IGNITOR
4	R2324	CONTROL KNOB
5	SR036	CONTROL ROD
6	SR008	CASING SIDE ASSEMBLY - RIGHT
7	SR114	ORIFICE SHIELD
8	SR032	PILOT BRACKET
9	R6307	PILOT ASSEMBLY (NAT ONLY)) (INCLUDES ITEMS 10 & 11)
9	R6308	PILOT ASSEMBLY (LPG ONLY)) (INCLUDES ITEMS 10 & 11)
10	R6309	SPARK IGNITOR
11	R6310	PILOT THERMOCOUPLE
12	SR037	TUBING - GAS VALVE TO PILOT
13	SR022	VALVE BRACKET
14	R1649	GAS VALVE - COPRECI
15	SR023	TUBING - GAS VALVE TO TEE
16	SR027	TUBING - TEE TO BURNER FOUR
17	R2310	TEE - (2 REQUIRED)
18	SR028	TUBING - TEE TO BURNER TWO
19	R2314	ORIFICE HOLDER (5 REQUIRED)
20	R2315	MAIN BURNER ORIFICE - NAT (5 REQUIRED)
20	R2498	MAIN BURNER ORIFICE - LPG (5 REQUIRED)
21	R2329	BURNER
22	10753	INLET REGULATOR BRACKET
23	R5097	INLET REGULATOR - NAT
23	R5098	INLET REGULATOR - LPG
24	SR215	TUBING - INLET REGULATOR TO GAS VALVE
25	SR029	TUBING - GAS VALVE TO BURNER THREE
26	SR024	TUBING - TEE TO BURNER ONE & FIVE (2 REQUIRED)
27	SR026	TUBING - GAS VALVE TO TEE
28	R2303	CHROME GRILL
29	SR017	CASING LOUVER (2 REQUIRED)
30	SR009	REFLECTOR ASSEMBLY
31	SR018	HEAT SHIELD
32	SR115	OPTIONAL SRS-30 FLOOR STAND KIT
33	SR118	OPTIONAL SRB-30 BLOWER KIT (INCLUDES 33 THROUGH 40)
34	R1454	BRASS BUSHING (4 REQUIRED)
35	R1499	RUBBER GROMMET (4 REQUIRED)
36	SR197	BLOWER PAN
37	R2099	CORD SET ASSEMBLY
38	R1468	BUSHING - HEYCO #SR5KN4
39	R2395	WIRE ASSEMBLY
40	R2522	ON/OFF SWITCH
41	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR218	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

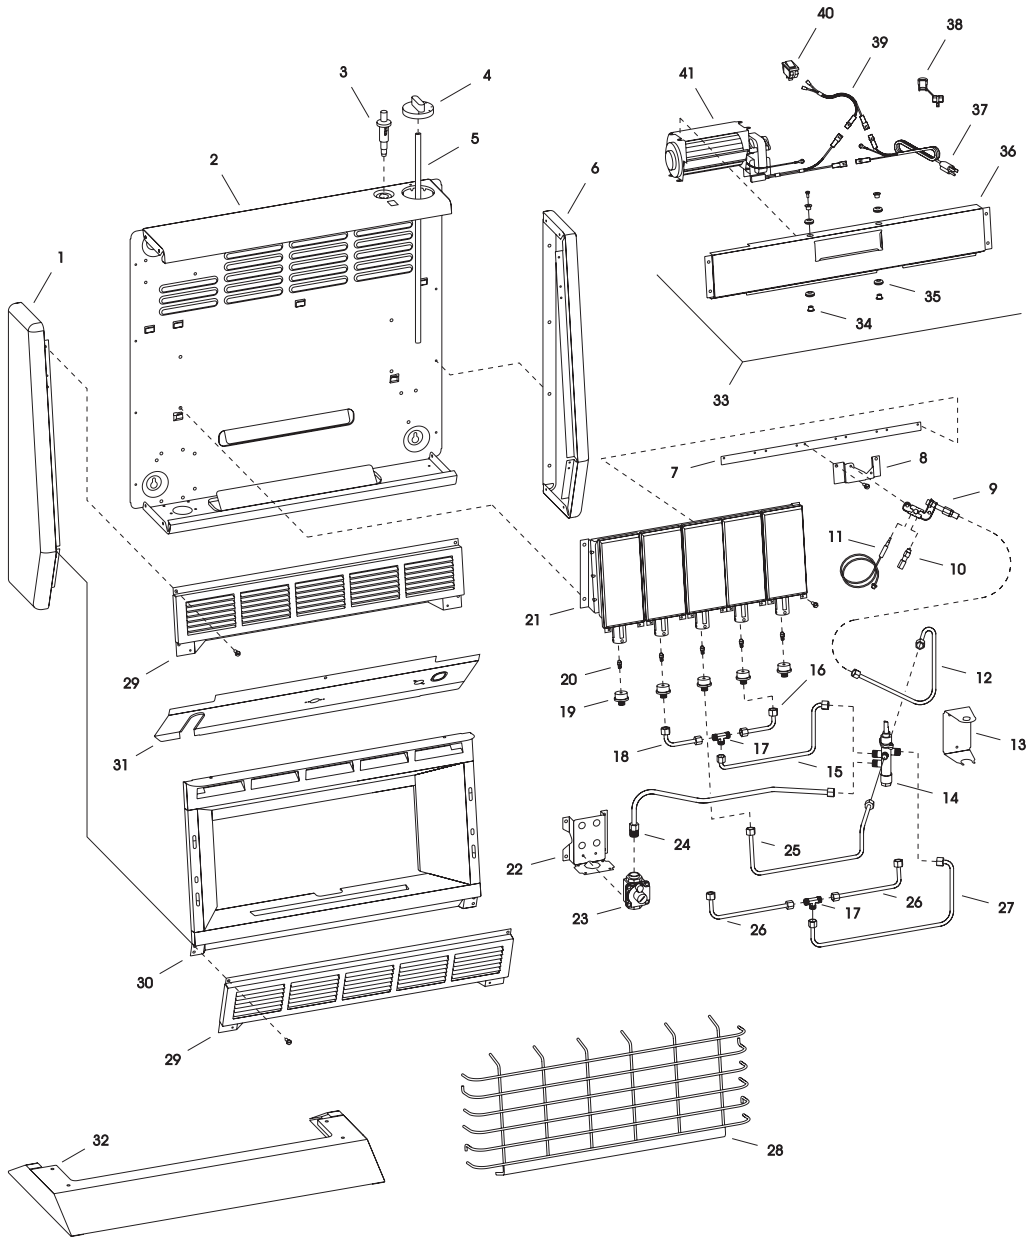

SR-30-3

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	SR058	CASING SIDE ASSEMBLY - LEFT
2	SR041	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R2351	GAS VALVE -SIT
7	R2329	BURNER
8	SR114	ORIFICE SHIELD
9	SR032	PILOT BRACKET - LPG
9	SR179	PILOT BRACKET - NAT
10	R1655	PILOT WITH ORIFICE NAT.
	R2354	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 11 AND 12)
10	R1654	PILOT WITH ORIFICE LP
	R2358	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 11 AND 12)
11	R1659	ELECTRODE
12	R2371	THERMOCOUPLE
13	R2315	MAIN BURNER ORIFICE - NAT (5 REQUIRED)
13	R2498	MAIN BURNER ORIFICE - LPG (5 REQUIRED)
14	R2314	ORIFICE HOLDER (5 REQUIRED)
15	SR203	TUBING - MANIFOLD TO BURNER THREE
16	SR202	TUBING - MANIFOLD TO BURNER ONE AND FIVE (2 REQUIRED)
17	SR201	TUBING - MANIFOLD TO BURNER TWO AND FOUR (2 REQUIRED)
18	R2333	MANIFOLD
19	SR214	TUBING - INLET REGULATOR TO GAS VALVE
20	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
21	SR205	TUBING - GAS VALVE TO MANIFOLD
22	SR209	INLET REGULATOR BRACKET
23	R2479A	INLET REGULATOR - NAT
23	R2480	INLET REGULATOR - LPG
24	SR054	TUBING - GAS VALVE TO PILOT (LPG ONLY)
25	SR224	TUBING - PILOT REGULATOR TO PILOT (NAT ONLY)
26	R2487	PILOT REGULATOR (NAT ONLY)
27	SR226	TUBING - GAS VALVE TO PILOT REGULATOR (NAT ONLY)
28	R2303	CHROME GRILL
29	SR017	CASING LOUVER (2 REQUIRED)
30	SR009	REFLECTOR ASSEMBLY
31	SR018	HEAT SHIELD
32	R1992	BULB CLIP
33	SR115	OPTIONAL SRS-30 FLOOR STAND KIT
34	SR116	OPTIONAL SRB-30T BLOWER KIT INCLUDES 35 THROUGH 42)
35	R1454	BRASS BUSHING (4 REQUIRED)
36	R1499	RUBBER GROMMET (4 REQUIRED)-
37	SR198	BLOWER PAN
38	VF068	CORD SET ASSEMBLY

Index No.	Part No.	Description
39	R1468	BUSHING - HEYCO #SR5KN4
40	R2395	WIRE ASSEMBLY
41	R2503	FAN CONTROL
42	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE
NS	R2284	INSTRUCTION MANUAL

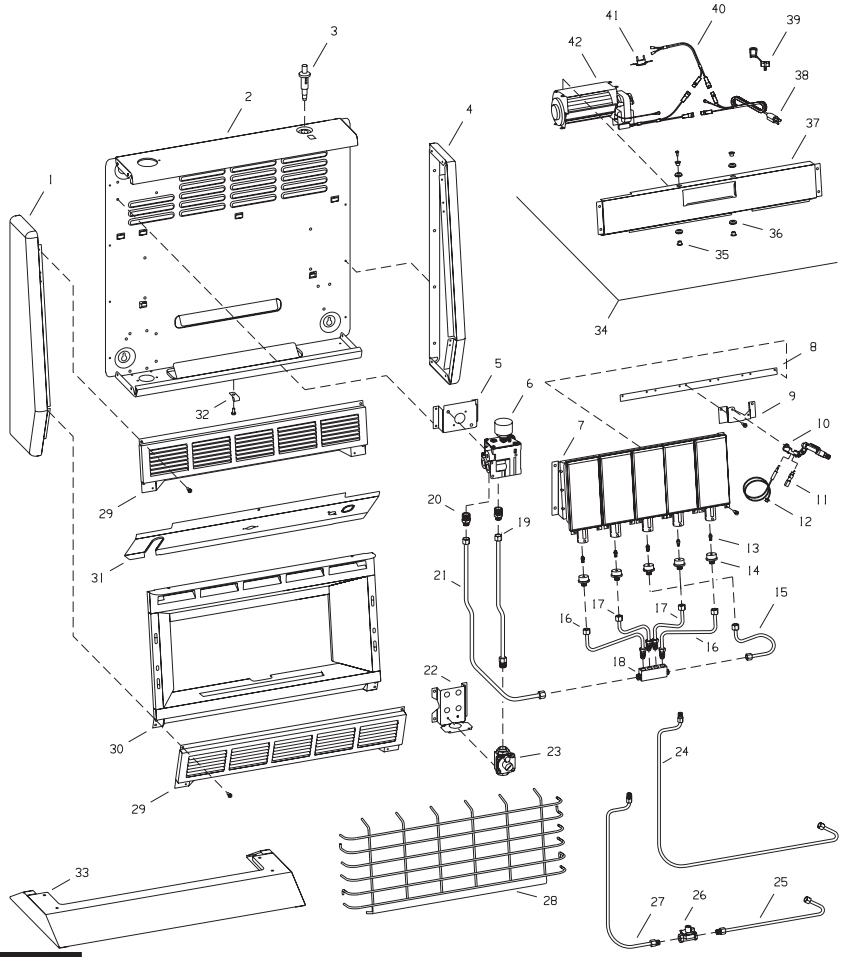

SR30T-1

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	10811	CASING SIDE ASSEMBLY - LEFT
2	SR041	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R2351	GAS VALVE -SIT
7	R2329	BURNER
8	SR114	ORIFICE SHIELD
9	SR032	PILOT BRACKET
10	R5007	PILOT/THERMOCOUPLE ASSEMBLY (NAT ONLY)) (INCLUDES ITEM #11)
10	R5001	PILOT/THERMOCOUPLE ASSEMBLY (LPG ONLY)) (INCLUDES ITEM #11)
11	R5003	THERMOCOUPLE LEAD 29"
12	R2315	MAIN BURNER ORIFICE - NAT (5 REQUIRED)
12	R2498	MAIN BURNER ORIFICE - LPG (5 REQUIRED)
13	R2314	ORIFICE HOLDER (5 REQUIRED)
14	SR203	TUBING - MANIFOLD TO BURNER THREE
15	SR202	TUBING - MANIFOLD TO BURNER ONE AND FIVE (2 REQUIRED)
16	SR201	TUBING - MANIFOLD TO BURNER TWO AND FOUR (2 REQUIRED)
17	R2333	MANIFOLD
18	SR214	TUBING - INLET REGULATOR TO GAS VALVE
19	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
20	SR205	TUBING - GAS VALVE TO MANIFOLD
21	10753	INLET REGULATOR BRACKET
22	R5097	INLET REGULATOR - NAT
22	R5098	INLET REGULATOR - LPG
23	SR054	TUBING - GAS VALVE TO PILOT
24	R2303	CHROME GRILL
25	SR017	CASING LOUVER (2 REQUIRED)
26	SR009	REFLECTOR ASSEMBLY
27	SR018	HEAT SHIELD
28	R1992	BULB CLIP
29	SR115	OPTIONAL SRS-30 FLOOR STAND KIT
30	SR116	OPTIONAL SRB-30T BLOWER KIT (INCLUDES 31 THROUGH 38)
31	R1454	BRASS BUSHING (4 REQUIRED)
32	R1499	RUBBER GROMMET (4 REQUIRED)
33	SR198	BLOWER PAN
34	VF068	CORD SET ASSEMBLY
35	R1468	BUSHING - HEYCO #SR5KN4
36	R2395	WIRE ASSEMBLY
37	R2503	FAN CONTROL
38	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	R5008	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

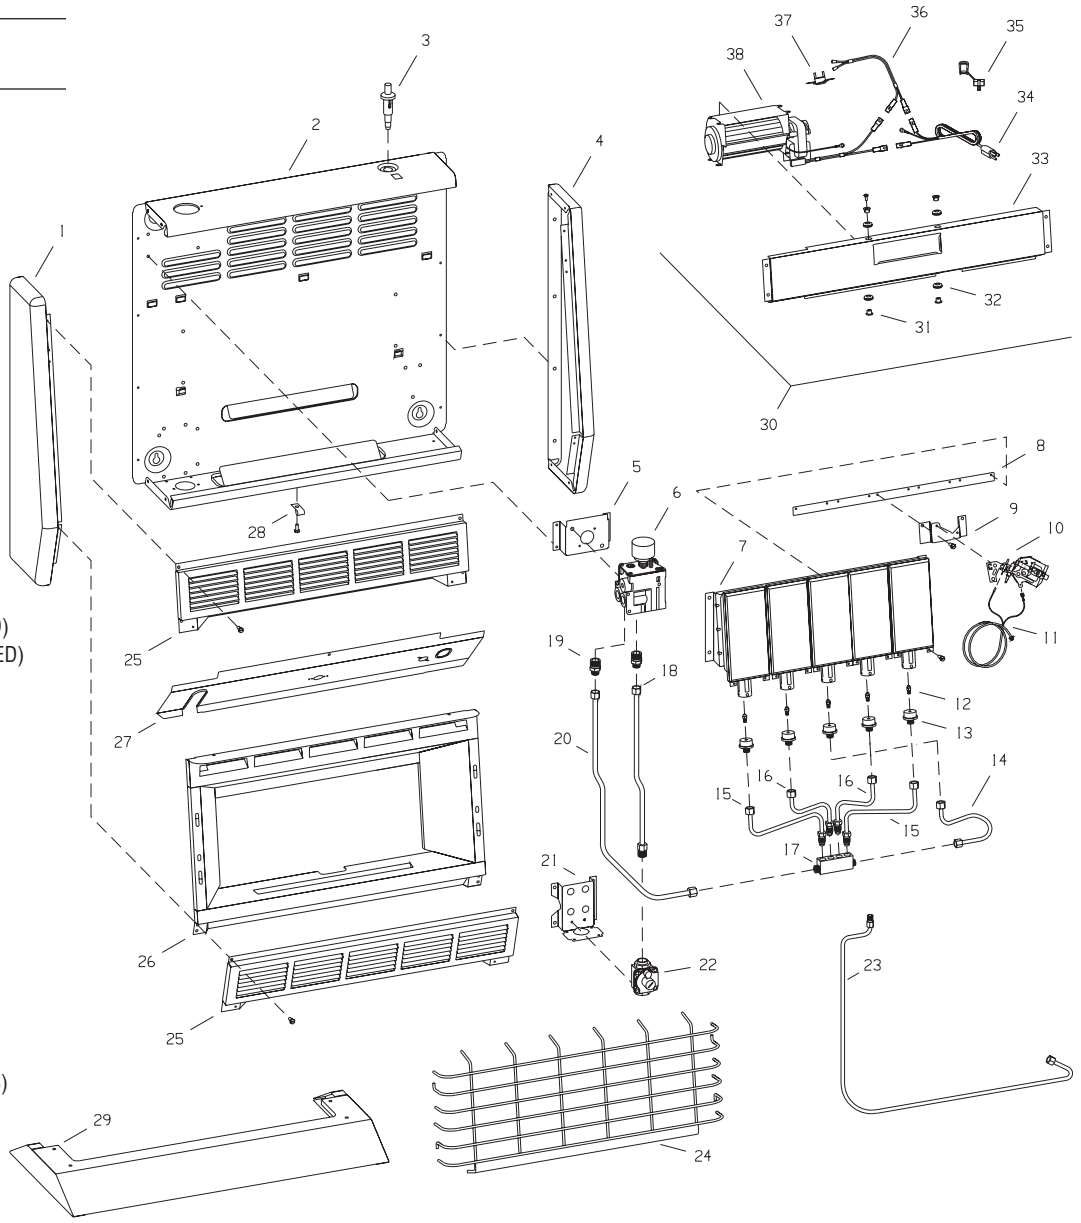

SR-30T-2

Click Part # To View Price & Availability

PARTS LIST

Index No.	Part No.	Description
1	13348	CASING SIDE ASSEMBLY - LEFT
2	SR041	CASING BACK
3	R2313	PIEZO IGNITOR
4	SR008	CASING SIDE ASSEMBLY - RIGHT
5	SR113	VALVE BRACKET
6	R6563	GAS VALVE -SIT
7	R2329	BURNER
8	SR114	ORIFICE SHIELD
9	SR032	PILOT BRACKET
10	R6307	PILOT ASSEMBLY (NAT ONLY)) (INCLUDES ITEMS 11 & 12)
10	R6308	PILOT ASSEMBLY (LPG ONLY)) (INCLUDES ITEMS 11 & 12)
11	R6310	PILOT THERMOCOUPLE
12	R6309	SPARK IGNITOR
13	R2315	MAIN BURNER ORIFICE - NAT (5 REQUIRED)
13	R2498	MAIN BURNER ORIFICE - LPG (5 REQUIRED)
14	R2314	ORIFICE HOLDER (5 REQUIRED)
15	SR203	TUBING - MANIFOLD TO BURNER THREE
16	SR202	TUBING - MANIFOLD TO BURNER ONE AND FIVE (2 REQUIRED)
17	SR201	TUBING - MANIFOLD TO BURNER TWO AND FOUR (2 REQUIRED)
18	R2333	MANIFOLD
19	12437	TUBING - INLET REGULATOR TO GAS VALVE
20	12440	TUBING - GAS VALVE TO MANIFOLD
21	10753	INLET REGULATOR BRACKET
22	R5097	INLET REGULATOR - NAT
22	R5098	INLET REGULATOR - LPG
23	SR054	TUBING - GAS VALVE TO PILOT
24	R2303	CHROME GRILL
25	SR017	CASING LOUVER (2 REQUIRED)
26	SR009	REFLECTOR ASSEMBLY
27	SR018	HEAT SHIELD
28	R1992	BULB CLIP
29	SR115	OPTIONAL SRS-30 FLOOR STAND KIT
30	SR116	OPTIONAL SRB-30T BLOWER KIT (INCLUDES 31 THROUGH 38)
31	R1454	BRASS BUSHING (4 REQUIRED)
32	R1499	RUBBER GROMMET (4 REQUIRED)
33	SR198	BLOWER PAN
34	R2099	CORD SET ASSEMBLY
35	R1468	BUSHING - HEYCO #SR5KN4
36	R2395	WIRE ASSEMBLY
37	R2503	FAN CONTROL
38	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	R2390	IGNITOR WIRE
NS	SR216	HARDWARE PACKAGE

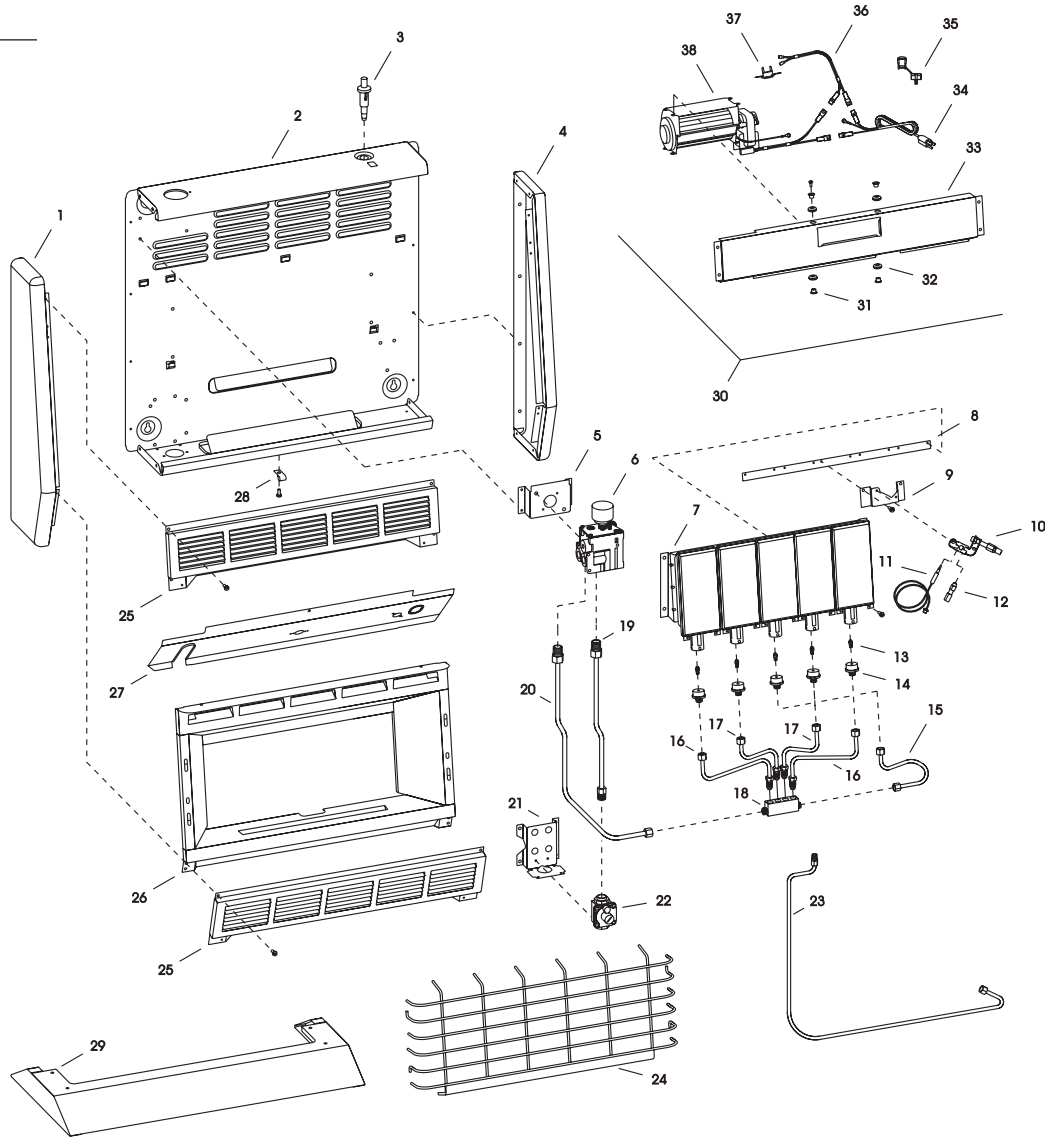

SR-30T-3

Click Part # To View
Price & Availability

PARTS LIST

Index No.	Part Number	Description
1	10812	CASING SIDE ASSEMBLY - LEFT (BF-10)
1	10811	CASING SIDE ASSEMBLY - LEFT (BF-20, BF-30)
2	SR090	CASING BACK ASSEMBLY (BF-10 BF-20)
2	SR041	CASING BACK ASSEMBLY(BF-30)
3	R2313	PIEZO IGNITOR
4	R5008	IGNITOR WIRE
5	SR008	CASING SIDE ASSEMBLY - RIGHT
6	R1992	BULB CLIP
7	SR076	CASING LOUVERTOP (BF-10 BF-20)
7	SR017	CASING LOUVERTOP (BF-30)
8	SR077	HEAT SHIELD (BF-10 BF-20)
8	SR018	HEAT SHIELD (BF-30)
9	SR075	REFLECTOR SHIELD REAR (BF-10 BF-20)
9	SR016	REFLECTOR SHIELD REAR (BF-30)
10	10420	REAR SHIELD (BF-10 BF-20)
10	10478	REAR SHIELD (BF-30)
11	10417	REFLECTOR ASSEMBLY (BF-10 BF-20)
11	10475	REFLECTOR ASSEMBLY (BF-30)
12	10467	CASING LOUVERBOTTOM ASSEMBLY (BF-10 BF-20)
12	10479	CASING LOUVERBOTTOM ASSEMBLY (BF-30)
13	R4979	CHROME GRILL (BF-10 BF-20)
13	R4980	CHROME GRILL (BF-30)
14	R4993	GLASS (BF-10 BF-20)
14	R4994	GLASS (BF-30)
15	R5100	INLET REGULATOR - NAT
15	R5098	INLET REGULATOR - LPG
16	10753	INLET REGULATOR BRACKET
17	10462	TUBING - GAS VALVE TO BURNER (BF-10 BF-20)
17	10484	TUBING - GAS VALVE TO BURNER (BF-30)
18	SR214	TUBING - INLET REGULATOR TO GAS VALVE
19	R2423	MALE CONNECTOR 5/16 TUBE X 3/8 NPT (2 REQUIRED)
20	R2351	GAS VALVE (BF-10 NAT AND LPG)
20	10537	GAS VALVE (BF-20 NAT AND BF-30 NAT)
20	10538	GAS VALVE (BF-20 LPG AND BF-30 LPG)
21	SR113	VALVE BRACKET

PARTS LIST

Index No.	Part Number	Description
22	10460	BURNER BRACKET - LEFT
23	10422	BURNER (BF-10 BF-20) (needs air shutter)
23	10480	BURNER (BF-30) (needs air shutter)
24	10424	AIR SHUTTER (BF-10 ONLY)
25	10461	BURNER BRACKET - RIGHT
26	P214	MAIN BURNER ORIFICE (BF-10 NAT)
26	P193	MAIN BURNER ORIFICE (BF-10 LPG)
26	P252	MAIN BURNER ORIFICE (BF-20 NAT)
26	P182	MAIN BURNER ORIFICE (BF-20 LPG)
26	P211	MAIN BURNER ORIFICE (BF-30 NAT)
26	P185	MAIN BURNER ORIFICE (BF-30 LPG)
27	P212	ORIFICE HOLDER
28	10424	AIR SHUTTER (BF-10 NAT & LPG) (BF-20 & BF-30 LPG ONLY)
29	10539	TUBING - GAS VALVE TO PILOT (BF-10 BF-20)
29	10540	TUBING - GAS VALVE TO PILOT (BF-30)
30	R5007	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 31)
30	R5001	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 31)
31	R5003	THERMOCOUPLE LEAD
32	SR120	OPTIONAL SRS-18 FLOOR STAND KIT (BF-10 BF-20)
32	SR115	OPTIONAL SRS-30 FLOOR STAND KIT (BF-30)
33	SR122	OPTIONAL SRB-18T BLOWER KIT (BF-10 BF-20) (INCLUDES 34 THROUGH 41)
33	SR116	OPTIONAL SRB-30T BLOWER KIT (BF-30) (INCLUDES 34 THROUGH 41)
34	R1454	BRASS BUSHING (4 REQUIRED)
35	R1499	RUBBER GROMMET (4 REQUIRED)
36	SR196	BLOWER PAN (BF-10 BF-20)
36	SR198	BLOWER PAN (BF-30)
37	VF068	CORD SET ASSEMBLY
38	R1468	BUSHING - HEYCO #SR5KN4
39	R2395	WIRE ASSEMBLY
40	R2503	FAN CONTROL
41	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	SR216	HARDWARE PACKAGE

BF-10-1, BF-20-1, BF-30-1

Click Part # To View Price & Availability

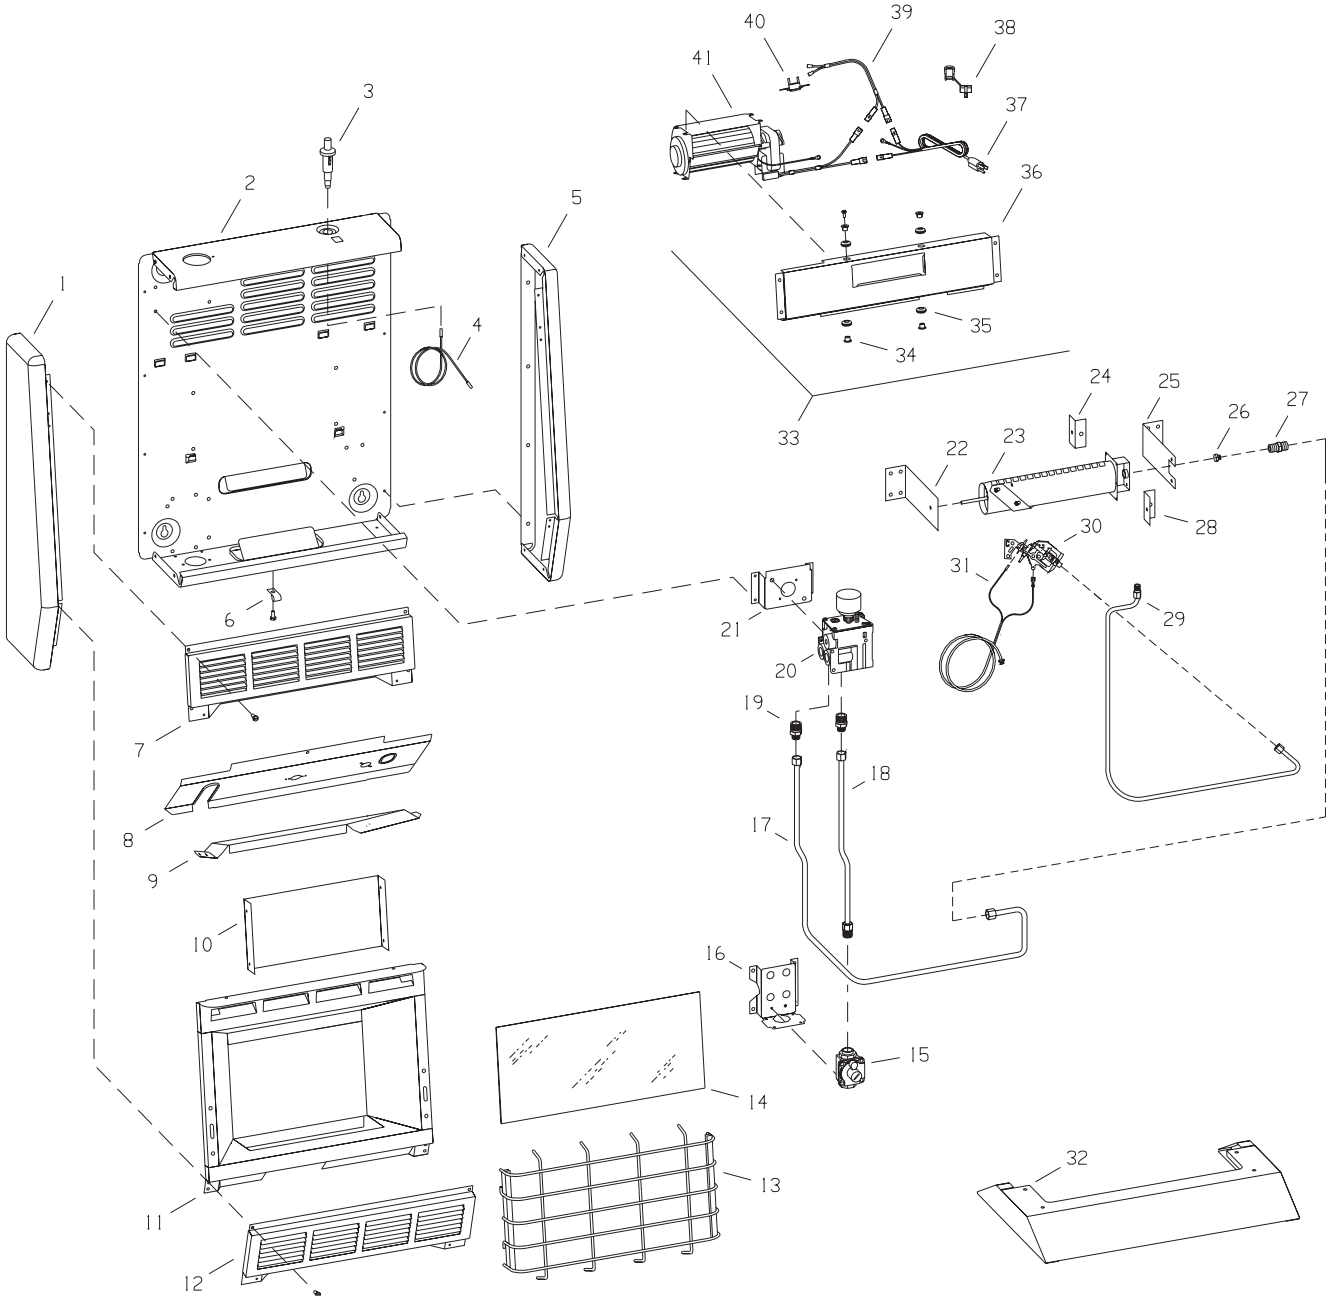

BF-10-1, BF-20-1, BF-30-1

PARTS LIST

Index No.	Part Number	Description
01	13347	CASING SIDE ASSEMBLY - LEFT (BF-10)
01	13348	CASING SIDE ASSEMBLY - LEFT (BF-20 BF-30)
02	SR090	CASING BACK (BF-10 BF-20)
02	SR041	CASING BACK (BF-30)
03	R2313	PIEZO IGNITOR
04	11231	FAN CONTROL BRACKET (BF-10)
05	SR008	CASING SIDE ASSEMBLY - RIGHT
06	R1992	BULB CLIP
07	SR076	CASING LOUVERTOP (BF-10 BF-20)
07	SR017	CASING LOUVERTOP (BF-30)
08	SR077	HEAT SHIELD (BF-10 BF-20)
08	SR018	HEAT SHIELD (BF-30)
09	SR075	REFLECTOR SHIELD REAR (BF-10 BF-20)
09	SR016	REFLECTOR SHIELD REAR (BF-30)
10	10420	REAR SHIELD (BF-10 BF-20)
10	10478	REAR SHIELD (BF-30)
11	10417	REFLECTOR ASSEMBLY (BF-10 BF-20)
11	10475	REFLECTOR ASSEMBLY (BF-30)
12	10467	CASING LOUVERBOTTOM ASSEMBLY (BF-10 BF-20)
12	10469	CASING LOUVERBOTTOM ASSEMBLY (BF-30)
13	R4979	CHROME GRILL (BF-10 BF-20)
13	R4980	CHROME GRILL (BF-30)
14	R4993	GLASS (BF-10 BF-20)
14	R4994	GLASS (BF-30)
15	R2784	INLET REGULATOR - NAT
15	R2480	INLET REGULATOR - LPG
16	10753	INLET REGULATOR BRACKET
17	12442	TUBING - GAS VALVE TO BURNER (BF-10 BF-20)
17	12443	TUBING - GAS VALVE TO BURNER (BF-30)
18	12437	TUBING - INLET REGULATOR TO GAS VALVE
19	R6563	GAS VALVE (NAT & LPG)
20	SR113	VALVE BRACKET
21	10460	BURNER BRACKET - LEFT
22	10422	BURNER (BF-10 BF-20)
22	10481	BURNER (BF-30)
23	10424	AIR SHUTTER (BF-10 ONLY)

PARTS LIST

Index No.	Part Number	Description
24	10461	BURNER BRACKET - RIGHT
25	P214	MAIN BURNER ORIFICE (BF-10 NAT)
25	P193	MAIN BURNER ORIFICE (BF-10 LPG)
25	P252	MAIN BURNER ORIFICE (BF-20 NAT)
25	P182	MAIN BURNER ORIFICE (BF-20 LPG)
25	P211	MAIN BURNER ORIFICE (BF-30 NAT)
25	P185	MAIN BURNER ORIFICE (BF-30 LPG)
26	P212	ORIFICE HOLDER
27	10424	AIR SHUTTER (BF-10 NAT & LPG) (BF-20 & BF-30 LPG ONLY)
28	10539	TUBING - GAS VALVE TO PILOT (BF-10 BF-20)
28	10540	TUBING - GAS VALVE TO PILOT (BF-30)
29	R6306	PILOT ASSEMBLY (NAT ONLY) (INCLUDES 30 & 31)
29	R6308	PILOT ASSEMBLY (LPG ONLY) (INCLUDES 30 & 31)
30	R6310	PILOT THERMOCOUPLE
31	R6309	SPARK IGNITOR
32	R2390	IGNITOR WIRE
33	SR120	OPTIONAL SRS-18 FLOOR STAND KIT (BF-10 BF-20)
33	SR115	OPTIONAL SRS-30 FLOOR STAND KIT (BF-30)
34	SR122	OPTIONAL SRB-18T BLOWER KIT (BF-10 BF-20) (INCLUDES 34 THROUGH 41)
34	SR116	OPTIONAL SRB-30T BLOWER KIT (BF-30) (INCLUDES 34 THROUGH 41)
35	R1454	BRASS BUSHING (4 REQUIRED)
36	R1499	RUBBER GROMMET (4 REQUIRED)
37	SR196	BLOWER PAN (BF-10 BF-20)
37	SR198	BLOWER PAN (BF-30)
38	R2099	CORD SET ASSEMBLY
39	R1468	BUSHING - HEYCO #SR5KN4
40	R2395	WIRE ASSEMBLY
41	R2503	FAN CONTROL
42	R2396	BLOWER (INCLUDES MOTOR, FAN, AND FAN HOUSING)
NS	SR219	BLOWER HARDWARE PACKAGE
NS	SR216	HARDWARE PACKAGE

BF-10-2, BF-20-2, BF-30-2

Click Part # To View Price & Availability

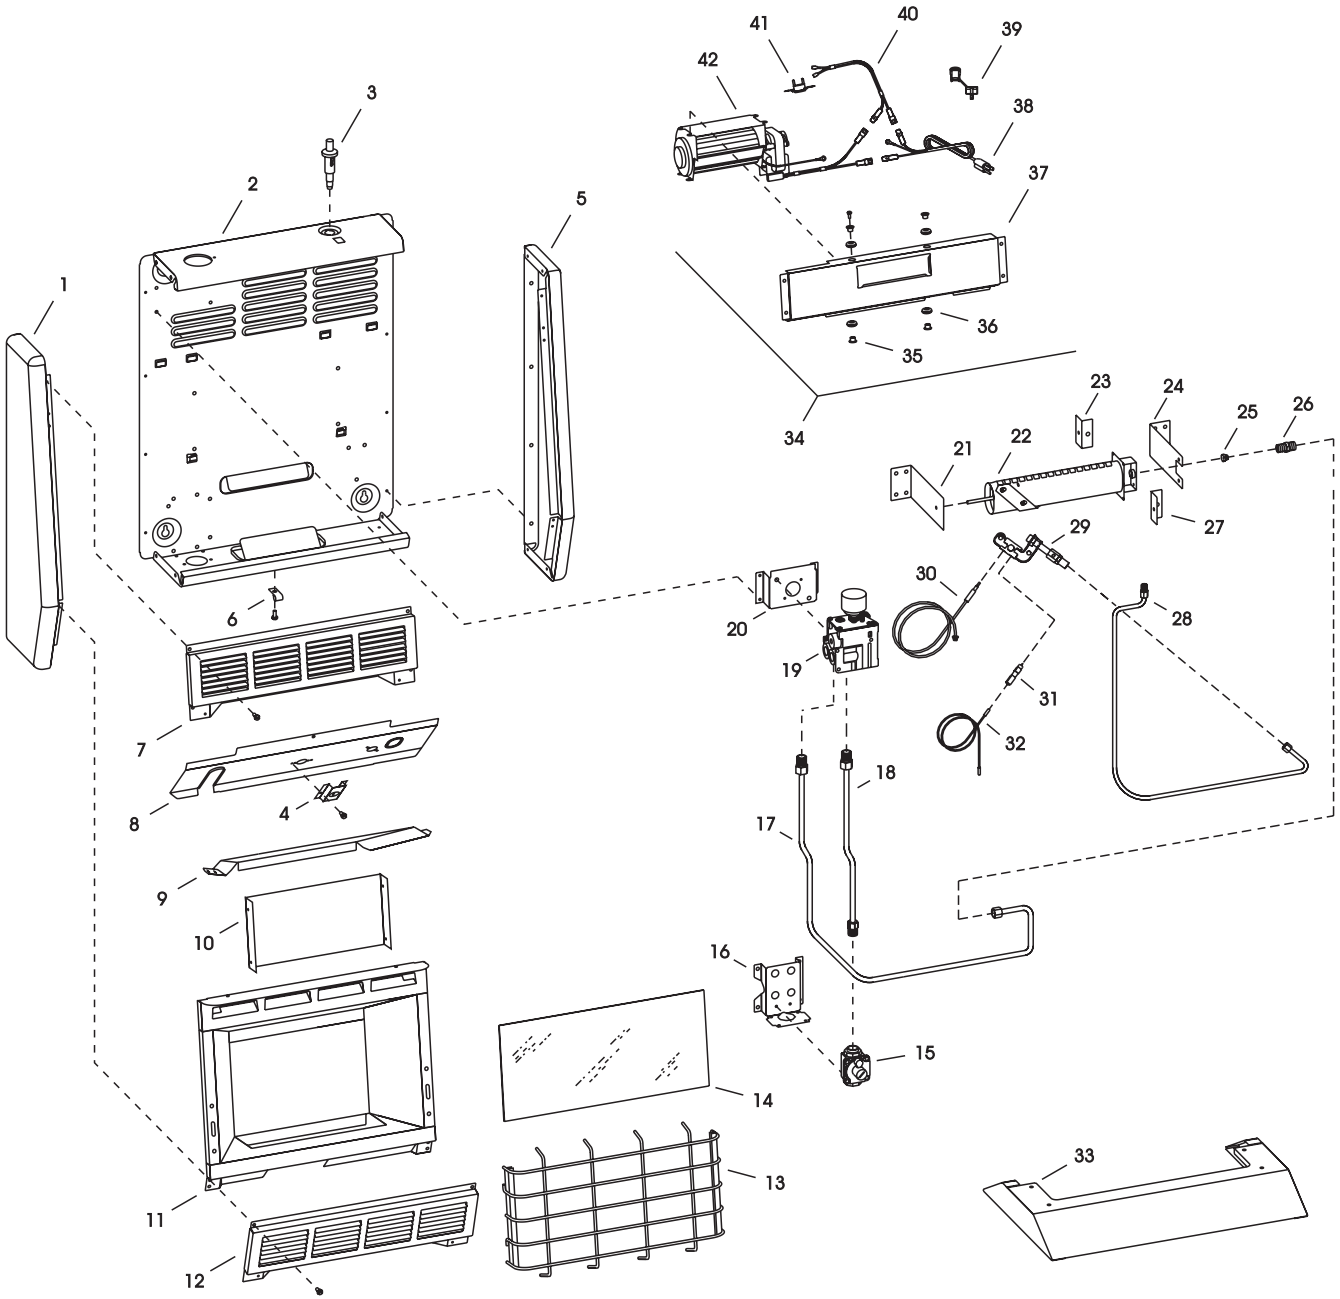

BF-10-2, BF-20-2, BF-30-2